

Making the railway system work better for society.

# Guide on the application of the common specifications of the register of Infrastructure

According to art 7 of Commission Implementing regulation (EU) 2019/777

of 16 May 2019 on the common specifications

for the register of railway infrastructure

Reference in ERA:	ERA/GUI/RINF/MA
Version in ERA:	1.6.0
Date:	17.06.2022
Document Type:	Application Guide
Document Status:	public

# 1. DOCUMENT INFORMATION

# 1.1. Amendment Record

Table 1: Status of the document.

Version Date	Author(s	Section Number	Modification Description	
Guide version 1.0 16/12/2014	ERA-IU	all	First publication This version is the basis of the iteration 2 of release 1.1 Modifications since 28/082014 are on the word version in track changes	
Guide Version 1.1 11/06/2015	ERA-IU		This version is the basis of the iteration 2 of release 1.1. available on ERA website since June 2015 Introduction of a new OP type (private siding), of a Set attribute. Introduction of a Set attribute to manage link between some parameters. The changes underlined in blue were accepted in the RINF joint group meeting of April 2015. and apply in the RINF CUI available for test in ERA environment and "production" from ERA website. The changes underlined in green were accepted in the RINF joint group meeting of April 2015. The dates of application are indicated in corresponding footnotes. The file with track changes since 16/12/2014 presenting the differences with version 1.0 is available on ERA extranet.	
Guide Version 1.2 7/04/2016	Guide Version 1.2 7/04/2016  ERA-IU  D  T  ("I)  Guide Version 1.2.1 19/01/2017  ERA-IU  N  C  U  T  U  T  C  C  C  C  C  C  C  C  C  C  C  C		This version is the basis of the iteration 2 of release 1.1.1 available on ERA website since end of March 2016. Cleaning up of previous modifications left visible. Deletion or Update of some parameters format. The list of modifications to the previous version of the guide is available in 4.4 "List of amendments".	
			This version of the guide corresponds to the RINF currently available (RINF CUI File version 1.3)  Correction of Inconsistences with the CUI in production Cleaning up when relevant Modification of format of parameter 1.1.1.3.7.11 "SOL Track Parameter CTD_MinAxleLoad" Update using the new format The list of modifications to the previous version of the guide is available in 4.4 "List of amendments".	
Guide Version 1.2.2 ERA-IU 20/06/2018		ERA-IU  This version of the guide corresponds to the RINF currently available (RI CUI File version 1.3.4)  The list of modifications to the previous version of the guide is available in a "List of amendments".		
Draft Guide Version 1.4 19/03/2019	ERA AAM		Update according draft new RINF regulation (19/03/2019) To support the feedback of users before official publication	
Draft Guide Version 1.4.2 04/04/2019	ERA AAM		Update according to comments received on Draft Guide Version (04/04/2019) (listed in 5.6 / table 9)	

Table 1: Status of the document.

Version Date	Author(s )	Section Number	Modification Description	
Draft Guide Version 1.4.3 21/06/2019	ERA AAM		Update according to comments received on previous Draft Guide Versions (listed in 5.6 / table 9)	
Guide Version 1.5 29/07/2019	ERA AAM		Update, main modifications listed in 5.7List of amendments to Guide Version 1.4.3 (table 10)	
Guide Version 1.6	ERA AAM		<del>Update</del>	
Guide Version 1.5.2.1 17/02/2020	ERA AAM		Modifications listed in 5.8, Table 12.	
Guide Version 1.5.2.2 30/06/2020	ERA AAM		Modifications listed in 5.8, Table 13.	
Guide Version 1.5.2.3 15/10/2020	ERA AAM		Modifications listed in 5.8, Table 14.	
Guide Version 1.5.2.4 30/03/2021	ERA EXO		Modifications listed in 5.8, Table 15.	
Guide Version 1.5.2.5 17/06/2021	ERA EXO		Modifications listed in 5.8, Table 16.	
Guide Version 1.5.2.6 25/10/2021	ERA EXO		Modifications listed in 5.8, Table 17.	
Guide Version 1.6.0 17/06/2022	ERA EXO		Update, modifications listed in 5.9, Table 18.	

#### **Table of contents** 1.2.

1.	DOCUMENT INFORMATION	2
	Amendment Record	
1.2.	Table of contents	3
	List of figures	
	List of tables	
	SCOPE OF THIS GUIDE	
1.1	Scope	6
1.2	Content of the guide	6
1.3	Reference documents	

1.4	Definitions of expressions, abbreviations and acronyms	13
1.4.1	Specific definitions	13
1.4.2	Abbreviations and acronyms	15
2	CLARIFICATIONS ON THE RINF	18
2.1	Foreword	18
2.2	Scope of the RINF	18
2.2.1	Geographical scope	18
2.2.2	The technical scope	18
2.2.3	Purpose	18
2.3	Description of features of the RINF	19
2.3.1	Levels of the network description	19
2.3.2	The Operational Point	20
2.3.3	The Section of line	23
2.3.4	Elements of an operational point	24
2.3.5	Elements of a section of line	26
2.3.6	The Location Point	
2.3.7	General information about parameters of RINF	27
2.3.8	Objects for separate dating (future validity)	28
2.4	Characteristics of RINF parameters	28
2.5	Parameter groups hierarchy	29
2.6	Relations between parameters	36
2.7	Governance process of Table 5	38
3	PRINCIPAL RULES FOR THE RINF APPLICATION	39
3.1	Main principles	39
3.2	Governance	40
3.2.1	General	40
3.2.2	RINF application	40
3.2.2.1	Team organisation	41
3.2.2.2	RINF application Maintenance	41
3.2.3	Registers at Member State level	
3.2.4	NREs and Agency responsibilities Communication between RINF application and NREs	42
3.3	System Architecture	43
3.4	RINF deliverables	44
3.5	Data Upload & Validation & import Module (Data Management)	45
3.5.1	RINF Data Life Cycle	
3.5.2	Validation	
3.5.2.1	Restrictions	46
3.5.3	Preproduction environment	46
4	STRATEGY OF UPGRADING THE RINF APPLICATION	
4.1	Article 2.3.of the new RINF Regulation:	
4.2	Article 6 of the new RINF Regulation / Further developments	
5	APPENDICES	
5.1	List of parameters: table 5	

5.2	Lists of Borders points and of Domestic Border points	186
5.3	Principles defining the references of documents uploaded by IMs	203
5.4	List of IM's codes (the code will be manage via the new list of "organisations codes"	
	according the EVR regulation)	204
5.5	List of amendments of the guide (2013 RINF Decision): table 8	204
5.6	List of admendments of Draft Guide Version 1.4: table 9	
5.7	List of amendments of to Guide Version 1.4.3: table 10	
5.8	List of amendments of to Guide Version 1.5 (tables 11 - 17)	
	List of amendments of to Guide Version 1.6	
5.9	List of amendments of to Guide Version 1.6	2159
1.3.	List of figures	
_	- Levels of description of the network (adapted from UIC RailTopoModel Railway Network Description)	
	- International macro railway network with SoL lengths (D. KES)	
	- Section of Line (SoL) between two Operational Points (OP) (provided by D. KES) - RINF System	
rig. +	Tarvi Oystom	
1.4.	List of tables	
	: Status of the document	
	2: Reference documents	
	3: Definitions	
	la: Abbreviations and acronyms 5: Characteristics of RINF parameters	
	S : List of border points	
	: List of domestic border points	
Table 8	3: list of amendment to the previous version	204
	): list of admendment to Draft Guide Version 1.4	
	C: list of amendments to Draft Guide Version 1.4.3	
	1: list of amendments to Draft Guide Version 1.5 Error! Bookmark no	
	2: list of amendments to Draft Guide Version 1.5.2.1 <b>Error! Bookmark not</b>	
	3: list of amendments to Draft Guide Version 1.5.2.2 <b>Error! Bookmark not</b>	
	1: list of amendments to Draft Guide Version 1.5.2.3 Error! Bookmark not	
	5: list of amendments to Draft Guide Version 1.5.2.4 Error! Bookmark not	
Table 16	5: list of amendments to Draft Guide Version 1.5.2.5 Error! Bookmark not	defined.9

#### 1 SCOPE OF THIS GUIDE

## 1.1 Scope

This document provides information on the application of the common specifications for the register of railway infrastructure as referred to in Article 49 of Directive (EU) 2016/797 of the Parliament and of the Council on the interoperability of the rail system within the European Union (RINF) therefore referred to as the Interoperability Directive.

This document does not introduce any new legally binding advice. It serves as a clarification tool for legal documents issued for RINF without however dictating in any manner compulsory procedures to be followed and without establishing any legally binding practice.

The guide needs to be read and used only in conjunction with the "RINF Regulation" [36] published on 27 May 2019. It is intended to facilitate its application but it does not substitute it. However all information and advice included in the guide are in line with the intentions of the authors of the system and their understanding of the whole concept.

The guide has been prepared by the European Union Agency for Railways (ERA) with the support of railway sector organisations and National Safety Authority experts.

The guide is publicly available and it will be regularly updated to reflect progress related to system evolution and to changes of the TSIs and European standards. The reader should refer to the website of the ERA for information about its latest available edition.

## 1.2 Content of the guide

This Guide is the basic document for all participants of the process of building RINF in European scale: for National Registration Entities (NREs) to build registers and collect data of their respective member states' (MS) network.

The guide delivers the extended definitions of all the objects and parameters of the RINF. It provides guidance on the most common situations and solutions advised for modelling the railway network.

Examples and variety of possible solutions should support and unify constructions of registers of different MS of the EU.

This guide also delivers wide description of parameters, including their format, utility and explanation.

The instructions for use of the RINF via access to RINF application will be published as deliverable of RINF application – they are not included in this guide.

# 1.3 Reference documents

Table 2: Reference documents

Ref.	Document Reference	Official Journal	Last Modification	Version/ Comment	Acronym
[1]	Commission implementing Decision 2011/633/EU of 15 September 2011 on the common specifications of the register of railway infrastructure	L 256, 1.10.2011	15.09.2011	repealed	
[2]	Commission implementing Regulation (EU) 2019/773 of 16 May 2019 on the technical specification for interoperability relating to the operation and traffic management subsystem of the rail system within the European Union and repealing Decision 2012/757/EU	LI 139/5	27.5.2019		OPE TSI
[3]	Directive (EU) 2016/798 of the European Parliament and of the Council of 11 May 2016 on railway safety (recast)	L 138/102	26.5.2016		
[4]	Directive 2016/797 of the European Parliament and of the Council of 11 May 2016 on the interoperability of the rail system within the European Union (recast)	L 138/44 26.5.2016			
[5]	Commission implementing Regulation (EU) 2019/776 of 16 May 2019 amending Commission Regulations (EU) No 321/2013, (EU) No 1299/2014, (EU) No 1301/2014, (EU) No 1302/2014, (EU) No 1303/2014 and (EU) 2016/919; Commission implementing Regulation (EU) 2020/387 of 9 March 2020 amending Regulations (EU) No 321/2013, (EU) No 1302/2014 and (EU) 2016/919 as regards the extension of the area of use and transition phases Commission Implementing Decision 2011/665/EU as regards the alignment with Directive (EU) 2016/797 of the European Parliament and of the Council and the implementation of specific objectives set out in Commission Delegated Decision (EU) 2017/1474	L 139I/108, 27.05.2019 L 73/6	27/05/2019 10/03/2020x		CCS TSI

Table 2: Reference documents

Ref.	Document Reference	Official Journal	Last Modification	Version/ Comment	Acronym
[6]	Regulation (EU) No 913/2010 of the European Parliament and the Council of 22 September 2010 concerning a European rail network for competitive freight.	OJ L 276, 20.10.2010	11.12.2013		
[7]	Document 'Interfaces between CCS track-side and other subsystems' referenced as Index 77 in the list of mandatory specifications (Annex A) of the revised CCS TSI for HS and CR adopted by a Commission Implementing Decision (EU) 2019/776	27/05/2019	20/09/2018	ERA/ERTMS/ 033281 V4.0	
[8]	List of CSS Class B systems	27/05/2019	11/06/2019	ERA_TD_201 1-11	
[9]	Decision 2008/232/EC TSI relating to the Rolling Stock subsystem of the trans-European HS rail system	L 84, 26.03.2008	23.07.2012	Commission Decisions 2008/232/EC and 2011/291/EU are repealed	HS RS TSI
[10]	Decision 2011/229/EU TSI "Rolling stock – noise"	L 99, 13.02.2011	23.07.2012	repealed	
[11]	Commission Regulation (EU) No. 321/2013 of March 2013 TSI Freight Wagons	L 104, 12.04.2013		Draft Regulation amending Regulation (EU) No 321/2013 was approved by RISC in October 2014	WAG TSI
[12]	Decision 2011/275/EU TSI relating to the infrastructure subsystem of the trans-European conventional rail system	14.05.2011		Decisions 2008/217/EC and 2011/275/EU are repealed	CR INF TSI

Table 2: Reference documents

Ref.	Document Reference	Official Journal	Last Modification	Version/ Comment	Acronym
				with effect from 1 January 2015.	
[13]	Decision 2008/217/EC TSI relating to the Infrastructure subsystem of the trans-European HS rail system	L 77, 19.03.2008		Decisions 2008/217/EC and 2011/275/EU are repealed with effect from 1 January 2015.	HS INF TSI
[14]	Regulation 62/2006/EC TSI "Telematics Applications for Freight"	L 13, 18.01.2006	Regulation 280/2013 22.03.2013	repealed	
[15]	Strategic European deployment plan for the European-wide implementation of the TSI Telematics Applications for Freight (TAF TSI)	NA	published 16/02/2010	Version 1.0	
[16]	Decision 2011/291/EU TSI LOC&PAS of the trans- European conventional rail system	L139, 26.05.2011	23.07.2012	Commission Decisions 2008/232/EC and 2011/291/EU are repealed	CR LOC§PAS TSI
[17]	Decision 2008/284/EC TSI Energy trans- European HS rail system	L 104, 14.04.2008	Decision 2012/464/EU	Decisions 2008/284/EC and 2011/274/EU are repealed with effect from 1 January 2015.	HS ENE TSI
[18]	Commission Regulation (EU) No 454/2011 of 5 May 2011 on the technical specification for interoperability relating to the subsystem	L 123, 12.05.2011	L 194, 21.07.2012		TAP TSI

# Table 2: Reference documents

Ref.	Document Reference	Official Journal	Last Modification	Version/ Comment	Acronym
	'telematics applications for passenger services' of the trans-European rail system.				
[19]	Decision 2008/163/EC TSI SRT trans-European HS and conv. rail system	L 64, 07.03.2008		Repealed with effect from 1 January 2015.	
[20]	Decision 2008/164/EC TSI PRM trans-European HS and conv. rail system	L 64, 07.03.2008			PRM TSI
[21]	Framework Mandate to the European Railway Agency for the Performance of Certain Activities under Directives 96/48/EC and 2001/16/EC				
[22]	Commission Recommendation 2014/881/EU of 18 November 2014 on the procedure for demonstrating the level of compliance of existing railway lines with the basic parameters of the technical specifications for interoperability	L 356 12.12.2014			
[23]	ERA Document about practical arrangements for transmitting interoperability document (ERA/INF/10-2009/INT)	NA	27.08.2009	Version 0.1	
[24]	Regulation (EU) No 1315/2013 of the European Parliament and of the Council of 11 December 2013 on Union guidelines for the development of the trans-European transport network and repealing Decision No 661/2010/EU	L 348/1, 20.12.2013			
[25]	RINF XML Data Validation Guide			ERA Document	
[26]	Commission Implementing Decision 2014/880/EU of 26 November 2014 on the common specifications of the register of railway infrastructure and repealing Implementing Decision 2011/633/EU	L 356 12.12.2014			RINF Decision

Table 2: Reference documents

		F		F	
Ref.	Document Reference	Official Journal	Last Modification	Version/ Comment	Acronym
[27]	Commission Regulation (EU) No 1299/2014 of 18 November 2014 on the technical specifications for interoperability relating to the 'infrastructure' subsystem of the rail system in the European Union	L 356 12.12.2014			INF TSI
[28]	Commission Regulation (EU) No 1301/2014 of 18 November 2014 on the technical specifications for interoperability relating to the 'energy' subsystem of the rail system in the Union	L 356 12.12.2014			ENE TSI
[29]	Commission Regulation (EU) No 1300/2014 of 18 November 2014 on the technical specifications for interoperability relating to accessibility of the Union's rail system for persons with disabilities and persons with reduced mobility	L 356 12.12.2014			PRM TSI
[30]	Commission Regulation (EU) No 1302/2014 of 18 November 2014 concerning a technical specification for interoperability relating to the 'rolling stock — locomotives and passenger rolling stock' subsystem of the rail system in the European Union	L 356 12.12.2014			LOC§PAS TSI
[31]	Commission Regulation (EU) No 1303/2014 of 18 November 2014 concerning the technical specification for interoperability relating to 'safety in railway tunnels' of the rail system of the European Union	L 356 12.12.2014			SRT TSI
[32]	Draft Commission Decision amending Commission Decision 2012/88/EU on the technical specification for interoperability relating to the control command and signalling subsystems of the trans-European rail system			pending publication	
[33]	Commission Regulation (EU) No 1305/2014 of 11 December 2014 on the technical specification for interoperability relating to the telematics applications for freight subsystem of the rail	L 356 12.12.2014			TSI TAF

# Table 2: Reference documents

Ref.	Document Reference	Official Journal	Last Modification	Version/ Comment	Acronym
	system in the European Union and repealing the Regulation (EC) No 62/2006				
[34]	Directive 2012/34/EU of the European Parliament and of the Council of 21 November 2014 establishing a single European railway area	L 343/32, 14.12.2012			
[35]	Regulation n° 1304/2014 of 26 November 2014 on the technical specification for interoperability relating to the subsystem 'rolling stock — noise' amending Decision 2008/232/EC and repealing Decision 2011/229/EU amended by Commission Regulation (EU) 2019/774 of 16 May 2019	L 356 12.12.2014			TSI NOI
[36]	COMMISSION IMPLEMENTING REGULATION (EU) 2019/777 of 16 May 2019 on the common specifications for the register of railway infrastructure and repealing Implementing Decision 2014/880/EU	LI 139/312 27.5.2019			RINF REG

# 1.4 Definitions of expressions, abbreviations and acronyms

# 1.4.1 Specific definitions

This section provides general definitions. The following table provides a list of terms used in this guide and their definitions. Mainly these terms have been already defined in the relevant legal documents; in these cases the source of the definition is indicated.

**Table 3: Definitions** 

Term	Definition/ Source
Acts issued by the Agency	According to Article 2(a) of Regulation 881/2004/EC and its following amendment, the Agency is entitled to address recommendations to the Commission, concerning issues related to safety, interoperability, national rules classification, maintenance of vehicles, staff qualification and public registers. Furthermore, Article 2(b) of the same Regulation allows the Agency to issue also technical opinions to the Commission- following its request- relating to national rules, quality of the work of Notified Bodies and any project implying modifications in the Interoperability community rail system and involving EU funds
Basic parameter	Any regulatory, technical or operational condition which is critical to interoperability and is specified in the relevant TSIs. (Article 2 (k) of Directive 2008/57/EC)
Conformity	According to Article R1 (12), Annex 1 of Decision 768/2008/EC it corresponds to the fulfilment of specified requirements by a product, process, service, system, person or body.
Conformity assessment	the process demonstrating whether specified requirements relating to a product, process, service, system, person or body have been fulfilled. (Article R1(12), Annex 1 of Decision 768/2008/EC)
Existing rail system	the structure composed of lines and fixed installations of the existing, rail system plus the vehicles of all categories and origin travelling on that infrastructure. (Article 2 (o) of Directive 2008/57/EC)
Harmonised standard	[It] "means any European standard adopted by one of the European standardisation bodies listed in Annex I to Directive 98/34/EC of the European Parliament and of the Council of 22 June 1998 laying down a procedure for the provision of information in the field of technical standards and regulations and of the rules on Information Society services in connection with a mandate by the Commission drawn up in accordance with the procedure referred to in Article 6(3) of that Directive, which, by itself or together with other standards, provides a solution as regards compliance with a legal provision. (Article 2 (u) of Directive 2008/57/EC)
Infrastructure Manager	any body or undertaking that is responsible in particular for establishing and maintaining railway infrastructure, or part thereof, as defined in article 3 of Directive 91/440/EEC, which may also include the management of infrastructure control and safety systems. The functions of the infrastructure manager on a network or part of a network may be allocated to different bodies or undertakings. (Article 3 (b) of Directive 2004/49/EC)

Table 3: Definitions

Term	Definition/ Source
National Registration Entity	Entity in charge of setting up and maintaining its own register. Nominated by each Member State
National Safety Authority	National body entrusted with the tasks regarding railway safety in accordance with Directive 2004/49/EC. (Article 3(g) of Directive 2004/49/EC)
Notified body	the bod[y] which [is] responsible for assessing the conformity or suitability for use of the interoperability constituents or for appraising the "EC" procedure for verification of the subsystems. (Article 2 (j) of Directive 2008/57/EC)
Open point	According to Article 5(6) of Directive 2008/57/EC, when "certain technical aspects corresponding to the essential requirements cannot be explicitly covered in a TSI, they shall be clearly identified in an annex to the TSI as open points"
Placing in service	all the operations by which a subsystem or a vehicle is put into its design operating state.  (Article 2 (q) of Directive 2008/57/EC)
Railway Undertaking	any public or private undertaking, the activity of which is to provide transport of goods and/or passengers by rail on the basis that the undertaking must ensure traction; this also includes undertakings which provide traction only. (Article 3 (c) of Directive 2004/49/EC)
Register of Infrastructure (RINF)	The Register of Infrastructure referred to in Article 35 of Directive 2008/57/EC indicates the main features of fixed installations, covered by the subsystems: infrastructure, energy and parts of control-command and signalling. It publishes performance and technical characteristics mainly related to interfaces with rolling stock and operation.
Specific case	any part of the rail system which needs special provisions in the TSIs, either temporary or definitive, because of geographical, topographical or urban environment constraints or those affecting compatibility with the existing system. This may include, in particular, railway lines and networks isolated from the rest of the Community, the loading gauge, the track gauge or space between the tracks and vehicles strictly intended for local, regional or historical use, as well as vehicles originating from or destined for third countries. (Article 2 (I) of Directive 2008/57/EC)

# 1.4.2 Abbreviations and acronyms

Table 4a: Abbreviations and acronyms

ABBREVIATION / ACRONYMS	FULL TEXT
AC	Alternating Current
ADD	Automatic Dropping Device
CCS	Command Control and Signaling
CEN	European Committee for Standardisation (Comité Européen de Normalisation
CENELEC	European Committee for ELECtrotechnical Standardisation (Comité Européen de
	Normalisation ELECtrotechnique)
CR	Conventional Rail
CUI	Common User Interface
DC	Direct Current
DeBo	Designated Body
EC	European Commission
EDOR	ERTMS Data Only Radio (modem)
EEA	European Economic Area
EEC	European Economic Community
EIRENE	European Integrated Radio Enhanced NEtwork
EN	European standard
ENE	Energy
ERA	European Railway Agency also called "the Agency"
ERADIS	European Railway Agency Database of Interoperability and Safety
ERATV	European Register of Authorised Types of Vehicles
ERTMS	European Rail Traffic Management System
ETCS	European Train Control System
ETS	European Telecommunications Standard
EU	European Union
FRS	Functional Requirements Specification of ERTMS
GPRS	General Package Radio Service
GPS	Global Positioning System
GSM-R	Global System for Mobile communications- Railway
GUI	Graphical User Interface
HS	High Speed
IC INA	Interoperability Constituent
IM	Infrastructure Manager Infrastructure
ISO	International Organisation for Standardisation
IU	Interoperability Unit of ERA
LP	Location Point
MS	EU or EEA Member State
NAP	Normaal Amsterdams Peil
NID_XUSER	Identity of User Design Authority
NoBo	Notified Body
NB-Rail	Coordination group of Notified Bodies

Table 4a: Abbreviations and acronyms

ABBREVIATION / ACRONYMS	FULL TEXT
NRE	National Registration Entity
NSA	National Safety Authority
NYA	Not Yet Available
OC	Organisation Code
OCL	Overhead Contact Lines
OP	Operational Point
PRM	Persons with Reduced Mobility
PLC	Primary Location Code
RA	Route Availability
RBC	Radio Block Center
REC	Railway Emergency Call
RFC	Railway Freight Corridor
RINF	Register of Infrastructure
RST	Rolling Stock
RU	Railway Undertaking
SEDP	Strategic European Deployment Plan (TAF TSI)
SoL	Section of Line
SRS	System Requirements Specifications of ERTMS
SRT	Safety in Railway Tunnels
TAF	Telematic Application for freight
TAP	Telematic Application for passengers
TEN-T	Trans-European Transport Network
TSI	Technical Specifications for Interoperability
UIC	International Union of Railways (Union Internationale des Chemins de fer)
WG	Working Group
WP	Working Party
XML	Extensible Markup Language
XSD	XML Schema Definition

Table 4b: Abbreviations and acronyms used in XML tags

ABBREVIATION / ACRONYMS	FULL TEXT
СВР	Control-Command Brake Parameters
CCD	Control-Command Complaint Detection
CDE	Control-Command Declaration
CEI	Control-Command Electromagnetic Interferences
CLD	Control-Command Line-Side Degraded
СОР	Control-Command Other Parameters
СРЕ	Control-Command Protection ETCS
СРО	Control-Command Protection Other
CRG	Control-Command Radio GSMR

ABBREVIATION / ACRONYMS	FULL TEXT
CRS	Control-Command Radio System Other
CTD	Control-Command Train Detection
CTS	Control-Command Transition System
ECS	Energy Contact System
EDE	Energy Declaration
EOS	Energy OCL Separation
EPA	Energy Pantograph
IDE	Infrastructure Declaration
HIS	Infrastructure Health and Safety
ILL	Infrastructure Line Layout
ILR	Infrastructure Load Resistance
IPL	Infrastructure Platform
IPP	Infrastructure Performance Parameters
ISC	Infrastructure Switches and Crossings
ITP	Infrastructure Track Parameters
ITS	Infrastructure Train Servicing
ITU	Infrastructure Tunnel

#### 2 CLARIFICATIONS ON THE RINF

#### 2.1 Foreword

The implementation of the register of infrastructure requires:

- A common knowledge and understanding of the concepts to be used for the description of each concerned network,
- A shared set of parameters related to all the fundamental features of the railway networks. The specification of parameters allows them to be made available through the RINF application.

It can be carried out by successive steps depending on the strategy adopted by each Member State that has to be notified to the Commission. In addition, by providing its data in stages, each infrastructure manager (IM) can increase the content and the level of description of a given network. After each update of data describing its network by a NRE, the RINF application publishes the complete set of data received from MS. Partial updates are not possible. Whenever a Member State wants to update / improve the description of its network, it must upload to the RINF application a complete set of data which will replace the previous one.

# 2.2 Scope of the RINF

## 2.2.1 Geographical scope

The geographical scope for RINF corresponds to the scope of the Interoperability directive (Directive (EU) 2016/797) as implemented by each Member State.

In this context, Member States may have excluded "privately owned railway infrastructure, including sidings, used by its owner or by an operator for the purpose of their respective freight activities or for the transport of persons for non-commercial purposes, and vehicles used exclusively on such infrastructure; (art 1.4.a). See annex 1 of the IOD

## 2.2.2 The technical scope

RINF 'specifications concern data about the following structural subsystems of the Union rail system:

- (a) the infrastructure subsystem,
- (b) the energy subsystem,
- (c) the trackside control-command and signalling subsystem.

## 2.2.3 Purpose

The type of data describing the infrastructure is the functional purpose of the RINF as defined in art 2.2 of the Annex of the RINF Regulation.

a) The value of the parameters to be used to check the technical compatibility between vehicle and route are corresponding to "design" values. These values need to be up to date to allow a RU to:

- Develop technical specifications for vehicle design; for new vehicles;
- Identifying the vehicles compatible with the planned route/path and its operational conditions;
- Provide relevant data to identify infrastructure characteristics of the intended area of use and facilitate the design of rolling stock and the feasibility check of train services.
- b) The type of data intended to facilitate the verification of the technical compatibility between a fixed subsystem and the network into which it is incorporated and to monitor the progress of interoperability of railway fixed installations.

These values need to be up to date to allow a RU to plan the train composition and to perform the route compatibility check on the attributed route/path in the weeks before starting the service operation.

## 2.3 Description of features of the RINF

The main features supporting the RINF model are described in the RINF regulation [36]. Their definitions are reproduced below:

- (a) An 'operational point' (OP) means any location for train service operations, where train services may begin and end or change route, and where passenger or freight services may be provided; 'operational point' means also any location at boundaries between Member States or infrastructure managers;
- (b) 'Section of line' (SoL) means the part of line between adjacent operational points and may consist of several tracks;
- (c) 'Running track' means any track used for train service movements; passing loops and meeting loops on plain line or track connections only required for train operation are not published;
- (d) 'Siding' means any track within an operational point, which is not used for operational routing of a train.
- (e) 'Location point' (LP) is a specific point on a track of a SoL (not permitted for OP) where value of a parameter changes. The use of LP is non mandatory.

## 2.3.1 Levels of the network description

The railway network is presented for RINF purpose as a number of operational points (OPs) connected with sections of line (SoLs). A line can be described in different levels of details. Fig. 1 below shows several ways of representation from a detailed to a simple one. A National Registration Entity can choose what level to populate from simple to detailed level. The visual tool of the RINF application only presents OPs and SoLs of a line updated by an NRE. There is no link, except the number of OP and SoL, between the initial description of a line by NRE and the final representation allowed by RINF application where the successive levels of zoom are organised according to categories of lines and do not provide supplementary details regarding the description of a lines and its elements.

Within OP there are two types of tracks: running tracks and sidings (see explanations about differences in the following sections).

Installations located along the tracks are attached to the tracks. Parameters related to subsystems INF, ENE, CCS within a SoL or related to subsystem INF within an OP are provided for each "track" element of the SoL or OP ("running track" and/or "siding"). Data provided for each parameter are valid for the whole element described:

- from the start OP to the end OP of a SoL for a "running track"; except if "location point" is used;
- inside the OP for a "siding".

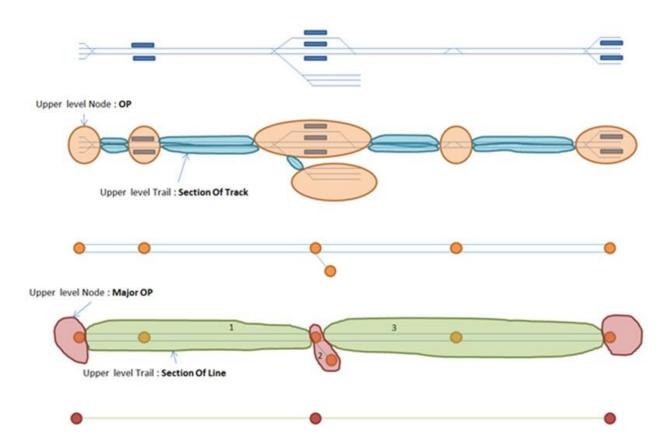


Fig. 1 – Levels of description of the network (adapted from UIC RailTopoModel Railway Network Description)

## 2.3.2 The Operational Point

Operational Point is understood as a point without dimensions, attributed with generic parameters and with objects described by their own parameters. OP is the primary element of the network and selection of OPs is the first task for IMs in procedure of presenting its network. The OP is independent from the notion of line. An OP is not described by belonging to one or several lines. Only SoLs are linked to lines.

An OP will be presented by so called 'centre point' on a global map. This centre point is defined by relevant IM (note that it is not always in the centre of the OP area) and determines the

geographical coordinates (and the kilometre from the start of the railway line) of OP to be inserted to generic data about location of the OP.

An OP is allowed to have no track (e.g., border points, technical change or OP private siding).

For the purpose of the RINF, the following types of OPs have been defined:

- 1. Station big or huge station with several functions, important for international traffic, basic for national railway system;
- 2. Small station multifunctional station not so big and not so important like "Station";
- 3. Passenger terminal station with dominating function of service for passenger traffic;
- 4. Freight terminal station dominantly serving for loading and unloading of freight trains;
- 5. Depot or workshop group of tracks used by depot or workshop for RST maintenance;
- 6. Train technical services group of tracks for servicing trains (parking, washing, etc.);
- 7. Passenger stop small OP consisting of at least one platform, normally serving mostly for local passenger services;
- 8. Junction OP consisting of at least one turnout, normally used mostly for changing direction of trains, with reduced or not existing other functions;
- 9. Border point located in the point where a border between MSs meets a railway line;
- 10. Shunting yard group of tracks used for shunting trains, mostly related to freight traffic;
- 11. Technical change to describe a change on CCS or a type of contact line or a Gauge changeover facility fixed installation allowing a train to travel across a break of gauge where two railway networks with different track gauges meet;
- 12. Switch OP consisting of only one switch. It describes a single switch without any extension contrary to a junction that has a real spatial extension and is generally delimited by entry signals;
- 13. Private siding OP that describes the embranchment located on the main line that leads to the private siding with the information regarding the embranchment characteristics;
- 14. Domestic border point located exactly in the point where a border between IMs meets a railway line.

## Principles:

A) - For the implementation of the RINF Decision, RINF was populated on the principles below:

There is no obligation to include in RINF all currently existing traffic points of the network.

There are no detailed rules for selecting OPs for RINF. An OP must be defined on a network each time a choice in matter of route can be made.

Only points or stations which are important for the traffic, stopping and starting trains, or delivering services related to trains and their clients must be identified as OP.

It is permissible to ignore some intermediate stops located on the SoL if they are not important from an operational or technical point of view.

B) - For the implementation of the RINF Regulation and the needs of the IV Railway Package, RINF should display every point allowing to describe a route corresponding to a service operated by a RU. Moreover, as defined by RINF Regulation "operational point'(OP) means any location for train service operations, where train services may begin and end or change route and where passenger or freight services may be provided; it includes locations at boundaries between Member States or infrastructure managers;".

In parallel, the implementation of the TAF/TAP TSIs has promoted the definition of Primary Location Codes (PLC) whose ID is a parameter of the OP.

As a conclusion,

Regarding OP type n°11 ("Technical change")

Changes of value of parameters may require defining an OP (type n°11). It allows in particular to describe the implementation of ETCS using parameter 1.1.1.3.2. It allows also to describe a Gauge changeover facility – fixed installation. At last, "type 11" OP allows finally to describe a technical change in energy subsystem, but this solution should be used as little as possible. It should be noted that:

- the RINF already allows describing several types of contact line systems and several energy power systems on a given element of a SoL by repeating the data;
- the use of the Location points makes possible to precise specific points where technical changes are made.

Regarding OP type n° 9 ("Border point")

For these OP between two MS, bilateral agreements have to be achieved concerning name, location of them and other attributes to be included in the registers. The list of borders points is agreed between NREs and managed by the Agency. The list is in 5.2.

Regarding OP type n° 14 ("Domestic border point")


Located exactly in the point where a border between IMs meets a railway line. Their OP ID and other attributes is managed by each NRE and published by the Agency in 5.2. This list will become necessary when IMs will be allowed to directly import their data in the RINF application.

It is necessary to use the correct OP ID to ensure the continuity of the network.

Specific problems may be met in case of large stations or nodes. Then IM may divide such station into several OPs with different types.

It could be useful to take in account of the existence of "PrimaryLocation Codes" already defined for the use of the TAP/TAF TSIs before defining OP for the RINF needs.

It is mandatory to select OP "Border point". For these OP between two MS, bilateral agreements have to be achieved concerning name, location of them and other attributes to be included in the registers. The list of borders points managed by the Agency and agreed between NREs is in 4.2.



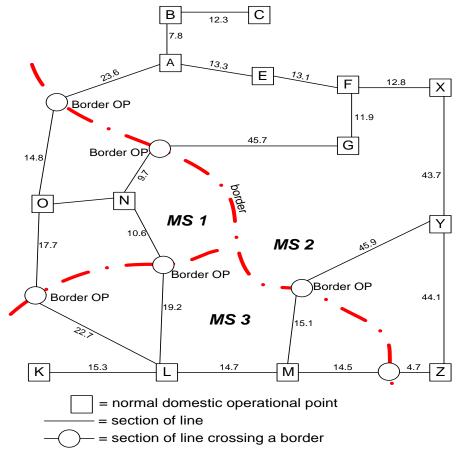


Fig. 2 – International macro railway network with SoL lengths (D. KES)

The same type of agreements will have to be achieved at national level in order to determinate the border points between several IMs and to be able to merge several datasets in a single national one. This task shall be carried out at national level by the NRE.

## 2.3.3 The Section of line

A section of line is the connection between two adjacent OPs. Section of Line is the second basic element of RINF.A line is a continuous chain of sections of lines and operational points when except beginning and end of a line, the OP at end of a SoL is the OP at start of consecutive SoL.

A single SoL may be settled to be a line at its own. As each SoL is described separately, number of tracks and values of related parameters may be different on different SoL of the same line.

It is important to underline that in one SoL may be included tracks only of the same line. When two different lines are running in parallel – passing by the same OPs - data on tracks of each line has to be published in two separate SoLs.

For proper presentation of the network and for avoiding uncertainties in routes and lines, data about OPs on the respective ends of SoLs must be entered carefully.

SoL which is a single track connecting two OPs within a big node (when this big node has been divided into several OPs) has a reduced set of parameters. Such track is indicated as 'Link' in parameter 1.1.0.0.0.6 'Nature of Section of Line'. Only the group 1.1.0.0.0 'Generic information' must be completed.

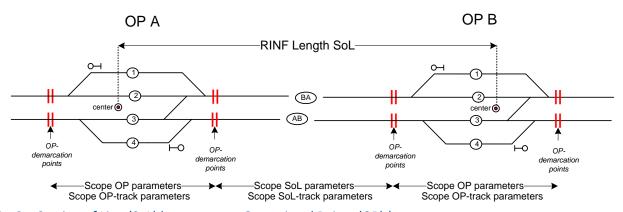


Fig. 3 – Section of Line (SoL) between two Operational Points (OP) (provided by D. KES)

## 2.3.4 Elements of an operational point

Elements inside an OP are 'Running tracks' and 'Sidings'. 'Running tracks' in OP are regarded all those tracks which are used for operation of trains in service movements. It means that not only main tracks of a station are 'Running tracks' according to RINF, but also all additional tracks where passenger trains stop at platforms or where freight trains over-pass group of tracks with platforms.

'Siding' is regarded as a single/simple track. Sidings are all those tracks where running trains in service movements ends and which are not used for operational routing of a train. According to RINF, 'Siding' is any track which "delivers support" for the traffic, but which is not a route for the traffic.

It is possible as a first step to describe existing sidings / platforms of an OP in only one "type siding" / "type platform" adopting the most restrictive characteristics and to introduce siding without any track.

In an OP, only few parameters related to infrastructure subsystem are included. For the other parameters related to infrastructure subsystem energy and command control and signalling subsystems, it is assumed that, in an OP, the same parameter regarding CCS and ENE are corresponding to those of neighbouring SoLs (permitting at least to enter to the center of OP). The exception is the OP used for describing a technical change on type of contact line or CCS.

The specific for OP description is the group of parameters related to platforms. Platform for the purpose of RINF is understood as a platform edge. Platform identification shall concern only the part of the structure neighbouring to the track (interfaced with trains).

In case when normal platform numbering concerns the whole structure between two tracks, the 'RINF platform' may be labelled using the platform number and the track ID to which the specific edge belongs.

It is worth adding that platform is the installation for providing passengers' access to trains – this is not the construction for loading or unloading freight trains.

It is very important for RINF to have a unique identification for each OP (OP ID). OP ID is the code composed from country code and alphanumeric OP code developed by MS or IM. We suggest using those number or abbreviations which are applied in route books or in documentation of the IM. In case of absence of such sources the coding system within the MS may be developed specially for RINF.

Finally, one or several "PLC" can exist in the OP area. The corresponding primary location codes shall be provided using the relevant parameter (1.2.0.0.0.3).

**Private siding:** There is no more reference to private siding in RINF Regulation. Any siding in the scope of the implementation of the Interoperability Directive done by a Member State should be described, whatever is the owner, the owner being described by its "IM code". If the owner has no "RICS Company code", an organisation code will be assigned upon a request by the Agency (see Organisation Code Register on ERA Website).

Some IMs could have chosen not to describe the siding itself but the location of it on its network where a switch leads to a private installation. The definition of the OP private siding was modified allowing to describe so.

As any siding, the following parameters have at least to be filled:

## 1.2 OPERATIONAL POINT

1.2.0.0.0	Generic information		
1.2.0.0.0.1	OPName / Name of Operational point		
1.2.0.0.0.2	UniqueOPID /Unique OP ID		
1.2.0.0.0.3	OPTafTapCode / OP TAF TAP primary location code		
1.2.0.0.0.4	OPType / Type of Operational Point		
1.2.0.0.0.5	OPGeographicLocation / Geographical location of Operational Point		
1.2.0.0.0.6	OPRailwayLocation / Railway location of Operational point		
1.2.2 OPSidi	ng / SIDING		
1.2.2.0.0 Gener	1.2.2.0.0 Generic information		
1.2.2.0.0.1	IM's Code / IM's Code		
1.2.2.0.0.2	OPSidingIdentification / Identification of siding		
(INF)			
1.2.2.0.2	IPP / Performance parameter		
1.2.2.0.2.1	IPP_Length / Usable length of siding		
1.2.2.0.3 Line layout			
1.2.2.0.3.1	ILL_Gradient / Gradient for stabling tracks		
1.2.2.0.3.2	ILL_MinRadHorzCurve / Minimum radius of horizontal curve		

## 1.2.2.0.3.3 ILL MinRadVertCurve / Minimum radius of vertical curve

# 2.3.5 Elements of a section of line

Section of Line consists of one or more tracks of a same national line starting from OP at start of this SoL and ending in the OP at the end of the same SoL.

Values of parameters displayed for a SoL are guaranteed along the corresponding track outside OPs and at least for one or more running tracks inside the area of the start OP and of the end OP up to their center point.

It is advised to organise introduction of data to registers in the way which permits placing the same value of a parameter into all tracks of the same SoL where this is valid.

With regard to the tunnel, the definition foreseen by new SRT TSI [31] is "A railway tunnel is an excavation or a construction around the track provided to allow the railway to pass for example higher land, buildings or water. The length of a tunnel is defined as the length of the fully enclosed section, measured at rail level. A tunnel in the context of this TSI is 0.1km or longer."

'Tunnel' is understood in RINF as the special area of the track with special conditions. So, parameters concerning a tunnel are the attributes of a track; however, those parameters are given in group of parameters titled 'Tunnel'. If there are several tracks in the same tunnel, data related to this tunnel will be repeated in description of each track. On the other hand, if a track passes through several tunnels, in the description of the track will be mentioned several groups of parameters titled 'Tunnel' to describe each of the tunnel separately. The similar rules concern tunnels in OPs which may contain both tracks and sidings.

#### 2.3.6 The Location Point

IMs have the possibility to introduce within SoL Location Points to describe specific change in the value of a parameter at running track level (it cannot be used for parameters of SoL level). LP can be used each time several successive values of a parameter are described for a given track in a same SoL. The new value is valid from the specified location in the direction of the principal SoL direction of the traffic (defined by increasing kilometres, see description of parameter 1.1.0.0.0.3 in Table 5).

The following data has to be included in the description of the LP:

- Km [NNN.NNN] of the line of the point from where the new value is valid
- Geographical longitude of the point from where the new value is valid
- Geographical latitude of the point from where the new value is valid
- The new value of the parameter.

An example of xml is below:

```
-<SOLTrackParameter Value="351" IsApplicable="Y" ID="IPP_MaxSpeed"> <LocationPoint Value="130" Latitude="14.1345" Longitude="-43.9600" Kilometer="12.45"/> <LocationPoint Value="123" Latitude="14.1366" Longitude="43.9700" Kilometer="13.1"/> </SOLTrackParameter>
```

The application of LP is optional. When LPs are not used, they will not appear in the XML file exported from a register to RINF application. Even if provided, they will only be displayed in the details of the running track and will not appear in the final representation of the network. The RINF application in its current development will not search in Location Point values.

But any search will display the location point(s) and the specific value each time it exists for a given SoL. The location point is described by its railway location, geographical coordinates and value of the parameter involved.

## 2.3.7 General information about parameters of RINF

Parameters collected in RINF are mainly:

- a) Generic data valid for SoL, OP, running track, siding,
- b) Data related to specific subsystems for INF, ENE and CCS in SoLs; only for INF in OP,
- c) Data for performance parameters, for objects (tunnel, platform) or for providing references of certificates (declarations).

Organisation of parameters in RINF is presented in table 1 of the annex to the EC RINF Regulation.

It is important to underline that it is permitted/foreseen to repeat certain parameters or groups of parameters. For example: if there are several tracks on the Section of Line – then the whole set of parameters for Track has to be repeated for each track in the SoL.

Also, when several data relating to the same parameter co-exist, then this parameter may be repeated. For example, when there are several "EC intermediate statement of verification" (ISV) declarations for a single subsystem concerning the same track, then this parameter may be repeated so many times as many declarations concern this track.

But please be aware, not all parameters may be repeated – the respective information is provided in a specific attribute "Can be repeated" with the value 'Y' (See table 5).

For the purpose of the RINF, the appropriate value of a parameter has to be the most critical from all values met along the whole track of the SoL.

It means, in general, when a parameter has several values in a same SoL and the RINF application does not authorise its repetition, the most restrictive value of the parameter on the specific track is the RINF value for this parameter on this track.

That is why it is very important to make a thorough selection of OPs.

NREs/IMs can adopt an "in stages" approach starting to describe their network with the most restrictive characteristic.

New OPs and SoLs can be added in further stages to increase the level of description of the network.

Some values of some parameters may not exist – like 'Tunnel identification', 'EC declaration of verification', 'OP TAF/TAP primary location code'. Then the applicability of that parameters will be "N".

In case of multi-rail track, a set of data is to be published separately to each pair of rails to be operated as separate track (the whole set of parameters for the separate track has to be delivered – be careful then with the track identification).

In case of multiple ENE and/or CCS subsystems, the ability to repeat the relevant of parameters allows to describe these particularities of a running track.

The data uploaded to the RINF application should follow metric system principals. For example, in the UK miles or miles per hour will be transformed respectively to kilometres or kilometres per hour prior uploading to the RINF application. The exception are values of speed related to RA (Route Availability) given for Load Capability (1.1.1.1.2.4).

## 2.3.8 Objects for separate dating (future validity)

Date of validity of current data collected in RINF is the same as date of export from the MS' registers of infrastructure to the RINF application.

However, if an IM wants to publish a set of data concerning their future value, the separate validity of those data from the date in future may be given. Then the set of data of the 'object', where those data are included, has to be added to current values by repeating the 'object' with the label of the date of validity in future (see explanations for Common User Interface in 3.1.h). **No overlap in the validity dates shall be accepted by the RINF application** (However, an overlap of three month is currently tolerated by the current RINF application. This possibility will be removed.).

The objects for which this future validity date may be applied are: Operational Point, Section of Line, Track, Siding, Tunnel and Platform. These dates are not described as attributes of parameters but have to be inserted in the RINF XML.

#### 2.4 Characteristics of RINF parameters

RINF parameters are listed in table 5. Each presentation of a parameter provides clarification on the requirements, data presentation, when relevant list of possible answers, information on applicability and mandatory status, ability to be repeated and the XML name of the parameter that will be used in the XML file for uploading RINF data in the RINF application.

The XML name of parameters was introduced to replace the numbering identification in order to allow further introduction of new parameters or to delete existing ones. It also provides a better readability of the XML file.

Table 5 is the basis of the validation process used by the RINF application. This process is described in the "RINF XML Data Validation Guide" [25].

An optional attribute was also introduced in the XML for some parameters. It is described in 1.1 of RINF XML Data Validation Guide.

This element is the "optional value". This optional attribute is used only for readability of the XML file. When several answers are proposed in table 5 for providing the value of a parameter, these values will be introduced encoded and supported by an "optional value" attribute where the value

itself of the parameter can be introduced. A specific deliverable "look-up tables" indicates the codes to be used in the XML file.

Example with "optional value":

<OPTrackParameter ID="ILL\_InteropGauge" IsApplicable="Y" Value="10" OptionalValue="GA" />
<OPTrackParameter ID="ILL\_MultiNatGauge" IsApplicable="Y" Value="30" OptionalValue="GB2"
/>

In this example, the code «10» provided for the parameter «International Gauge» which XML name is "ILL\_InteropGauge" corresponds to gauge GA.

Likewise, the code «30» provided for the parameter «Multinational Gauge» which XML name is "ILL MultiNatGauge" corresponds to gauge GB2.

## 2.5 Parameter groups hierarchy

The list below indicates the hierarchy of main parameter groups and subgroups. The network of each Member State is described in OPs and SoLs. A SoL is composed of one or several running tracks while an OP can have running track(s) and/or siding(s). Specific parameters must be fulfilled depending if the RINF element is a SoL or an OP.

The RINF parameters are organised as follows:

#### 1. MEMBER STATE

#### 1.1 SECTION OF LINE

## 1.1.0.0.0 Generic information

1.1.0.0.0.1	SOLIMCode / IM's Code
1.1.0.0.0.2	SOLLineIdentification / National line identification
1.1.0.0.0.3	SOLOPStart / Operational Point at start of Section of Line
1.1.0.0.0.4	<b>SOLOPEnd</b> / Operational Point at end of Section of Line
1.1.0.0.0.5	SOLLength / Length of section of line
1.1.0.0.0.6	SOLNature / Nature of Section of Line

## 1.1.1 SOLTrack / RUNNING TRACK

## 1.1.1.0.0 Generic information

1.1.1.0.0.1 SOLTrackIdentification / Identification of track1.1.1.0.0.2 SOLTrackDirection / Normal running direction

#### 1.1.1.1 Infrastructure subsystem

Parameters below until 1.1.1.2 belong to the group of infrastructure parameters

## 1.1.1.1.1 IDE / Declarations of verification for track

1.1.1.1.1.1 IDE\_ECVerification / EC declaration of verification for track (INF)

 $1.1.1.1.1.2 \qquad \textbf{IDE\_EIDemonstration / EI declaration of demonstration for track (INF)}$ 

## 1.1.1.1.2 IPP / Performance parameters

1.1.1.1.2.1 **IPP TENClass /** TEN classification of track

1.1.1.1.2.1.2 **IPP\_TENGISID** / TEN GIS identity

1.1.1.1.2.2 IPP\_LineCat / Category of line

1.1.1.1.2.3 **IPP\_FreightCorridor** / Part of a Railway freight corridor

	1.1.1.1.2.4	IPP_LoadCap / Load Capability
	1.1.1.1.2.4.1	IPP NCLoadCap /National classification for load capability
	1.1.1.1.2.4.2	IPP HSLMCompliant/Compliance of structures with the High Speed Load Model
		(HSLM) dynamic load model
	1.1.1.1.2.4.3	IPP_StructureCheckLoc/Railway location of structures requiring specific checks
	1.1.1.1.2.4.4	_IPP_StructureCheckDocRef /Document with the procedure(s) for static and
		dynamic route compatibility checks
	1.1.1.1.2.5	IPP_MaxSpeed / Maximum permitted speed
	1.1.1.1.2.6	IPP_TempRange / Temperature range
	1.1.1.1.2.7	IPP_MaxAltitude / Maximum altitude
	1.1.1.1.2.8	IPP_SevereClimateCon / Existence of severe climatic conditions
1.1.1	L.1.3 ILL/ Line	layout
	1.1.1.1.3.1	ILL_InteropGauge / Interoperable gauge
		ILL_MultiNatGauge / Multinational gauges
		ILL_NatGauge / National gauges
		ILL Gauging / Gauging
		ILL GaugeCheckLoc/Railway location of particular points requiring specific checks
		ILL GaugeCheckDocRef /Document with the transversal section of the particular
		points requiring specific checks
		<u>pomio reguming aposino anosia</u>
	1.1.1.1.3.4	ILL_ProfileNumSwapBodies / Standard combined transport profile number for
	swap bo	
	1.1.1.1.3.5	ILL_ProfileNumSemiTrailers / Standard combined transport profile number for
	semi-trailers	rici_rioneramsemirianers / standard combined transport profile flumber for
		ILL_SpecificInfo /Specific information
	1.1.1.1.3.6	<u>-</u> · · · ·
	1.1.1.1.3.7	ILL_MinRadHorzCurve / Minimum radius of horizontal curve
1.1.		nck parameters
	1.1.1.1.4.1	ITP_NomGauge / Nominal track gauge
	1.1.1.1.4.2	ITP_CantDeficiency / Cant deficiency
	1.1.1.1.4.3	ITP_RailInclination / Rail inclination
	1.1.1.1.4.4	ITP_Ballast / Existence of ballast
1.1.		s and crossings
	1.1.1.1.5.1	ISC_TSISwitchCrossing / TSI compliance of in service values for switches and
cros	sings	
	1.1.1.1.5.2	ISC_MinWheelDiaFixObtuseCrossings / Minimum wheel diameter for fixed
	use crossings	
1.1.	1.1.6 ILR / Tra	ack resistance to applied loads
	1.1.1.1.6.1	ILR_MaxDeceleration / Maximum train deceleration
	1.1.1.1.6.2	ILR_EddyCurrentBrakes / Use of eddy current brakes
	1.1.1.1.6.3	ILR_MagneticBrakes / Use of magnetic brakes
	1.1.1.1.6.4	ILR_ECBDocRef /Document with the conditions for the use of eddy current
		brakes
	1.1.1.1.6.5	ILR_MBDocRef / Document with the conditions for the use of magnetic brakes
1.1.	1.1.7 IHS / He	alth, safety and environment
	1.1.1.7.1	IHS_FlangeLubeForbidden / Use of flange lubrication forbidden
	1.1.1.7.2	IHS_LevelCrossing / Existence of level crossings
	1.1.1.7.3	IHS_AccelerationLevelCrossing / Acceleration allowed at level crossing
	1.1.1.1.7.4	IHS_HABDExist /Existence of trackside hot axle box detector (HABD)
	1.1.1.7.5	IHS TSIHABD/Trackside HABD TSI compliant
	1.1.1.1.7.6	IHS_HABDID/Identification of trackside HABD

1.1.1.1.7.7	IHS HABDGen/Generation of trackside HABD
1.1.1.1.7.8	IHS_HABDLoc/Railway location of trackside HABD
1.1.1.7.9	IHS_HABDDirection/Direction of measurement of trackside HABD
1.1.1.7.10	
1.1.1.7.11	IHS_QuietRoute / Belonging to a quieter route
1.1.1.1.8 SOLTun	nel / Tunnel
1.1.1.1.8.1	SOLTunnelIMCode / IM's Code
1.1.1.1.8.2	SOLTunnelIdentification / Tunnel identification
1.1.1.1.8.3	SOLTunnelStart / Start of tunnel
1.1.1.1.8.4	SOLTunnelEnd / End of Tunnel
1.1.1.1.8.5	ITU_ECVerification / EC declaration of verification for tunnel (SRT)
1.1.1.1.8.6	ITU_EIDemonstration / EI declaration of demonstration for tunnel (SRT)
1.1.1.1.8.7	ITU_Length / Length of tunnel
1.1.1.1.8.8	ITU_CrossSectionArea / Cross section area
1.1.1.1.8.8.1	ITU_TSITunnel / compliance of the tunnel with INF TSI
1.1.1.1.8.8.2	ITU_TunnelDocRef / Reference of to a document available from the IM with
	precise description of the tunnel
1.1.1.1.8.9	ITU_EmergencyPlan / Existence of emergency plan
1.1.1.1.8.10	ITU_FireCatReq / Fire category of rolling stock required
1.1.1.1.8.11	ITU_NatFireCatReq / National fire category of rolling stock required
1.1.1.2 Energy system	
Parameters below	until 1.1.1.3 belong to the group of energy parameters
1.1.1.2.1 EDE/ De	clarations of verification for track
1.1.1.2.1.1	EDE_ECVerification / EC declaration of verification for track (ENE)
1.1.1.2.1.2	EDE_EIDemonstration / El declaration of demonstration for track (ENE)
1.1.1.2.2 ECS / Co	ntact line system
1.1.1.2.2.1.1	ECS_SystemType / Type of contact line system
1.1.1.2.2.1.2	ECS_VoltFreq / Energy supply system
1.1.1.2.2.1.2.	1ECS_TSIVoltFreq / Energy supply system TSI compliant
1.1.1.2.2.1.3	ECS_Umax2/Umax2 for lines referred to in sections 7.4.2.2.1 and 7.4.2.11.1 of
	Regulation (EU) 1301/2014.
1.1.1.2.2.2	ECS_MaxTrainCurrent / Maximum train current
1.1.1.2.2.3	ECS_MaxStandstillCurrent / Maximum current at standstill per pantograph
1.1.1.2.2.4	ECS_RegenerativeBraking / Permission for regenerative braking
1.1.1.2.2.5	ECS_MaxWireHeight / Maximum contact wire height
1.1.1.2.2.6	ECS_MinWireHeight / Minimum contact wire height
1.1.1.2.3 EPA / Pa	ntograph
1.1.1.2.3.1	EPA_TSIHeads / Accepted TSI compliant pantograph heads
1.1.1.2.3.2	EPA_OtherHeads / Accepted other pantograph heads
1.1.1.2.3.3	<b>EPA_NumRaisedSpeed</b> / Requirements for number of raised pantographs and
	spacing between them, at the given speed
1.1.1.2.3.4	EPA_StripMaterial / Permitted contact strip material
	CL separation sections
	EOS_Phase / Phase separation
1.1.1.2.4.1.2	EOS_InfoPhase / Information on phase separation
1.1.1.2.4.2.1	EOS_System / System separation
1.1.1.2.4.2.2	EOS_InfoSystem / Information on system separation
	S_DistSignToPhaseEnd/Distance between signboard and phase separation ending
	quirements for rolling stock
1.1.1.2.5.1	ERS_PowerLimitOnBoard / Current or power limitation on board required
1.1.1.2.5.2	ERS_ContactForce / Contact force permitted
1.1.1.2.5.3	ERS_AutoDropRequired / Automatic dropping device required

## 1.1.1.3 Control-command and signalling subsystem

Parameters below until 1.2 1.1.1.4 belong to the group of CCS parameters

#### 1.1.1.3.1 CDE / Declarations of verification for track

- 1.1.1.3.1.1 CDE\_ECVerification / EC declaration of verification for track (CCS)
- 1.1.1.3.2 CPE / TSI compliant train protection system (ETCS)
  - 1.1.1.3.2.1 **CPE Level / ETCS level**
  - 1.1.1.3.2.2 **CPE\_Baseline** / ETCS baseline
  - 1.1.1.3.2.3 **CPE\_Infill** / ETCS infill necessary for line access
  - 1.1.1.3.2.4 **CPE\_InfillLineSide** / ETCS infill installed lineside
  - 1.1.1.3.2.5 CPE\_NatApplication / ETCS national packet 44 application implemented
  - 1.1.1.3.2.6 CPE RestrictionsConditions / Existence of operating restrictions or conditions
  - 1.1.1.3.2.7 CPE\_OptionalFunctions / Optional ETCS functions
  - 1.1.1.3.2.8 **CPE\_IntegrityConfirmation** / Train integrity confirmation from on-board necessary for line access
  - 1.1.1.3.2.9 CPE SystemCompatibility / ETCS system compatibility
  - 1.1.1.3.2.10 **CPE\_MVersion** / ETCS M\_version
- 1.1.1.3.3 CRG / TSI compliant radio (GSM-R)
  - 1.1.1.3.3.1 CRG\_Version GSM-R version
  - 1.1.1.3.3.2 **CRG\_NumActiveMob** / Advised <u>Required</u> number of active GSM-R mobiles (EDOR) or simultaneous communication session on-board for ETCS Level 2 (or level 3) needed to perform radio block centre handovers without having an operational disruption
  - 1.1.1.3.3.3 **CRG\_OptionalFunctions** / Optional GSM-R functions
  - 1.1.1.3.3.3.1 CRG\_AdditionalnetworkInfo / Additional information on network characteristics
  - 1.1.1.3.3.3.2 CRG\_GPRSForETCS / GPRS for ETCS
  - 1.1.1.3.3.3.3 CRG\_GPRSAreaOfImpl / Area of implementation of GPRS
  - 1.1.1.3.3.4 **CRG\_Needof555** / Use of group 555
  - 1.1.1.3.3.5 **CRG\_RoamingAgreement** / GSM-R networks covered by a roaming agreement
  - 1.1.1.3.3.6 **CRG\_RoamingPublic** / Existence of roaming to public networks
  - 1.1.1.3.3.7 **CRG\_RoamingPublicDetails** / Details on roaming to public networks
  - $1.1.1.3.3.8 \qquad \textbf{CRG\_GSMRNoCoverage} \ / \ \text{No GSMR coverage}$
  - 1.1.1.3.3.9 **CRG\_RadioCompVoice** / Radio system compatibility voice
  - 1.1.1.3.3.10 CRG\_RadioCompData / Radio system compatibility data
- 1.1.1.3.4 CCD / Train detection systems fully compliant with the TSI
  - 1.1.1.3.4.1 **CCD\_TSITrainDetection** / Existence of train detection system fully compliant with the TSI
- 1.1.1.3.5 CPO / Train protection legacy systems
  - 1.1.1.3.5.1 **CPO\_Installed** / Existence of other train protection, control and warning systems installed
  - 1.1.1.3.5.2 **CPO\_MultipleRequired** / Need for more than one train protection, control and warning system required on-board
  - 1.1.1.3.5.3 **CPO\_LegacyTrainProtection** / Train protection legacy system
- 1.1.1.3.6 CRS / Other radio systems
  - 1.1.1.3.6.1 **CRS\_Installed** / Other radio systems installed (Radio Legacy Systems)
- 1.1.1.3.7 CTD / Train detection systems not fully compliant with the TSI
  - 1.1.1.3.7.1.1 CTD\_DetectionSystem / Type of train detection system
  - 1.1.1.3.7.1.2 CTD\_TCCheck /Type of track circuits to which specific checks are needed
  - 1.1.1.3.7.1.3 **CTD\_TCCheckDocRef** / Document with the procedure(s) related to the type of track circuits declared in 1.1.1.3.7.1.2
  - 1.1.1.3.7.1.4 **CTD\_TCLimitation**/Section with train detection limitation, only for the French network
  - 1.1.1.3.7.2.1 **CTD\_TSIMaxDistConsecutiveAxles** / TSI compliance of maximum permitted distance between two consecutive axles
  - 1.1.1.3.7.2.2 **CTD\_MaxDistConsecutiveAxles** / Maximum permitted distance between two consecutive axles in case of TSI non-compliance

	1.1.1.3.7.3	CTD_MinDistConsecutiveAxles / Minimum permitted distance between two
		consecutive axles
	1.1.1.3.7.4	CTD_MinDistFirstLastAxles / Minimum permitted distance between first and last
		axle
	1.1.1.3.7.5	CTD_MaxDistEndTrainFirstAxle / Maximum distance between end of train and
		first axle
	1.1.1.3.7.6	CTD_MinRimWidth / Minimum permitted width of the rim
	1.1.1.3.7.7	CTD_MinWheelDiameter / Minimum permitted wheel diameter
	1.1.1.3.7.7	CTD_MinFlangeThickness / Minimum permitted thickness of the flange
	1.1.1.3.7.9	CTD_MinFlangeHeight / Minimum permitted height of the flange
	1.1.1.3.7.10	CTD_MaxFlangeHeight / Maximum permitted height of the flange
		CTD_MinAxleLoad / Minimum permitted axle load
	1.1.1.3.7.11.1	CTD_ MinAxleLoadByVehicleCat / Minimum permitted axle load per category of
		vehicle
	1.1.1.3.7.12	CTD_TSIMetalFree / TSI compliance of rules for metal-free space around wheels
	1.1.1.3.7.13	$\textbf{CTD\_TSIMetalConstruction} \ / \ \textbf{TSI} \ compliance \ of \ rules \ for \ vehicle \ metal construction$
	1.1.1.3.7.14	CTD_TSIFerroWheelMat / TSI compliance of Ferromagnetic characteristics of
		wheel material required
	1.1.1.3.7.15.1	CTD_TSIMaxImpedanceWheelset / TSI compliance of maximum permitted
		impedance between opposite wheels of a wheelset
	1.1.1.3.7.15.2	CTD_MaxImpedanceWheelset / Maximum permitted impedance between
		opposite wheels of a wheelset when not TSI compliant
	1.1.1.3.7.16	CTD_TSISand / TSI compliance of sanding
	1.1.1.3.7.17	CTD_MaxSandOutput / Maximum amount of sand
	1.1.1.3.7.18	CTD_SandDriverOverride / Sanding override by driver required
	1.1.1.3.7.19	CTD_TSISandCharacteristics / TSI Compliance of rules on sand characteristics
	1.1.1.3.7.20	CTD_FlangeLubeRules / Existence of rules on on-board flange lubrication
	1.1.1.3.7.21	CTD_TSICompositeBrakeBlocks / TSI compliance of rules on the use of composite
		brake blocks
	1.1.1.3.7.22	CTD_TSIShuntDevices / TSI compliance of rules on shunt assisting devices
		CTD_TSIRSTShuntImpedance/ TSI compliance of rules on combination of RST
		characteristics influencing shunting impedance
1.1.1	.3.8 CTS / Tra	nnsitions between systems
		CTS_SwitchProtectControlWarn / Existence of switch over between different
		protection, control and warning systems while running
	1 1 1 3 8 2 <b>c</b>	TS_SwitchRadioSystem / Existence of switch over between different radio systems
111		ameters related to electromagnetic interferences
	1.1.1.3.9.1	CEI_TSIMagneticFields / Existence and TSI compliance of rules for magnetic
	1.1.1.3.3.1	fields emitted by a vehicle
	1.1.1.3.9.2	CEI_TSITractionHarmonics / Existence and TSI compliance of limits in harmonics
	1.1.1.3.9.2	in the traction current of vehicles
111	2 10 CLD / Lin	
1.1.1		ne-side system for degraded situation
		CLD_ETCSSituation / ETCS level for degraded situation
	1.1.1.3.10.2	CLD_OtherProtectControlWarn / Other train protection, control and warning
		systems for degraded situation
1.1.1		ake related parameters
		CBP_MaxBrakeDist / Maximum braking distance requested
		CBP_AddInfoAvailable / Availability by the IM of additional information
	1.1.1.3.11.3	CBP_BrakePerfDocRef/ Documents available by the IM relating to braking
		performance

# 1.1.1.3.12 COP / Other CCS related parameters

1.1.1.3.12.1 **COP\_Tilting** / Indication whether titling functions are supported by ETCS

## 1.1.1.4 Rules and restriction

1.1.1.4.1	RUL_LocalRulesOrRestrictions / Existence of rules and restrictions of a strictly
	local nature

1.1.1.4.2 RUL\_LocalRulesOrRestrictionsDocRef\_/Reference of the documentsDocuments regarding the rules or restrictions of a strictly local nature available by the IM

#### 1.2 OPERATIONAL POINT

## 1.2.0.0.0 Generic information

- 1.2.0.0.0.1 **OPName / Name of Operational point**
- 1.2.0.0.0.2 Unique OPID /Unique OP ID
- 1.2.0.0.0.3 OPTafTapCode / OP TAF TAP primary code
- 1.2.0.0.0.4 **OPType** / Type of Operational Point
- 1.2.0.0.0.4.1 **OPTypeGaugeChangeover** / Type of track gauge changeover facility
- 1.2.0.0.0.5 **OPGeographicLocation** / Geographical location of Operational Point
- 1.2.0.0.0.6 **OPRailwayLocation** / Railway location of Operational point

#### 1.2.1 OPTrack / RUNNING TRACK

#### 1.2.1.0.0 Generic information

- 1.2.1.0.0.1 **OPTrackIMCode** / IM's Code
- 1.2.1.0.0.2 **OPTrackIdentification** / Identification of track

#### 1.2.1.0.1 IDE / Declarations of verification for track

- 1.2.1.0.1.1 **IDE ECVerification** / EC declaration of verification for track (INF)
- 1.2.1.0.1.2IDE\_EIDemonstration / EI declaration of demonstration for track (INF)

## 1.2.1.0.2 IPP / Performance parameters

- 1.2.1.0.2.1 **IPP\_TENClass** / TEN classification of track
- 1.2.1.0.2.2 **IPP\_LineCat** / Category of Line
- 1.2.1.0.2.3 IPP\_FreightCorridor / Part of a Railway freight corridor

## 1.2.1.0.3 ILL / Line layout

- 1.2.1.0.3.1 ILL\_InteropGauge / Interoperable gauge
- 1.2.1.0.3.2 ILL\_MultiNatGauge / Multinational gauges
- 1.2.1.0.3.3 ILL\_NatGauge / National gauges
- 1.2.1.0.3.4 **ILL\_Gauging\_/** Gauging
- 1.2.1.0.3.5 **ILL\_GaugeCheckLoc/**Railway location of particular points requiring
  - specific checks
- 1.2.1.0.3.6 **ILL\_GaugeCheckDocRef** /Document with the transversal section of the particular points requiring specific checks

## 1.2.1.0.4 ITP / Track Parameters

1.2.1.0.4.1 **ITP\_NomGauge** / Nominal track gauge

#### 1.2.1.0.5 OPTrackTunnel / Tunnel

- 1.2.1.0.5.1 **OPTrackTunnelIMCode** / IM's Code
- 1.2.1.0.5.2 **OPTrackTunnelIdentification** / Tunnel identification
- 1.2.1.0.5.3 **ITU\_ECVerification** / EC declaration of verification for tunnel (SRT)
- 1.2.1.0.5.4**ITU\_EIDemonstration** / EI declaration of demonstration for tunnel (SRT)
- 1.2.1.0.5.5 ITU\_Length / Length of tunnel
- 1.2.1.0.5.6 **ITU\_EmergencyPlan** / Existence of emergency plan
- 1.2.1.0.5.7 ITU\_FireCatReq / Fire category of rolling stock required
- 1.2.1.0.5.8 ITU\_NatFireCatReq / National fire category of rolling stock required
- 1.2.1.0.5.9 <u>ITU\_ThermAllowed/</u>Diesel or other thermal traction allowed

#### 1.2.1.0.6 OPTrackPlatform / Platform

1.2.1.0.6.1	OPTrackPlatformIMCode / IM's Code
1.2.1.0.6.2	OPTrackPlatformIdentification / Identification of platform
1.2.1.0.6.3	IPL_TENClass / TEN Classification of platform
1.2.1.0.6.4	IPL_Length / Usable length of platform
1.2.1.0.6.5	IPL Height / Height of platform

1.2.1.0.6.6IPL\_AssistanceStartingTrain / Existence of platform assistance for starting train 1.2.1.0.6.7 IPL\_AreaBoardingAid / Area of use of the platform boarding aid

#### 1.2.2 OPSiding / SIDING

#### 1.2.2.0.0 Generic information

1.2.2.0.0.1IM's Code / IM's Code
 1.2.2.0.0.2 OPSidingIdentification / Identification of siding
 1.2.2.0.0.3 IPP\_TENClass / TEN classification of siding

#### 1.2.2.0.1 IDE / Declaration of verification for siding

1.2.2.0.1.1 IDE\_ECVerification / EC declaration of verification for siding (INF)
 1.2.2.0.1.2 IDE\_EIDemonstration / EI declaration of demonstration for siding (INF)

#### 1.2.2.0.2 IPP / Performance parameter

1.2.2.0.2.1 IPP\_Length / Usable length of siding

#### 1.2.2.0.3 Line layout

1.2.2.0.3.1 ILL\_Gradient / Gradient for stabling tracks
 1.2.2.0.3.2 ILL\_MinRadHorzCurve / Minimum radius of horizontal curve
 1.2.2.0.3.3 ILL\_MinRadVertCurve / Minimum radius of vertical curve

#### 1.2.2.0.4 ITS / Fixed installations for servicing trains

1.2.2.0.4.1 ITS\_ToiletDischarge / Existence of toilet discharge
 1.2.2.0.4.2 ITS\_ExternalCleaning / Existence of external cleaning facilities
 1.2.2.0.4.3 ITS\_WaterRestocking / Existence of water restocking
 1.2.2.0.4.4 ITS\_Refuelling / Existence of refuelling
 1.2.2.0.4.5 ITS\_SandRestocking / Existence of sand restocking
 1.2.2.0.4.6 ITS\_ElectricShoreSupply / Existence of electric shore supply

## 1.2.2.0.5 OPSidingTunnel / Tunnel

1.2.2.0.5.1 OPSidingTunnelIMCode / IM's Code 1.2.2.0.5.2 **OPSidingTunnelIdentification** / Tunnel identification 1.2.2.0.5.3 ITU\_ECVerification / EC declaration of verification for tunnel (SRT) 1.2.2.0.5.4 ITU\_EIDemonstration: El declaration of demonstration for tunnel (SRT) 1.2.2.0.5.5 ITU\_Length / Length of tunnel 1.2.2.0.5.6 ITU\_EmergencyPlan / Existence of emergency plan 1.2.2.0.5.7 ITU\_FireCatReq / Fire category of rolling stock required 1.2.2.0.5.8 ITU\_NatFireCatReq / National fire category of rolling stock required

## 1.2.2.0.6 ECS / Contact line system Contact line system

1.2.2.0.6.1 <u>ECS\_MaxStandstillCurrent/</u>Maximum current at standstill per pantograph

#### 1.2.3 Rules and restriction

 1.2.3.1
 RUL LocalRulesOrRestrictions / Existence of rules and restrictions of a strictly local nature

 1.2.3.2
 RUL\_LocalRulesOrRestrictionsDocRef /Documents regarding the rules or restrictions of a strictly local nature available by the IM

## 2.6 Relations between parameters

Parameters are described in Table 1 of the Annex of RINF Regulation [36]. This table will not be copied in this guide, nor the status "core parameter" or "needed for the RC", nor the deadline for the provision by the NRE/IM of the parameter.

Table 5 of this guide (see 5.1) gives information on relationships between parameters. Parameters are mandatory if applicable. The "applicability" of parameters can depend on value in relation to TSI or value of other primary parameters. E.g.:

- parameter 1.1.0.0.0.1 ("IM Code") is applicable in all cases and mandatory
- 1.1.2.2.6 ("Minimum contact wire height") is applicable ("Y") only if "Overhead contact line (OCL)" is selected in 1.1.1.2.2.1.1 and then mandatory to be provided.

The guide provides also explanation on the "specific applicability" of some of them.

Three groups of parameters need to be used with a "Set" attribute each time the "parent" parameter is repeated with a different value. They have to be provided at the level of each track in a SoL.

The XML attribute called "Set" must be declared at the parent and children level with the same keyword value.

The parameters represented by a set group have to be declared for each "parent" present on a track, the applicability and values are entered for each system described.

Even though all the parameters are set in the XML file to applicable="N" or "NYA", the RINF application still requires the 'Set' attribute to be declared and populated. The way to bypass this requirement is to declare the Set as Set="null".

The principles for the use of the set attribute are:

- Any string of characters can be used as value of a set but it must be different from one set to another;
- The value of a given set must be unique in a given track.

The parameters represented by a set group have to be declared for each system present on a track, the applicability and values are entered for each system described.

Even though all the parameters are set in the XML file to applicable="N", the RINF application still requires the 'Set' attribute to be declared and populated. The way to bypass this requirement is to declare the Set as Set="null".

The groups of "linked" parameters are the followings:

- 1) For each type of contact line declared (parameter 1.1.1.2.2.1.1: ECS\_SystemType / Type of contact line system) the following full set has to be provided:
- 1.1.1.2.2.1.2 ECS\_VoltFreq / Energy supply system
- 1.1.1.2.2.1.2.1 ECS\_TSIVoltFreq / Energy supply system TSI compliant
- 1.1.1.2.2.1.3 **ECS\_Umax2** / Umax2 for lines referred to in sections 7.4.2.2.1 and 7.4.2.11.1 of Regulation (EU) 1301/2014
- 1.1.1.2.2.2 **ECS\_MaxTrainCurrent** / Maximum train current

- 1.1.1.2.2.3 ECS\_MaxStandstillCurrent / Maximum current at standstill per pantograph
   1.1.1.2.2.4 ECS\_RegenerativeBraking / Permission for regenerative braking
  - 1.1.1.2.5.1 ERS\_PowerLimitOnBoard / Current or power limitation on board required
- 2) For each level of ETCS (parameter 1.1.1.3.2.1: **CPE\_Level / ETCS level**), the following full set has to be provided:

1.1.1.3.2.2 **CPE\_Baseline** / ETCS baseline

3) For each type of train detection system (parameter 1.1.1.3.7.1CTD\_DetectionSystem / Type of train detection system), the following full set has to be provided:

1.1.1.3.7.2.1	CTD_TSIMaxDistConsecutiveAxles / TSI compliance of maximum permitted
	distance between two consecutive axles
1.1.1.3.7.2.2	CTD_MaxDistConsecutiveAxles / Maximum permitted distance between two
	consecutive axles in case of TSI non-compliance
1.1.1.3.7.3	CTD_MinDistConsecutiveAxles / Minimum permitted distance between two
	consecutive axles
1.1.1.3.7.4	CTD_MinDistFirstLastAxles / Minimum permitted distance between first and
	last axle
1.1.1.3.7.5	CTD_MaxDistEndTrainFirstAxle / Maximum distance between end of train and
	first axle
1.1.1.3.7.6	CTD_MinRimWidth / Minimum permitted width of the rim
1.1.1.3.7.7	CTD_MinWheelDiameter / Minimum permitted wheel diameter
1.1.1.3.7.8	CTD_MinFlangeThickness / Minimum permitted thickness of the flange
1.1.1.3.7.9	CTD_MinFlangeHeight / Minimum permitted height of the flange
1.1.1.3.7.10	CTD_MaxFlangeHeight / Maximum permitted height of the flange
1.1.1.3.7.11.1	CTD_ MinAxleLoadByVehicleCat / Minimum permitted axle load per category of
	Vehicle
1.1.1.3.7.12	CTD_TSIMetalFree / TSI compliance of rules for metal-free space around wheels
1.1.1.3.7.13	CTD_TSIMetalConstruction / TSI compliance of rules for vehicle metal
	construction
1.1.1.3.7.14	CTD_TSIFerroWheelMat / TSI compliance of Ferromagnetic
	characteristics of wheel material required
1.1.1.3.7.15.1	CTD_TSIMaxImpedanceWheelset / TSI compliance of maximum
	permitted impedance between opposite wheels of a wheelset
1.1.1.3.7.15.2	CTD_MaxImpedanceWheelset / Maximum permitted impedance
	between opposite wheels of a wheelset when not TSI compliant
1.1.1.3.7.17	CTD_MaxSandOutput / Maximum amount of sand
1.1.1.3.7.18	CTD_SandDriverOverride / Sanding override by driver required
1.1.1.3.7.19	CTD_TSISandCharacteristics / TSI Compliance of rules on sand characteristics
1.1.1.3.7.20	CTD_FlangeLubeRules / Existence of rules on on-board flange lubrication
1.1.1.3.7.21	CTD_TSICompositeBrakeBlocks / TSI compliance of rules on the use of
	composite brake blocks
1.1.1.3.7.22	CTD_TSIShuntDevices / TSI compliance of rules on shunt assisting devices
1.1.1.3.7.23	CTD_TSIRSTShuntImpedance/ TSI compliance of rules on combination of RST
	characteristics influencing shunting impedance

# 2.7 Governance process of Table 5

Three groups contributed to the current development of the previous version of the guide and to the implementation of the RINF decision:

The Development WP acted as a "board", responsible for:

- providing information on the RINF implementation, needs for change and/or improvement to the application guide (AG) and/or to the software;
- agreeing principles of changes on the basis of the consensus (RINF implementation is not yet mature enough to give this group the power to take decision)
- 2. The users' group is the group of technical experts from NREs/IMs that is mainly helping ERA with the implementation of IT databases;
- 3. The RINF Network WG is the group composed of NREs. The aim of this group is to share feedback on the implementation, on the understanding of the guide.

Principles of draft modifications were presented and first discussed in the Users Group. The result was sent to all participants of all the RINF groups (RINF Development WP, RINF Network WG) for consultation before the following common meeting.

If participants of the common meeting agree to the principles of changes presented, ERA introduced them in the next version of the application guide.

The Agency is now regularly organising common meetings (Joint RINF meetings) of the Development WP and of RINF Network WG for the implementation of the RINF regulation. The Application guide, including table 5, is one of the deliverables that will be under the management of the RINF Change Management Board that have to be established.

#### 3 PRINCIPAL RULES FOR THE RINF APPLICATION

## 3.1 Main principles

The principles listed below form the basis of the functional and non-functional requirements of the RINF system.

- a) There is only one Entity in Charge of the register of Infrastructure (NRE) per Member State, acting as the centre point of data submissions to the RINF application. It is up to the NREs to manage the consolidation of data from the various IMs local registers and database and form a single data submission for the RINF. This shall include all RINF data for this country, as required by the RINF regulation.
- a) The RINF application is a web-based application that will be available over the Internet.
- b) Only the RINF data specified in the RINF regulation have to be provided by the Member States' Registers to the RINF application.
- c) Results of a query submitted by RINF application users may not be provided immediately. It is acceptable that the results of some complex queries can be provided in the form of reports at a later point in time (no later than 24hours). The exact response times will depend on the complexity of the request. The users receive a URL with the requested RINF data via email as soon as the query results are available at the RINF application. Then, they can access the RINF application and retrieve the results of their queries.
- d) Each member state network is described by the upload of a full dataset by NRE. It is not possible to upload partial data. In case of update of the description, it is necessary to upload a new full dataset containing the existing information and the new one. In the incipient phases of the project, MSs will be allowed to provide sets of data that do not have all mandatory parameters filled. This measure comes to help MSs in showing their progress in collecting and compiling RINF data.
- e) Only the data provided within the last submitted dataset by the NRE will be available through the RINF application. All previously existing data (from previous datasets) shall be stored for 2 years from the date of withdrawal of the data and will not be available through the RINF application.
- f) No information can be provided in the RINF datasets about railway infrastructure which is no longer in service. These data will be no more accessible through the RINF application. Within the RINF dataset, the NREs have the possibility to provide the following types of time-related information:
  - i. Information about the currently existing railway infrastructure
  - ii. Information about railway infrastructure that will come into service in the future
  - iii. Information about currently existing railway infrastructure that will cease to operate in the future
- g) No actual documents or other file attachments are included in the RINF datasets.
- h) Access to the RINF data is controlled: authentication is necessary (e.g., username/password) before users can access RINF data through the RINF application.

- i) No restrictions will be implemented once access granted: users logged-in to the RINF application shall have access to all RINF data of all countries.
- j) Railway Undertaking Representative is a user category introduced by the RINF Regulation. This user can export details of a route, can generate a certificate for a specific route and can be notified on data updates.
- k) A specific module within the RINF application was available for supporting the management of datasets (XML files) at the national level. For IMs use, it allows to create/edit RINF data set and to upload to the NRE. The same module allows the NRE to merge multiple datasets from different IMs into a single dataset. These two functionalities were developed as tools facilitating the implementation of the RINF Decision. The module is not currently updated for allowing IMs to create/edit RINF data set according to the RINF Regulation. There is no obligation to use this module. It depends on the national implementation strategy.

### 3.2 Governance

#### 3.2.1 General

Governance is an important aspect to be considered for the implementation and the future operation of RINF. This can be divided in two major areas:

- Governance for the **implementation** of the RINF system, including the business processes, software development, the testing and validation, and implementation of the various sub-systems that will provide the RINF set of data.
- Governance for the **maintenance** of the RINF system, in order to guarantee the availability and integrity of RINF data.

Of course, responsibility for the implementation and maintenance of the system lies with the organisation implementing the respective system component. In this respect, another distinction has to be made between the Governance for the implementation and maintenance of:

- The Member States' Registers, implemented by entities in charge of RINF (NREs) nominated by Member States, hosted in each country's premises,
- The RINF application, implemented and hosted by ERA;
- The artefacts based on which the NREs will base the implementation of the system for RINF purpose.

### 3.2.2 RINF application

The European Railway Agency (ERA) implements and hosts the RINF application.

In this respect, a web application is implemented at ERA level, for providing the basic functionalities described in the EC Decision, such as search page with filters and search results, user registration, etc. The database of the RINF application is a collation of the datasets sent by the Member States.

ERA implements and maintains the RINF application together with a contracted IT supplier. ERA chairs regular meetings with the entities in charge of RINF for implementation and maintenance of the RINF.

### 3.2.2.1 Team organisation

The implementation of the RINF Application as well as the activities related to its production operation (roll-out support, corrective and evolutive maintenance) will be undertaken by ERA with the assistance of its IT contractor. Some general concepts of this working methodology are provided here:

- ERA Business Managers will be responsible for providing the overall Vision as well as the requirements from a business point of view. They will also be responsible for validating the deliverables (use cases, prototype, software application, etc.) that will be prepared by the IT contractor.
- ERA Project Manager will be responsible for monitoring the progress of the project and mitigating risks.
- ERA will be responsible for validating the technical deliverables prepared by the contractor (software architecture, test management, source code, etc.).
- ERA Service Desk will be responsible for handling the technical communications with the technical experts of the Member States' Registers, and for resolving any technical issues that may arise in the communication between the RINF application and the NRs.

### 3.2.2.2 RINF application Maintenance

All components installed within the environment of the RINF application (web application, database, web services, etc.) will be maintained by ERA. ERA will be responsible for the following tasks:

Maintenance at operational conditions and support:

- Maintain look-up tables which provide the actual valid values of parameters with predescribed values.
- Maintain the central database, run regular backup and clean-up tasks, communicate on quality of operations.
- Perform standard maintenance tasks on the servers hosting the application (check file systems and logs, create backups, etc.).
- Resolve any issues that emerge in the RINF web application
- Organise help desk to provide support to entities in charge of RINF and users.

# Management of changes:

- Establish formal change management process.
- Update the RINF data scheme if relevant.
- Assist any new MS in connecting with the RINF application.
- Maintain the Project and Infrastructure Documentation.

### 3.2.3 Registers at Member State level

Roles and responsibilities are defined in the RINF Regulation:

- article 2 for the Member State,
- article 4 for the NRE and the IM regarding the collection and the insertion of the data depending on the date of 1st January 2021,
- article 5 for the IM regarding the accuracy, completeness, consistency and timeliness of data in the RINF Application

### 3.2.4 NREs and Agency responsibilities Communication between RINF application and NREs

Each NRE will be responsible for the following (31 December 2020):

Prepare the dataset (XML file) comprising the full RINF information of the Member State including validation through data quality checks.

- Submit the RINF dataset to the central database at ERA.
- Follow-up with ERA relating to any issues on failing validation or upload.
- Define the list of domestic border points, keep it updated and forward it to the Agency
- Manage the data on domestic border points

ERA will be responsible for the following:

- Provide relevant documentation relating to maintenance and evolution of RINF.
- Manage the list of MS border points
- Manage reference list of domestic border points to be used in the validation process
- Provide validation mechanism for the NREs to check the quality of their datasets before submitting them to the central database.
- Facilitate the dataset uploading, through a web interface available only to NRE users,
- Advise the NRE responsible of any problem.
- Provide visibility on quality of upload process toward NREs, and on quality of data towards users.

In order to fulfil the above responsibilities, software modules at ERA will implement the following functionalities:

- Receive from the NREs the XML files with the RINF data.
- Validate the structure of the XML files against:

- The predefined structure of the XSD file (format of fields, mandatory/optional, size of data, etc.), and
- The business rules specified for checking the quality of the provided data (e.g., the name of an OP at start of SoL exists as OP within the dataset).
- Logging any errors in the validation.
- Reporting success/failure (with respective errors if any) back to the NREs.

Responsibility for the correctness and integrity of RINF data lies with the Member States. ERA shall finally check the validity of the submitted RINF data in terms of its conformity with the RINF scheme... Non-valid RINF data will be rejected by ERA, which will centrally record such non-valid RINF data submissions in logs on the RINF application server. In addition, the RINF application will automatically dispatch emails to the NREs when such non-valid submissions are detected.

# 3.3 System Architecture

This architecture requires that the RINF central database is fed with copies of the full sets of RINF data maintained at the Member States' Registers. In particular, the NREs will prepare the XML files that encapsulate the full set of RINF data that is currently available at their Register (a current snapshot of all RINF information). Then, the NREs will submit this XML file to the central RINF repository, which will be collocated with the Common User Interface. This submission of datasets is carried out through manually uploading the compressed XML files to the RINF system via a dedicated interface provided for this purpose.

Figure 4 demonstrates the logical view of the RINF architecture. The RINF system provides two main interfaces. The first one is utilised by RINF users in order to connect to the RINF system and retrieve RINF information, and the other is utilised by the Member States' NREs in order to provide/upload copies of their full RINF datasets. The basic use case is that the users connect via the internet to the RINF system through its user interface and they request to retrieve particular RINF data. The RINF application searches for the requested data centrally in its centralised database, retrieves the data, and presents it to the users.

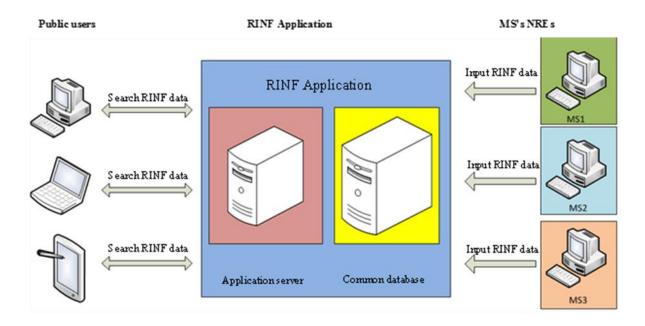


Fig. 4 – RINF System

The NREs will maintain and be responsible for the management of their own RINF datasets at their respective Registers. The RINF system requires from NREs to be able to provide only copies of their full RINF dataset that are maintained in their Registers.

The XML file that encapsulates the full RINF dataset for a Member State's Register is then validated against the corresponding XML Schema Definition (XSD). The responsibility for the correctness and completeness of the provided information is kept at the level of the NRE of the specific country, without prejudice to the roles and shared responsibilities between the national actors for the RINF implementation defined by each Member State. If the XSD validation fails, the data will be rejected and a report will be dispatched to the NRE listing the encountered errors.

The communication between the users and the RINF system is performed through the internet. Thus, in both cases the RINF architecture is transparent to the users. The users (i.e., RUs, IMs, Manufacturers, NSAs, etc.) open a web browser and connect to the RINF system via HTTP (or HTTPS for extra security if necessary). The RINF system provides access to the provided infrastructure information, as well as any additional functionalities and services. The RINF system queries the central RINF database and provides back to the users the proper RINF information.

### 3.4 RINF deliverables

The following deliverables are available on ERA extranet via the RINF specific folder and its "Specific reference documents" page:

- RINF xsd Schema
- Lookup Values Dictionaries

The RINF xsd Schema and the Lookup Values dictionaries always correspond to the latest version of the Application Guide and the RINF application.

# 3.5 Data Upload & Validation & import Module (Data Management)

The RINF Data Management module is a software application that will be used by the NREs for uploading, validating their RINF datasets before the import and then import.

The rules of validation of the submitted datasets are described in the "RINF Data Validation Guide" available via the RINF extranet specific page.

### 3.5.1 RINF Data Life Cycle

The RINF data life cycle involves the following stages:

- 1) The RINF data of a particular Member State is collated by the NRE into an XML formatted file, following the agreed structure (XSD) and business rules.
- 2) The XML file is uploaded to the Agency's servers. For this purpose, a dedicated storage area is made available on the Agency's servers for each Member State (NRE).
- 3) The uploaded XML file is validated by the system, in order to approve the import of the data into the RINF database. The validation will include business rules and quality checks (format of data, management of reference lists, etc.).
- 4) Upon successful validation, the data can be imported into the RINF database if the NRE decided so.
  - a. Any existing data for the particular Member State will be deleted with every new import performed by the NRE.
  - b. The files that are successfully imported are archived in the Agency for future reference.

According to the Regulation, after 1<sup>st</sup> Jan 2021, the XML formatted file should/ shall be then directly uploaded in the RINF application by the IM.

### 3.5.2 Validation

In order to perform a validation of RINF data, each NRE will need to follow these steps:

The NRE will connect to the data management module and upload the RINF dataset, containing the RINF data of the particular Member State.

After the data transfer has been completed, the NRE will access the Validation web application, containing a validation form (authorised access only). The validation form will present the list of all files currently stored in the online storage area of that MS, and also a visual indication of whether a dataset import is pending.

The NRE will select for validation one of the files presented in the validation Form.

Alternatively, the user has the option to specify whether the file should also be imported after successful validation (this step additionally ask the user to confirm the selection since it will not be possible to deselect the file selected for import).

The Validation module validates the uploaded file and presents a report with the validation results.

a. If the option for the file to be imported was selected and the validation succeeded, then the file will be moved to a secure location in the file system and the data imported and displayed in the RINF application. From this point onward, the file cannot be accessed.

### 3.5.2.1 Restrictions

The following restrictions apply for the Validation module:

- 1) Each NRE user can only access the file area which is allocated to his MS. No access is provided to files from other MS.
- 2) Each Member State can only have one dataset file pending for import. It is not possible to select "Validate & Import" if another file is already pending import.

Once a dataset file is pending import, it is not possible to undo the forthcoming import

### 3.5.3 Preproduction environment

The same version of the RINF application as the one installed in production is installed in a preproduction environment and available for NREs and IMs to test their files. This will ensure that the datasets are valid and adhere to the specified business rules and therefore they will not be rejected by the importing mechanism of the production environment.

### 4 STRATEGY OF UPGRADING THE RINF APPLICATION

# 4.1 Article 2.3. of the new RINF Regulation:

The new release of the RINF application, implementing the RINF Regulation, is planned to be placed in "preproduction environment" in August 2019.

In addition with the requirements of the RINF Regulation.

- The Agency has adapted the validation process to allow a backward compatibility. Xml files compatible with the previous Decision and currently used by NREs will be go on validated by the RINF application.
- A new functionality called "reference documents management" is available and allow NREs to upload documents whose references are given by new parameters.
- The new visualisation (via ArcGIS) is stable.

# 4.2 Article 6 of the new RINF Regulation / Further developments

Article 6 of the RINF Regulation foresee the following developments: see copy of the article below.

- "1. The Agency, taking into account the result of a cost-benefit analysis, shall update the RINF application by 1 January 2021 in order to:
- (a) streamline the process of updating data in the RINF Application in order to allow infrastructure managers to update information as soon as it becomes available;
- (b) improve the description of the network so as to display its geometry accurately;
- (c) provide information regarding possible routing on the network;
- (d) provide means for alerting railway undertakings regarding changes in the RINF Application relevant to them.
- 2. By 16 January 2022, the Agency, taking into account the result of a cost-benefit analysis, shall update the RINF application to enable the collection and insertion of information necessary for the Route Book referred to in Appendix D2 to Commission Implementing Regulation xxx (OPE TSI). Each Member State shall ensure that its register of infrastructure provides the information necessary for the Route Book one year after the RINF Application has been updated.
- 3. Further developments of the RINF application may create a data system feeding into all electronic information flows in respect of the Union rail network."

These further developments are not in the scope of this current guide

#### 5 APPENDICES

## 5.1 List of parameters: table 5

In order to facilitate the provision of data, as interim solution in case of missing data, it was proposed to use a Not Yet Available (NYA) attribute value in the RINF set of data to indicate the non-availability of data. Providers of data will be duly informed three month in advance of the removal of this option when decided.

A parameter is mandatory to be provided when it corresponds to a core parameter (defined in table 1 of the RINF Regulation) or when the corresponding item exists on the network that is described in accordance with the deadlines in Table 1 of the RINF Regulation. In this case, the possible allowed values for the applicability are Y or NYA (not yet available).

The status "Mandatory" has been deleted from the description of parameters in table 5.

When a parameter is not identified as a core parameter, the possible allowed values for the applicability are N, Y, NYA. It is not mandatory to provide an xml line for this kind of parameters.

### Please note that:

The validation of any xml file requires the provision of at least a line for each parameter whose applicability status is "Y" or "NYA".

It is allowed, until 16 January 2020, not to provide an xml line for new parameters whose submission deadline is 16 January 2020.

# Please note that:

The parameters deleted in the RINF Regulation will be kept and stay able to be imported until 2020. They will be withdrawn after 16 January 2020

#### Please not that:

The new validation process allows backward compatibility for the import of data until 16 January 2020 or 1 January 2021 depending the status of the corresponding parameters in the table 1 of the annex of the regulation.

There is one exception we have decided not to accommodate.

Most of you have already provided values for parameter 1.1.1.3.7.19 / TSI Compliance of rules on sand characteristics / SOL Track Parameter CTD\_TSISandCharacteristics. This parameter is only applicable if the nominal track gauge corresponds to 1520 mm. CCS TSI: 3.1.4.2 of Annex A, index 77 that is the document that describes the TSI conditions of compliance indicates an open point for 1435 mm gauge. Any value indicating TSI compliance is wrong. The applicability of the parameter for other values than "1520" should be "not applicable".

The validation process will indicate:

Parameter TSI Compliance of rules on sand characteristics - "CTD\_TSISandCharacteristics"

The parameter does not respect the following applicability rule(s):

The parameter has to be defined as applicable when the following condition is met: Both of the following rules are satisfied: Parameter Type of train detection system - "CTD\_DetectionSystem" has a value equal to "10". Parameter Nominal track gauge - "ITP\_NomGauge" has a value equal to "40".

There is also a change regarding the unique OP Identification format of the Border Point. The validation process will not accept other values instead of these starting with EU....

#### Please note that:

- CharacterString means any sequence of alphanumeric characters (Latin letters and Arabic figures) and other symbols and spaces.
- Predefined CharacterString means the sequence of Latin letters, Arabic figures, symbols and spaces specified and organized in specific way.
- Predefined list list of values (Predefined CharacterString) settled as only possible for the selection; sometimes selected element requires introduction of the additional value in predefined format.
- The following symbols mean: Y= yes, N= no, NYA= not yet available.
- When [NN....N] is used inside brackets, it represents a number.

In case the number is smaller than the maximum allowed value, it should not be prefixed with zero(s): example of valid entry for:

- o length of section of line where the format is [NNN.NNN]: [76.012] is valid but [076.012] is not valid;
- o Maximum permitted speed where the format is [NNN]: [80] is valid but [080] is not valid;
- In case the number of decimals provided is less than the maximum allowed, the value is not rejected by the validation process: example of valid entry for;
  - geographical coordinates where the format is Longitude (±NN.NNNN), (±45.1234) is valid but also (±45.123).
- When the number of an EC declaration of verification is required the data presentation is:

# CC/RRRRRRRRRRRRRRR/YYYY/NNNNNN

- § CC Country code (2 letters) based on a standard ISO 3166 alpha-2 except for United Kingdom: UK
- § RRRRRRRRRRR National registration number of the applicant. The legal registration/identification number, given either by Tax Office or by Commercial Register or some other authority that registers companies in Member State.

- § 14 digits, if number is shorter the first digits should be left blank-00, like in case of counter.
- § YYYY Year when document issued
- § NNNNNN 6 digits counter unique number by applicant. The counter shall be progressive number to be incremented by one unit each time a declaration is issued. Every year the counter shall restart from zero. The counter is related to the issuing body

Example: BL/00001002036258/2009/000001

- § The validations performed by the system are the following:
  - The number of characters and the slashes must be provided in the following manner: [CC/RRRRRRRRRRR/YYYY/NNNNNN]
    - The YYYY characters must be a number in the of 1900-2100.
  - The NNNNNN characters must be digits. The same data presentation will be used for the EI declaration of demonstration.

Please note also (as explained above in 2.2.8) that:

- Date of validity of current data collected in RINF is the same as date of export from the MS' registers of infrastructure to the RINF application.
- Validity dates in the future may be inserted in the RINF XML for Operational Point, Section of Line, Track, Siding, Tunnel and Platform. These dates are not described as attributes of parameter.
- However, if an IM wants to publish a set of data concerning their future value, the separate validity of those data from the date in future may be given. Then the set of data of the 'object', where those data are included, has to be added to current values by repeating the 'object' with the label of the date of validity in future (see explanations for Common User Interface in 3.1.h).
- Please note that some parameters are asking for documents. Only the references of these documents are required to be filled in the RINF application. The Agency is being developing a module for allowing this functionality. The principle is that the NRE will upload in the RINF application via this module, progressively, by IM, all the referenced documents which will be available via a link on the description page of the characteristics of the tracks.

Table 5: Characteristics of RINF parameters

Number	1
Title	MEMBER STATE
XML Name	MemberStateCode

General Explanation	The name of the MS is not a parameter. The MS recognition is automatically derived from the data export delivered by each NRE.
Applicable	Υ
Can be repeated	N
Validation	For each national RINF data shall be one member state defined.
Number	1.1
Title	
	SECTION OF LINE
Can be repeated	Υ
General Explanation	Each network shall be described using as many SoLs as necessary. Each SoL is generated and identified by OP IDs at start and at end. A SoL only belongs to one Line.
Validation	RINF data are valid with zero or more SoLs declared in it.

Number	1.1.0.0.0
Title	Generic information
Can be repeated	N
Number	1.1.0.0.0.1
Title	IM's Code
XML Name	SOLIMCode
Definition	Infrastructure Manager means any body or undertaking that is responsible in particular for establishing and maintaining railway infrastructure or a part thereof.
Applicable	Υ
Can be repeated	N
Data presentation	[AAAA]
Explanations	The Code is a unique identifier for the Infrastructure Manager and it shall be verified on national level.  - If the IM is subject to TAF/TAP TSIs, it corresponds to the code used in TAF/TAP TSIs.  - In other cases, it corresponds to the "organisation code" assigned by the Agency for the specific needs of the RINF  Each Section of Line may concern only one IM.
Reference	Article 3 (2) of Directive 2012/34/EU and article 3.4.2 of Decision (EU) 2018/1614 (EVR Decision)
Validation	No verification by RINF application. Check of the link between MS and IM's Code must be done nationally.
Number Title XML Name Definition Applicable Can be repeated	1.1.0.0.0.2  National line identification  SOLLineIdentification  Unique line identification or unique line number within Member State  Y
San Screpeuted	N
Data presentation	CharacterString
General explanations	Each SoL can belong to only one national line.  In case when SoL is the track connecting between OPs within big node (resulting from division of big station into several smaller) the line can be identified using the name of this track.

Title	1.1.0.0.0.3
	Operational Point at start of Section of Line
XML Name	SOLOPStart
Definition	Unique OP ID at start of Section of Line (kilometres increasing from start OP to the end OP).
Applicable	Υ
Can be repeated	N
Data presentation	Predefined CharacterString:
	[AA+AAAAAAAA] = country code (ISO) + alphanumeric OP code
	Each SoL may have only one start OP, and each OP has unique OP ID within the MS. The "uniqueOPID" is defined in parameter 1.2.0.0.0.2.
General explanations	Each SoL has the principal direction of the traffic defined by increasing kilometres running from the start OP to the end OP.
	That is why the start OP is always located at lowest kilometre of the line within the SoL.
	Data collected in the UK in miles will be transformed to km for uploading to the RINF application.
Validation	OP ID must exist in the MS file of RINF.  The value of this parameter must be different from 1.1.0.0.0.4.
	No validation will be performed by RINF application regarding which is the start and which the end OP. This requires national verification.
Number	1.1.0.0.0.4
Title	
Title	Operational Point at end of Section of Line
XML Name	SOLOPEnd
XML Name	SOLOPEnd Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end
XML Name Definition	SOLOPEnd Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end OP)
XML Name Definition Applicable	SOLOPEnd  Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end OP)  Y  N
XML Name Definition Applicable	SOLOPEnd Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end OP)  Y
XML Name Definition  Applicable Can be repeated	SOLOPEnd Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end OP)  Y  N  Predefined CharacterString:
XML Name Definition  Applicable Can be repeated	SOLOPEnd  Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end OP)  Y  N  Predefined CharacterString:  [AA+AAAAAAAAA] = country code (ISO) + alphanumeric OP code  Each SoL may have only one end OP, and each OP has unique OP ID within the MS. The
XML Name Definition  Applicable Can be repeated  Data presentation  General	SOLOPEnd  Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end OP)  Y  N  Predefined CharacterString:  [AA+AAAAAAAAA] = country code (ISO) + alphanumeric OP code  Each SoL may have only one end OP, and each OP has unique OP ID within the MS. The "uniqueOPID" is defined in parameter 1.2.0.0.0.2.  Each SoL has the principal direction of the traffic defined by increasing kilometres running from the start OP to the end OP (which later is the reference for definition of
XML Name Definition  Applicable Can be repeated  Data presentation  General	SOLOPEnd  Unique OP ID at end of Section of Line (kilometres increasing from start OP to the end OP)  Y  N  Predefined CharacterString:  [AA+AAAAAAAAA] = country code (ISO) + alphanumeric OP code  Each SoL may have only one end OP, and each OP has unique OP ID within the MS. The "uniqueOPID" is defined in parameter 1.2.0.0.0.2.  Each SoL has the principal direction of the traffic defined by increasing kilometres running from the start OP to the end OP (which later is the reference for definition of the traffic direction for each track of the SoL).

	No validation will be performed by RINF application regarding which is the start and which the end OP. This requires national verification.
Number	1.1.0.0.0.5
Title	Length of section of line
XML Name	SOLLength
Definition	Length between operational points at start and end of section of line.
Applicable	Υ
Can be repeated	N
Data avacantation	Predefined CharacterString: [NNNN.NNN]
Data presentation	Explanation on data presentation:  The distance is given in kilometres with decimals of 0,001. Data collected in the UK in miles will be transformed to km for uploading to the RINF application.
General Explanations	The length of SoL is theoretical distance between centre points of Ops which are selected in such a way to represent the average value for all tracks within the SoL. It is
-	advised to include distances applied by IM for commercial purposes.  No validation will be performed by RINF application regarding the length of SoL. This
Validation	requires national verification.
Number	1.1.0.0.0.6
Title	Nature of Section of Line
XML Name	SOLNature
Definition	Kind of Section of Line expressing size of presented data which depends on fact whether it connects OPs generated by division of a big node into several OPs or not.
Applicable	Υ
Can be repeated	N
Data presentation	Single selection from the predefined list:
	Regular SoL Link
	Data Presentation explanation:
	A link is to allow a train to go from an OP to another OP without a "regular section of line" between them.
	If the value of this parameter is "Link", then for all tracks belonging to this SoL, all the parameters of the following groups of parameters are not applicable:
Validation	- 1.1.1.1 Infrastructure subsystem
	- 1.1.1.2 Energy subsystem
	- 1.1.1.3 Control-command and signalling subsystem

	1.1.1
	RUNNINGTRACK
	SOLTrack
Can be repeated	Υ
Explanation	There might be more than one track within the Section of Line, so then the whole set data for track has to be repeated for each track within the SoL.
	1.1.1.0.0
	Generic information
Can be repeated	N
Explanation	Each track may have only one set of 'Generic information'.
Number	1.1.1.0.0.1
Title	Identification of track
XML Name	SOLTrackIdentification
	SOLITACRIGETUTICATION
Definition	Unique track identification or unique track number within Section of Line
Definition Applicable	
	Unique track identification or unique track number within Section of Line
Applicable	Unique track identification or unique track number within Section of Line Y
Applicable Can be repeated	Unique track identification or unique track number within Section of Line  Y  N

Number	1.1.1.0.0.2
Title	Normal running direction
XML Name	SOLTrackDirection
Definition	The normal running direction is:
	<ul> <li>the same as the direction defined by the start and end of the SoL or</li> <li>the opposite to the direction defined by the start and end of the SoL or</li> </ul>
	- both directions defined for SoL.
Applicable	Υ
Can be repeated	N
	Single selection from the predefined list:  N O
Data presentation	В
	Explanation on data presentation:
	N - same direction as in SoL
	O - opposite direction to as in SoL
	B - both directions N and O
Number	1.1.1.1
Title	Infrastructure subsystem
Can be repeated	N
Explanation	For one track only one set of data on each subsystem is required.
Number	1.1.1.1
Title	Declarations of verification for track
XML Name	IDE
Can be repeated	N
	This group of data concerns infrastructure subsystem on the specific track.
Explanation	There are two types of declarations included: EC declaration issued according to mandatory procedure defined by Interoperability Directive and EI declaration which may be issued according to the voluntary procedure defined by EC Recommendation [22].
	1.1.1.1.1
	EC declaration of verification for track (INF)
	SOL Track Parameter IDE_ECVerification
	Unique number for EC declarations following format requirements specified in the
Applicable	'Document about practical arrangements for transmitting interoperability documents' Y/N/NYA
Applicable	Explanation on applicability:
	"Y" shall be selected in case when EC declaration was issued

	Υ
Can be repeated	Explanation on repeatability:
	The parameter may be repeated only when several EC declarations were issued related to the INF subsystem
Data presentation	Predefined CharacterString:
	[CC/RRRRRRRRRRRR/YYYY/NNNNNN]
General explanations	With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the INF TSI now includes all the networks (TEN and off-TEN) with the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 mm
Reference concerning format	'Document about practical arrangements for transmitting interoperability documents' [23]
Validation	The validation is described before this Table

in the 'Document about practical arrangements for transmitting interoperability documents'  Y/N/NYA  Explanation on applicability:  "Y" shall be selected in case when the demonstration was executed and EI declarations was issued.  Can be repeated  Y  Predefined CharacterString:  [CC/RRRRRRRRRRRRRRR/YYYY/NNNNNN]]  It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  General  The procedure for demonstration that existing network fits to requirements of the	Number	1.1.1.1.2
Definition  Unique number for El declarations following the same format requirements as spein the 'Document about practical arrangements for transmitting interoperability documents'  Y/N/NYA  Explanation on applicability:  Applicable  "Y" shall be selected in case when the demonstration was executed and El declarat was issued.  Can be repeated  Y  Predefined CharacterString:  Data presentation  [CC/RRRRRRRRRRRR/YYYY/NNNNNN])  It may happen that several El declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  General explanations  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when El declaration do not exist then the param is optional. If El declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'	Title	EI declaration of demonstration for track (INF)
in the 'Document about practical arrangements for transmitting interoperability documents'  Y/N/NYA Explanation on applicability:  "Y" shall be selected in case when the demonstration was executed and EI declarated was issued.  Can be repeated  Predefined CharacterString:  Data presentation  [CC/RRRRRRRRRRRRR/RYYYY/NNNNNN])  It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  General explanations  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when EI declaration do not exist then the paramis optional. If EI declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'	XML Name	SOL Track Parameter IDE_EIDemonstration
Explanation on applicability:  "Y" shall be selected in case when the demonstration was executed and EI declaration was issued.  Can be repeated  Predefined CharacterString:  [CC/RRRRRRRRRRRR/YYYY/NNNNNN])  It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  General explanations  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when EI declaration do not exist then the paramis optional. If EI declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'	Definition	
Applicable  "Y" shall be selected in case when the demonstration was executed and EI declarations was issued.  Can be repeated  Y  Predefined CharacterString:  [CC/RRRRRRRRRRRR/YYYY/NNNNNN])  It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  General explanations  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when EI declaration do not exist then the paramis optional. If EI declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'		
"Y" shall be selected in case when the demonstration was executed and EI declaration was issued.  Can be repeated  Y  Predefined CharacterString:  [CC/RRRRRRRRRRRRRRRR/YYYY/NNNNNN])  It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  General explanations  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when EI declaration do not exist then the paramis optional. If EI declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'	Annlicable	Explanation on applicability:
Data presentation  [CC/RRRRRRRRRRRRRRRR/YYYY/NNNNNN])  It may happen that several El declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when El declaration do not exist then the param is optional. If El declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  [23] Document about practical arrangements for transmitting interoperability documents'	Дрисаые	"Y" shall be selected in case when the demonstration was executed and El declaration was issued.
CC/RRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRR	Can be repeated	Y
[CC/RRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRRR		Predefined CharacterString:
repeated as many times as many declarations were issued.  General explanations  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when El declaration do not exist then the paramis optional. If El declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'	Data presentation	[CC/RRRRRRRRRRRRR/YYYY/NNNNNN])
General explanations  The procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when EI declaration do not exist then the paramis optional. If EI declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'		It may happen that several EI declarations were issued – then parameter has to be
explanations  Ine procedure for demonstration that existing network fits to requirements of the is executed on voluntary basis, so when EI declaration do not exist then the paramis optional. If EI declaration was not issued, then field shall be left empty.  [22] Recommendation 2014/881/EU  Reference  [23] Document about practical arrangements for transmitting interoperability documents'		repeated as many times as many declarations were issued.
Reference [23] Document about practical arrangements for transmitting interoperability documents'		The procedure for demonstration that existing network fits to requirements of the TSIs is executed on voluntary basis, so when EI declaration do not exist then the parameter is optional. If EI declaration was not issued, then field shall be left empty.
[23] Document about practical arrangements for transmitting interoperability documents'		[22] Recommendation 2014/881/EU
Validation The validation is described before this Table, in section 2.3.	Reference	
	Validation	The validation is described before this Table, in section 2.3.

Number	1.1.1.1.2
Title	Performance parameters
XML Name	IPP
Can be repeated	N
Explanation	For each track only the one set of 'Performance parameters' may be presented.

Number	1.1.1.2.1
Title	TEN classification of track
XML Name	SOL Track Parameter IPP_TENClass
Definition	Indication of the part of the trans-European network the line belongs to.
Applicable	Y/NYA
Can be repeated	Υ
Data presentation	Single selection from the predefined list:  Part of the TEN-T Comprehensive Network  Part of the TEN-T Core Freight Network  Part of the TEN-T Core Passenger Network  Off-TEN
Reference	[24] Regulation (EU) No 1315/2013/EC  Article 39 2. freight lines of the core network as indicated in Annex I: at least 22,5 t axle load, 100 km/h line speed and the possibility of running trains with a length of 740 m.
Number	<u>1.1.1.1.2.1.2</u>
Title	TEN GIS identity
XML Name Definition	SOL Track Parameter IPP TENGISID Indication of the GIS identity (GIS ID) of the section of TEN-T database to which the track belongs
Explanation on definition	
Applicable	<u>Y/N/NYA</u>
	Y if the answer to parameter 1.1.1.1.2.1 is not off TEN
Can be repeated	<u>N</u>
Data presentation	Characterstring
References Example	TENtec is the European Commission's information system to coordinate and support the Trans-European Transport Network Policy (TEN-T). For more details about the system and the legal background please follow the link to the TENtec Public Portal:  http://ec.europa.eu/transport/infrastructure/tentec/tentec-portal/  Some member states representatives have access to: https://webgate.ec.europa.eu/tentec/policy/omc4/screen/home that makes available the list of sections of the TEN network with their GIS ID.  The list of sections of the TEN network with their GIS IDs can be requested via MOVE-TENTEC-PUBLIC@ec.europa.eu

Number	
	1.1.1.1.2.2
Title	Category of Line
XML Name	SOL Track Parameter IPP_LineCat
Definition	Classification of a line according to the INF TSI
Explanation on definition:	INF TSI classifies lines based on the type of traffic (traffic code).
	TSI categories of line shall be used for the classification of existing lines to define a target system so that the relevant performance parameters will be met.
Applicable	Y/N/NYA Explanation on applicability:
	Contrary to the Status of core parameter in the RINF Regulation, N can be used for the applicability for the following reasons.
	Technical scope of the INF TSI now includes all the networks (TEN and off-TEN) for nominal track gauges 1435, 1520, 1524, 1600 and 1668 mm
	Not applicable when track is not included in technical scope of the TSI.  Not applicable when tables 2 or 3 of 4.2.1(7) of INF TSI are not usable on the UK network for Great Britain according to the specific case 7.7.17.1(2).
Can be repeated	Υ
	Explanation on repeatability:
	When more than one value of the parameter has to be published, then parameter has to be repeated as many times as many values of the parameter will be published.
	Single selection of the following traffic codes
	Passengers:
	P1
	P2
	P3
	P4
	P5
Data presentation	P6
	P1520
	P1600
	Freight:
	F1
	F2
	F3
	F4

	F1520
	F1600
	Explanation on data presentation:
	The TSI category of line is a combination of traffic codes. For lines where only one type of traffic is carried (for example a freight only line), a single code can be used to describe the requirements; where mixed traffic runs the category will be described by one or more codes for passenger and freight in case of two types of traffic. Then the parameter is repeated if relevant. The combined traffic codes describe the envelope within which the desired mix of traffic can be accommodated.
Example	If a line is operated by passenger trains with speed of 250 km/h, local commuter trains with speed of 120 km/h and heavy freight trains in the night, then the best combination of traffic codes seems to be P2, P5 and F1.
	Then, the TSI category of line for this case would simply be P2-P5-F1.
References	INF TSI 4.2.1

Number	1.1.1.1.2.3
Title	Part of a Railway Freight Corridor
XML Name	SOL Track Parameter IPP_FreightCorridor
Definition	Indication whether the line is designated to a Railway Freight Corridor
Applicable	Y/N/NYA
	Explanation on applicability:  Not applicable if the line is not part of an RFC
Can be repeated	Υ
	Single selection from the predefined list:  Rhine-Alpine RFC (RFC 1)
	North Sea-Mediterranean RFC (RFC 2)
	Scandinavian – Mediterranean RFC (RFC 3)
	Atlantic RFC (RFC 4)
	Baltic-Adriatic RFC (RFC 5)
Data was and ation	Mediterranean RFC (RFC 6)
Data presentation	Orient-EastMed RFC (RFC 7)
	North Sea-Baltic RFC (RFC 8)
	Rhine – Danube RFC (RFC 9)
	Alpine-Western Balkan RFC (RFC 10)
	Amber RFC (RFC 11)
	Explanation on data presentation:
	If a line belongs to several corridors, repeat the parameter.
General Explanation	A line can belong to one or several Rail Freight Corridor (RFC)
References	[6] Reg 913/2010/EC

Number	1.1.1.1.2.4
Title	Load capability
XML Name	SOL Track Parameter IPP_LoadCap
Definition	A combination of the line category and speed at the weakest point of the track.
Explanation on definition:	At this step, RINF does not allow to enter additional data referred to additional speed regulations and operating requirements relating to locomotives (e.g., locomotive classes and associated maximum speed) or traffic types (e.g., maximum speed of freight traffic or passenger traffic).
Applicable	Y/NYA
Can be repeated	Y Explanation on repeatability:  When more than one value of the parameter has to be published, then parameter has to
	be repeated as many times as many values of the parameter will be published.
Data presentation	Single selection from the predefined list of load models representing line category which is amended by value of speed [km/h] permitted for a specific load model:  A [NNN] B1 [NNN] B2 [NNN] C2 [NNN] C3 [NNN] C4 [NNN] D4 [NNN] D4 [NNN] D5 [NNN] E4 [NNN] E5 [NNN]  Route Availability which is amended by value of speed [miles/h] permitted for a specific load model  RA1 [NNN] RA2 [NNN] RA3 [NNN] RA4 [NNN] RA5 [NNN] RA6 [NNN] RA6 [NNN] RA7 [NNN] RA7 [NNN] RA9 [NNN] RA10 [NNN]
General explanation	The load capability describes the weakest point of this track within this section of line (which is normally a bridge or other sub-track structure).  It is expressed as a combination of the line category and speed permitted for trains exerting loads defined for this line category.  The result of the classification process is set out in EN 15528:2008 (Annex A) and referred to in that standard as "Line Category".  It represents the ability of the infrastructure to withstand the vertical loads imposed by

	The Load capability for UK consists of RA and speed in miles per hour. RA shall be applied according to UK Railway Group Standard GE/RT8006, Issue Two, September 2010.
	More than one combination may be published for the same track if applicable, but it has to be done by repetition of the parameter with one value selected only – that is why 'Y' is given in line 'Can be repeated'
	For the following cases, it is not possible to use EN 15528:2008 categories of line classification:
	TSI categories of line P1 (passenger traffic at speeds greater than 250 Km/h)
	TSI categories of line P2 (passenger traffic at speeds greater than 200 Km/h and less than 250 Km/h)
	TSI categories of line P1520 and F1520 (passenger traffic or freight traffic at any speed)
	TSI categories of line P1600 and F1600 (passenger traffic or freight traffic at any speed)
	The set of selected data may include: B2-160, D4-120 and E5-100
	When classifying infrastructure lines into line categories, the following options shall be used by the infrastructure manager to optimize freight traffic:
	Option 1: determination of the line category at maximum freight traffic speed (maximum 120 Km/h)
Example	Option 2: determination of a line category at an associated lower speed (less than the maximum freight traffic speed)
	Example of option 1 (Annex F of EN 15528:2008): In a given track, if the traffic is mixed, the local speed of the line is 90 Km/h and the determined line category is D4 at a maximum of 90 Km/h, the information displayed should be: D4/90.
	Example of option 2 (Annex F of EN 15528:2008): In a given track, if the traffic is mixed, the local speed of the line is 120 Km/h and the determined line category is C4 at a maximum of 120 Km/h and D4 at maximum of 90 Km/h, the information displayed should be: C4/120 and D4/90.
	INF TSI: Paragraph 7.6
References	CR INF TSI: Paragraph 7.5
	Δ

<u>Number</u>	<u>1.1.1.1.2.4.1</u>
<u>Title</u>	National classification for load capability
XML Name	SOL Track Parameter IPP_NCLoadCap
<u>Definition</u>	National classification for load capability
Explanation on definition:	National classification for load capability
<u>Applicable</u>	<u>Y/N/NYA</u>
Can be repeated	<u>Y</u>
<u>Data presentation</u>	Characterstring
General explanation	Some Networks are using National classification for load capability (instead of parameter 1.1.1.1.2.4 Load capability that provide load capability in accordance with EN 15528) (e.g. the French IM SNCF reseau is using the concept of "groupe Demeaux" with the following definition is "Groupe de classification de la voie tenant compte de la résistance de son armement en flexion verticale ».

<u>Example</u>	
References	Annex D1 OPE TSI
<u>Neterefices</u>	Allilex D1 OFE 131
<u>Number</u>	
<u>Title</u>	1.1.1.2.4.2
XML Name	Compliance of structures with the High Speed Load Model (HSLM)
	SOL Track Parameter IPP_HSLMCompliant  For sections of line with a maximum permitted speed of 200km/h or more information
<u>Definition</u>	regarding the procedure to be used to perform the dynamic compatibility check
Explanation on definition:	
	Y/N/NYA
<u>Applicable</u>	Y if the maximum permitted speed of the running track is more than 200km/h and the structures within the section of line are all compatible with the High Speed Load Model (HSLM); information regarding the procedure to be used to perform the dynamic compatibility check shall be provided as well
Can be repeated	N
5	Single selection from the predefined list:
<u>Data presentation</u>	<u>Y/N</u>
<u>General</u> <u>explanation</u>	
<u>Example</u>	
	Annex D1 OPE TSI
<u>References</u>	4.2.7.1.2(2) of Regulation No 1299/2014 TSI INF
	HSLM is defined in EN 1991-2:2003/AC:2010 paragraphs 6.4.6.1.1 (3) to (6) inclusive
<u>Number</u>	<u>1.1.1.1.2.4.3</u>
<u>Title</u>	Railway location of structures requiring specific checks
XML Name	SOL Track Parameter IPP_StructureCheckLoc
<u>Definition</u>	Localisation of structures requiring specific checks
Explanation on	The railway location identifies the location of the structure in the system of reference of
definition:	the line to which the track belongs
<u>Applicable</u>	Y/N/NYA
Can be repeated	<u>Y</u>
Data presentation	Predefined CharacterString:
	[±NNNN.NNN]
explanation on Data presentation	Explanation on data presentation:

	The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001). Contrary to the regulation, the reference to the line is not needed: the parameter is still attached to the track of the line
General explanation	E.g. the IM A knows that its bridge X might have problems with combination of speed and load above a certain limit values Z, and for that the IM A has a specific procedure W for the check to be done; if the vehicle operation is intended to be within this case (above the limit Z), then RU shall proceed in accordance to the procedure W; therefore the bridge X shall be referred to in the parameter of the RINF: 1.1.1.1.2.4.3 / Railway location of structures requiring specific checks.  Please Note that this is a hypothetic example, as the Agency doesn't know the specific procedures of the IMs.  It could be those bridges that have not been designed according to the HSLM dynamic load model.
<u>References</u>	
<u>Number</u>	<u>1.1.1.1.2.4.4</u>
<u>Number</u> <u>Title</u>	1.1.1.1.2.4.4  Document with the procedure(s) for static and dynamic route compatibility checks
<u>Title</u>	Document with the procedure(s) for static and dynamic route compatibility checks  SOL Track Parameter IPP_StructureCheckDocRef  Electronic document available in two EU languages from the IM stored by the Agency with:  - precise procedures for the static and dynamic route compatibility checks;  Or
Title  XML Name	Document with the procedure(s) for static and dynamic route compatibility checks  SOL Track Parameter IPP_StructureCheckDocRef  Electronic document available in two EU languages from the IM stored by the Agency with:  - precise procedures for the static and dynamic route compatibility checks;
Title XML Name Definition  Applicable  Can be repeated	Document with the procedure(s) for static and dynamic route compatibility checks  SOL Track Parameter IPP_StructureCheckDocRef  Electronic document available in two EU languages from the IM stored by the Agency with:  - precise procedures for the static and dynamic route compatibility checks;  Or - relevant information for carrying out the checks for specific structures.
Title XML Name Definition  Applicable	Document with the procedure(s) for static and dynamic route compatibility checks  SOL Track Parameter IPP_StructureCheckDocRef  Electronic document available in two EU languages from the IM stored by the Agency with:  - precise procedures for the static and dynamic route compatibility checks;  Or  - relevant information for carrying out the checks for specific structures.  Y/N/NYA
Title XML Name Definition  Applicable  Can be repeated	Document with the procedure(s) for static and dynamic route compatibility checks  SOL Track Parameter IPP_StructureCheckDocRef  Electronic document available in two EU languages from the IM stored by the Agency with:  - precise procedures for the static and dynamic route compatibility checks;  Or  - relevant information for carrying out the checks for specific structures.  Y/N/NYA  Y  The references of the different documents can be described by repeating the parameter
Title XML Name Definition  Applicable  Can be repeated  Data presentation  General	Document with the procedure(s) for static and dynamic route compatibility checks  SOL Track Parameter IPP_StructureCheckDocRef  Electronic document available in two EU languages from the IM stored by the Agency with:  - precise procedures for the static and dynamic route compatibility checks;  Or  - relevant information for carrying out the checks for specific structures.  Y/N/NYA   Y  The references of the different documents can be described by repeating the parameter Characterstring  The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the

Number	1.1.1.1.2.5
Title	Maximum permitted speed
XML Name	SOL Track Parameter IPP_MaxSpeed
Definition	Nominal maximum operational speed on the line as a result of INF, ENE and CCS subsystem characteristics expressed in kilometres/hour.
Explanation on definition	'Speed on the line' shall be understood as speed on the track of the section of line in question.
Applicable	Y/NYA

Can be repeated	N	
Data presentation	[NNN]	
Limit values	min=0, max=500	
References	INF TSI:  All HS and CR TSIs (ENE, CCS)	
Example	When INF allows 160 km/h, ENE allows 100 km/h and CCS allows 120 km/h, the max permitted speed on this track of this section of line is 100 km/h.  When for freight trains operation the maximum permitted speed is 100 km/h, and for passenger trains it is 160 km/h, as the value of maximum permitted speed shall be presented 160 km/h only.	
Number	1.1.1.1.2.6	
Title	Temperature range	
XML Name	SOL Track Parameter IPP_TempRange	
Definition	Temperature range for unrestricted access to the line according to European standard.	
Applicable	Y/NYA	
Can be repeated	N	
Data presentation	Single selection from the predefined list:  T1 (-25 to +40) T2 (-40 to +35)	
	T3 (-25 to +45) Tx (-40 to +50)	

Number	1.1.1.2.7
Title	Maximum altitude
XML Name	SOL Track Parameter IPP_MaxAltitude
Definition	Highest point of the section of line above sea level in reference to Normal Amsterdam's Peil (NAP).
Applicable	Y/NYA
Can be repeated	N
Data presentation	[+/-][NNNN]
General explanation	Normaal Amsterdams Peil (NAP), called also Amsterdam Ordnance Datum, it is a vertical datum commonly in use in Europe as reference level for the description of the height of objects in relation to the sea level.  The value of the parameter shall be given in metres, with tolerance of +/-100m.
Number	1.1.1.2.8
Title	Existence of severe climatic conditions
XML Name	SOL Track Parameter IPP_SevereClimateCon

Definition	Climatic conditions on the line are severe according to European standard.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
	Explanation on data presentation:  'Y' shall be selected in case when snow, ice and hail conditions (as defined in TSIs and European standards) indicate that climatic conditions are severe. 'N' to be selected otherwise.
References	EN 50125-1 (1999): 4.7 and 4.8 LOC&PAS TSI:4.2.6.1.2 CR LOC&PAS TSI: 4.2.6.1.5.

Number	1.1.1.1.3
Title	Line layout
XML Name	ILL
Can be repeated	N
Explanation	For the specific track only one line layout may be described

Number	1.1.1.3.1.1
Title	Gauging
XML Name	SOL Track Parameter ILL_Gauging
Definition	Gauges as defined in European standard or other local gauges, including lower or upper part.
Applicable	Y/NYA
Can be repeated	Υ
Explanation on definition	Gauges as defined in European standard or other local gauges, including lower or upper part.  In accordance with point 7.3.2.2 in Regulation (EU) 1302/2014, sections of lines of the United Kingdom of Great Britain network may not have gauge reference profile.
Data presentation	Single selection from the predefined list:  GA GB GC G1 DE3 G2 GB1 GB2

BE1 BE2 BE3 FR-3.3 PTb PTb+ PTc FIN1 SEa SEc DE1 DE2 Z-GCD UK1 UK1DI W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
BE2 BE3 FR-3.3 PTb PTb+ PTc FIN1 SEa SEc DE1 DE2 Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
FR-3.3 PTb PTb+ PTc FIN1 SEa SEc DE1 DE2 Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
FR-3.3 PTb PTb+ PTc FIN1 SEa SEc DE1 DE2 Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
PTb+ PTc FIN1 SEa SEc DE1 DE2 Z-GCD UK1 UK1 D  W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
PTC FIN1 SEa SEC DE1 DE2 Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL2 IRL3
FIN1 SEa SEC DE1 DE2 Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
SEa   SEc   DE1   DE2   Z-GCD   UK1   UK1[D]   W6   FS   S   GHE16   GEA16   GEB16   GEC16   IRL1   IRL2   IRL3   IRL3   IRL2   IRL3   IRL3   IRL3   IRL3   IRL5   IRL5
SEC   DE1   DE2   Z-GCD   UK1   UK1[D]   W6   FS   S   GHE16   GEA16   GEC16   IRL1   IRL2   IRL3   IRL3   IRL3   IRL3   IRL3   IRL3   IRL3   IRL3   IRL3   IRL5   IRL5
DE1 DE2 Z-GCD UK1 UK1[D] W6 ES S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
DE2 Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
UK1[D]  W6  FS  S  GHE16  GEA16  GEB16  GEC16  IRL1  IRL2  IRL3
W6 FS S GHE16 GEA16 GEB16 GEB16 GEC16 IRL1 IRL2 IRL3
ES S GHE16 GEA16 GEB16 GEB16 GEC16 IRL1 IRL2 IRL3
S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
GEA16 GEB16 GEC16 IRL1 IRL2 IRL3
GEB16 GEC16 IRL1 IRL2 IRL3
GEC16 IRL1 IRL2 IRL3
IRL1   IRL2   IRL3
IRL2 IRL3
IRL3
GI1
<u>GI2</u>
<u>GI3</u>
GEE10
GED10
AFM 423
NL1
NL2
FR-3.4.1
FR-3.4.2
AFG AFM42F
AFM425
<u>AFM427</u> <u>M30</u>
M80
Tram-train 2.40
<u>Tram-train 2.65</u>
Métrique BA
Métrique SGV
Métrique Cerd.
GB:GČD
GCZ3
<u>GČD</u>
GEI1
<u>GE12</u> GE02
<u>GE13</u>
<u>GEC14</u>
other other
Other values than the already identified in the list above are possible. They will be
Explanations on the
The previous parameters related to the gauge will be deleted Toolwing the mandati
parameters provision of the "gauging" parameter foreseen by the RINF Regulation on 16 Januar
2000
2020.
2020.  References EN 15273-3 (2013): Annex C taking into account corrigendum A1.

	EN15273-3 (2013): Annex C and Annex D
	INF TSI: 4.2.3.1
Number	1.1.1.3.1.2
Title	Railway location of particular points requiring specific checks
XML Name	SOL Track Parameter ILL_GaugeCheckLoc
Definition	Location of particular points requiring specific checks due to deviations from gauging referred to in 1.1.1.1.3.1.1.
Explanation on Definition	The railway location identifies the location of the structure in the system of reference of the line to which the track belongs.  This parameter is applicable when the conditions for the application of the gauge are not fulfilled (for example when the radius is 125 m and the minimum radius admitted for the gauge GC is 150 m). It can also be applicable when the IM wants to highlight also
Applicable  Can be repeated	on a particular point and provide info via parameter 1.1.1.1.3.1.3  Y/N/NYA  This parameter is applicable when the conditions for the application of the gauge are not fulfilled (for example when the radius is 125 m and the minimum radius admitted for the gauge GC is 150 m). It can also be applicable when the IM wants to highlight also on a particular point and provide info via parameter 1.1.1.1.3.1.3  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.
Can be repeated	Υ
Data annountation	Predefined CharacterString:  [±NNNN.NNN]
Data presentation	Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001). Contrary to the regulation, the reference to the line is not needed: the parameter is still attached to the track of the line
References	

Number	1.1.1.3.1.3
Title	Document with the transversal section of the particular points requiring specific checks
XML Name	SOL Track Parameter ILL_GaugeCheckDocRef
Definition	Electronic document available from the IM stored by the Agency with the transversal section of the particular points requiring specific checks due to deviations from gauging referred to in 1.1.1.1.3.1.1. Where relevant, guidance for the check with the particular point may be attached to the document with the transversal section.
Explanations	Only the reference of the document must be provided. The parameter must need to be repeated for each document to be referred.  The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.  The parameter has to be repeated for providing the 2 different translations
Applicable	Y/N/NYA
Can be repeated	Y
Data presentation	CharacterString
References	

Number	1.1.1.3.4
Title	Standard combined transport profile number for swap bodies
XML Name	SOL Track Parameter ILL_ProfileNumSwapBodies
Definition	Coding for combined transport with swap bodies as defined in UIC Code.
Applicable	Y/N/NYA
	Explanation on applicability:
	Contrary to the Status of core parameter in the RINF Regulation, N can be used.
Can be repeated	Υ
	Single selection from the predefined list:
	C 22
	C 25
Data presentation	C 30
zata presentation	C 32
	C 38
	C 45
	C 50
	C 55

	0.60
	C 60
	C 65
	C 70
	C 80
	C 90
	C 341
	C 349
	C 351
	C 357
	C 364
	C 365
	C 371
	C 375
	C 380
	C 384
	C 385
	C 389
	C 390
	C 395
	C 400
	C 405
	C 410
	C 420
	C 422
	other
	Explanation on data presentation:
	The technical number is made up of the wagon compatibility code (1 letter) and the standard combined transport profile number (2 digits when width $\leq$ 2550 mm or 3 digits when, 2550 < width $\leq$ 2600 mm).
Reference	UIC Code 596-6
Number	1.1.1.3.5
Title	Standard combined transport profile number for semi-trailers
XML Name	SOL Track Parameter ILL_ProfileNumSemiTrailers
Definition	Coding for combined transport for semi-trailers as defined in UIC Code
	Y/N/NYA
Applicable	Explanation on applicability:
	Contrary to the Status of core parameter in the RINF Regulation, N can be used.
Can be repeated	Υ
Data presentation	Single selection from the predefined list:

	P 22
	P 25
	P 30
	P 32
	P 38
	P 45
	P 50
	P 55
	P 59
	P 60
	P 65
	P 70
	P 80
	P 90
	P 341
	P 349
	P 351
	P 357
	P 364
	P.365
	P 371
	P 375
	P 380
	P 384
	P 385
	P 390
	P 395
	P 400
	P 405
	P 410
	P 420
	P 422
	other
	Explanation on data presentation:
	The technical number is made up of the wagon compatibility code (1 letter) and the
	standard combined transport profile number (2 digits when width $\leq$ 2500 mm or 3 digits when 2500 < width $\leq$ 2600 mm).
Reference	UIC Code 596-6
Number	<u>1.1.1.3.5.1</u>

Title	Specific information
XML Name	SOL Track Parameter ILL_SpecificInfo
Definition	Any specific information from the IM
Explanation on definition	This parameter allows the IM to provide plain text with specific information about the track
Applicable	<u>Y/N/NYA</u>
Can be repeated	
Data presentation	Characterstring
References	
Number	1.1.1.3.6
Title	Gradient profile
XML Name	SOL Track Parameter ILL_GradProfile
Definition	Sequence of gradient values and locations of change in gradient
Applicable	Y/NYA
Can be repeated	Υ
Data presentation	Predefined CharacterString:  [±NN.N] ([±NNNN.NNN])
General explanation	Data on the values of gradient along a SoL is given as a chain of information:  Gradient (location) The first location corresponding to the start of the first value of the gradient is the centre point of start OP. If there are different values of the gradient, the parameter will be repeated. The last location will correspond to the point where the last value of the gradient starts. This value will be available until the centre point of the end OP. If gradient has only one value along the track, then only [+/-NN.N] is required.  Gradient is expressed in mm/m; location is expressed in km of the line.  Positive gradient (uphill) is marked with '+' and negative gradient (downhill) is marked by '-'.  The order in the sequence shall be determined by the normal running direction on the specific track. If it is 'B' (see 1.1.1.0.0.2) then sequence shall follow the increasing kilometres of the line.  Changes in gradient shall be registered only as far as necessary for train running calculations (minimum length of constant gradient shall be 500 m, the minimum change of gradient value shall be 0,5 mm/m).  The required precision for gradient value is 0,5 mm/m, the required precision of location of the points of change of gradient is 10 m. The points of change of gradient are the points of vertical intersection of each vertical curve.
References	INF TSI: 4.2.3.3  HS TSI INF: 4.2.5  CR TSI INF: 4.2.4.3

Ni le e e e	
Number	1.1.1.3.7

Title	Minimum radius of horizontal curve
XML Name	SOL Track Parameter ILL_MinRadHorzCurve
Definition	Radius of the smallest horizontal curve of the track in metres.
Applicable	Y/NYA
Can be repeated	N
Data presentation	[NNNNN]
References	INF TSI: 4.2.3.4 CR TSI INF: 4.2.4.4
Explanation	To describe a straight section of line value '99999' shall be used.
Number	1.1.1.1.4
Title	Track parameters
XML Name	ITP
Can be repeated	N

	1.1.1.4.1
Title	Nominal track gauge
XML Name	SOL Track Parameter ITP_NomGauge
Definition	A single value expressed in millimetres that identifies the track gauge
Applicable	Y/NYA
Can be repeated	N
Data presentation	750 1000 1435 1520 1524 1600 1668 other
General explanation	In case of multi-rail track, a set of data is to be published separately to each pair of rails to be operated as separate track (the whole set of parameters for the separate track has to be delivered – be careful then with the track identification).
References	INF TSI: 4.2.4.1  CR INF TSI: 4.2.5  HS INF TSI: 4.2.2
Number	1.1.1.4.2
Title	1.1.1.4.2  Cant deficiency
	Cant deficiency SOL Track Parameter ITP_CantDeficiency
Title	Cant deficiency
Title XML Name	Cant deficiency  SOL Track Parameter ITP_CantDeficiency  Maximum cant deficiency expressed in millimetres defined as difference between the
Title  XML Name  Definition	Cant deficiency  SOL Track Parameter ITP_CantDeficiency  Maximum cant deficiency expressed in millimetres defined as difference between the applied cant and a higher equilibrium cant the line has been designed for
Title  XML Name  Definition  Applicable	Cant deficiency  SOL Track Parameter ITP_CantDeficiency  Maximum cant deficiency expressed in millimetres defined as difference between the applied cant and a higher equilibrium cant the line has been designed for Y/NYA

Number	1.1.1.4.3
Title	Rail inclination
XML Name	SOL Track Parameter ITP_RailInclination
Definition	An angle defining the inclination of the head of a rail relative to the running surface
Applicable	Y/NYA
Can be repeated	N
Data presentation	[NN]
General explanation	This inclination is in most cases expressed for MS globally, but anyway it requires presentation for the specific track, when in one SoL more values occur. An angle defining the inclination of the head of a rail when installed in the track relative to the plane of the rails (running surface), equal to the angle between the axis of symmetry of the rail (or of an equivalent symmetrical rail having the same rail head profile) and the perpendicular to the plane of the rails. [NN] represents the denominator of the rail inclination expressed as 1/NN. The typical values are 1:20, 1:30, 1:40.
	INF TSI:4.2.4.7
References	HS INF TSI: 4.2.11
	CR INF TSI: 4.2.5.7
Number	1.1.1.1.4.4
Title	Existence of ballast
XML Name	SOL Track Parameter ITP_Ballast
Definition	Specifies whether track construction is with sleepers embedded in ballast or not.
Applicable	Y/N/NYA
принсиыс	Y for tracks with permitted speed (parameter 1.1.1.1.2.5) greater than <del>or equal to</del> 250km/h.
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
General explanation	This parameter is related to phenomena of ballast pick-up observed for the high speed traffic.
Reference	loc&Pas TSI 4.2.6.2.5
	Ballast pick-up is an open point in HS INF TSI and INF TSI: 4.2.10.3
Comments	The parameter is about the phenomenon, but not about the ballast itself.  As so far any specifications for mitigation of the problem were disclosed, the only information from RINF will be data about the network where the problems may be faced.

Number	
Title	Switches and crossings
XML Name	ISC
Can be repeated	N
-	
Number	1.1.1.1.5.1
Title	TSI compliance of in service values for switches and crossings
XML Name	SOL Track Parameter ISC_TSISwitchCrossing
Definition	Switches and crossings are maintained to in service limit dimension as specific
	in TSI
Can be reported	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list: Y
	N
General explanation	If for existing track at least one parameter has less strict value than specified the TSI, then 'N' shall be selected.
	INF TSI: 4.2.5 and 4.2.8.6
References	
References	CR INF TSI: 4.2.6.2
References	CR INF TSI: 4.2.6.2 HS INF TSI: 4.2.12
References	
	HS INF TSI: 4.2.12  1.1.1.1.5.2
Number	HS INF TSI: 4.2.12  1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings
Number Title XML Name	HS INF TSI: 4.2.12  1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings
Number Title	HS INF TSI: 4.2.12  1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings
Number Title XML Name	HS INF TSI: 4.2.12  1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings  Maximum unguided length of fixed obtuse crossings is based on a minimum
Number Title XML Name Definition	HS INF TSI: 4.2.12  1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings  Maximum unguided length of fixed obtuse crossings is based on a minimum wheel diameter in service expressed in millimetres.
Number Title XML Name Definition Applicable	1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings  Maximum unguided length of fixed obtuse crossings is based on a minimum wheel diameter in service expressed in millimetres.  Y/NYA
Number Title XML Name Definition Applicable Can be repeated	1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings  Maximum unguided length of fixed obtuse crossings is based on a minimum wheel diameter in service expressed in millimetres.  Y/NYA  N
Number  Title  XML Name  Definition  Applicable  Can be repeated  Data presentation	HS INF TSI: 4.2.12  1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings  Maximum unguided length of fixed obtuse crossings is based on a minimum wheel diameter in service expressed in millimetres.  Y/NYA  N  [NNN]  The minimum TSI value is 330 mm and this shall be used as a default value
Number Title XML Name Definition Applicable Can be repeated Data presentation General	1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings  Maximum unguided length of fixed obtuse crossings is based on a minimum wheel diameter in service expressed in millimetres.  Y/NYA  N  [NNN]  The minimum TSI value is 330 mm and this shall be used as a default value unless advised otherwise.  If the value of the wheel diameter is bigger than 330 mm, it has to be
Number Title XML Name Definition Applicable Can be repeated Data presentation General explanation	1.1.1.1.5.2  Minimum wheel diameter for fixed obtuse crossings  SOL Track Parameter ISC_MinWheelDiaFixObtuseCrossings  Maximum unguided length of fixed obtuse crossings is based on a minimum wheel diameter in service expressed in millimetres.  Y/NYA  N  [NNN]  The minimum TSI value is 330 mm and this shall be used as a default value unless advised otherwise.  If the value of the wheel diameter is bigger than 330 mm, it has to be specified.  New lines are assumed to be compliant with the TSI INF.  When the line is compliant to TSI the default value of 330 mm has to be

Number	1.1.1.1.6
Title	Track resistance to applied loads
XML Name	ILR
Can be repeated	N
Number	1.1.1.6.1
Title	Maximum train deceleration
XML Name	SOL Track Parameter ILR_MaxDeceleration
Definition	Limit for longitudinal track resistance given as a maximum allowed train deceleration and expressed in metres per square second.
	Y/N/NYA
Applicable	Explanation on applicability:
	'N' shall be selected when specific track is part of a line which is not in the scope of the TSI.
Can be repeated	N
Data presentation	[N.N]
General	New lines are assumed to be compliant with the TSI INF. For TSI compliant lines the default value of 2.5 m/s² shall be presented.
Explanation	If for the design of the track the braking forces were assumed on basis of the deceleration lower value than 2.5 m/s <sup>2</sup> , the applied value of the deceleration has to be specified.
	INF TSI: 4.2.6
References	HS INF TSI: 4.2.13
;	CR INF TSI: 4.2.7

Number	1.1.1.1.6.2
Title	Use of eddy current brakes
XML Name	SOL Track Parameter ILR_EddyCurrentBrakes
Definition	Indication of limitations on the use of eddy current brakes.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single choice from the predefined list:  allowed allowed under conditions allowed only for emergency brake allowed under conditions only for emergency brake not allowed
Explanations	The use of both brakes is allowed or not under exterior conditions (depending on the features of the train engines for example).  The RINF can't be filled without more precisions.
References	INF TSI: 4.2.6.2.2 (open point)  CR INF TSI: 4.2.7.2.2  HS TSI: 4.2.13.1
Number	1.1.1.6.3
Title	Use of magnetic brakes
XML Name	SOL Track Parameter ILR_MagneticBrakes
Definition	Indication of limitations on the use of magnetic brakes.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single choice from the predefined list:  allowed allowed under conditions allowed under conditions only for emergency brake allowed only for emergency brake not allowed
References	INF TSI: 4.2.6.2.2 (open point)  CR INF TSI: 4.2.7.2.2  HS INF TSI: 4.2.13.1
Number	1.1.1.6.4
Title	Document with the conditions for the use of eddy current brakes
XML Name	SOL Track Parameter ILR_ECBDocRef
Definition	Electronic document available in two EU languages from the IM stored by the Agency with conditions for the use of eddy current brakes identified in 1.1.1.1.6.2.
Applicable	Y/N/NYA

	Y if the answer to the1.1.1.6.2
	Use of eddy current brakes is "allowed under conditions" or "allowed under conditions only for emergency brake"
Can be repeated	Υ
Data presentation	CharacterString
	If there exist conditions to allow the use of eddy current brakes.
Explanation	The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.
Number	1.1.1.1.6.5
Title	Document with the conditions for the use of magnetic brakes
XML Name	SOL Track Parameter ILR_MBDocRef
Definition	Electronic document available in two EU languages from the IM stored by the Agency with conditions for the use of magnetic brakes identified in 1.1.1.1.6.3.
Applicable	Y/N/NYA
	Y if the answer to 1.1.1.1.6.3 / Use of magnetic brakes is "allowed under conditions" or "allowed under conditions only for emergency brake".
Can be repeated	Υ
Data presentation	CharacterString
	If there exist conditions to allow the use of magnetic brakes.
Explanation	The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.
References	

Number	1.1.1.1.7
Title	Health, safety and environment
XML Name	IHS
Can be repeated	N
Number	1.1.1.7.1
Title	Use of flange lubrication forbidden
XML Name	SOL Track Parameter IHS_FlangeLubeForbidden
Definition	Indication whether the use of on-board device for flange lubrication is forbidden
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
Number	1.1.1.1.7.2
Title	Existence of level crossings
XML Name	SOL Track Parameter IHS_LevelCrossing
Definition	Indication whether level crossings (including pedestrian track crossing) exist on the section of line.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
General explanation	Parameter concerns the level crossing of the railway with a road or a street.
Number	1.1.1.7.3
Title	Acceleration allowed near level crossing
XML Name	SOL Track Parameter IHS_AccelerationLevelCrossing
Definition	Existence of limit for acceleration of train if stopping or recovering speed close to a level crossing expressed in a specific reference acceleration curve in metres per square second.
Applicable	Y/N/NYA Explanation on applicability:  Applicable only when selected value of parameter 1.1.1.1.7.2 is 'Y'
Can be repeated	N  Use this ability if you have more than one document
Data presentation	Characterstring allows the previous [N.N] which ensures the backward compatibility
	Explanation on data presentation:

	The reference of the document defining the limit shall be provided in the characterstring and the document send to the Agency by the NRE.
	Acceleration shall be presented with precision of 0.1 m/s². If there is no national rules or no limits defined, the value should be [0.0] per default.
Explanation	The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.
Number	1.1.1.7.4
Title	Existence of trackside hot axle box detector (HABD)
XML Name	SOL Track Parameter IHS_HABDExist
Definition	Existence of trackside HABD
Applicable	Y/NYA
Can be repeated	N N
Data presentation	Single selection from the predefined list: Y/N
General explanations	
Reference	
Validation	
Number	1.1.1.7.5
Title	Trackside HABD TSI compliant
XML Name	SOL Track Parameter IHS_TSIHABD
Definition	Specific for the French, Italian and Swedish networks.  Trackside HABD compliant to TSI means that the HABD Trackside is compliant with:  o EN 15437:2009 referred in TSIs (LOC&PAS 1302/2014, WAG 321/2013),  o Specific cases mentioned in TSIs (LOC&PAS TSI 1302/2014, WAG 321/2013).
Applicable	Y/N/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y/N
General explanations	
Reference	
ł	

Validation	
Number	1.1.1.7.6
Title	Identification of trackside HABD
XML Name	SOL Track Parameter IHS_HABDID
	Specific for the French, Italian and Swedish networks.
Definition	Applicable if trackside HABD is not TSI compliant, identification of trackside hot axle box detector.
Applicable	Y/N/NYA
Аррисавіе	Y if the answer to parameter 1.1.1.1.7.5 is N
Can be repeated	N
Data presentation	Characterstring
General explanations	
Reference	
Validation	
Number	1.1.1.7.7
	Generation of trackside HABD
Title  XMI Name	SOL Track Parameter IHS_HABDGen
AIVIL Name	Specific for the French Italian and Swedish networks.
Definition	Generation of trackside hot axle box detector.
	Y/N/NYA
Applicable	"Y" if the answer to parameter 1.1.1.1.7.5 is "N"
Can be repeated	N
Data presentation	Single selection from the predefined list:  Waiting provision of possible answers by the French, Italian and Swedish NREs
General explanations	
Reference	
Validation	
	i

Number	1.1.1.7.8
Title	Railway location of trackside HABD
XML Name	SOL Track Parameter IHS_HABDLoc
Definition	Specific for the French Italian and Swedish networks.  Applicable if trackside HABD is not TSI compliant, localisation of trackside hot axle box detector.
Explanation on Definition	The railway location identifies the location of the HADB in the system of reference of the line to which the track belongs
Applicable	Y/N/NYA  "Y" if the answer to parameter 1.1.1.1.7.5 is "N"
Can be repeated	Y
Data presentation	Predefined CharacterString:  [±NNNN.NNN]
General explanations	Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001). The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. Contrary to the regulation, the reference to the line is not needed: the parameter is still attached to the track of the line. The aim of the "CharacterString" at the end of the format has to precise the name or number of the line.
Reference	
Validation	
Number	1.1.1.1.7.9
Title	Direction of measurement of trackside HABD
XML Name	SOL Track Parameter IHS_HABDDirecton
Definition	Direction of measurement of trackside HABD (Specific for the French Italian and Swedish networks)
Applicable	Y/N/NYA  "Y" if the answer to parameter 1.1.1.1.7.5 is "N"
Can be repeated	N
Data presentation	Single selection from the predefined list:  N/O/B
explanations	Specific for the French Italian and Swedish networks.  Applicable if trackside HABD is not TSI compliant, direction of measurement of trackside hot axle box detector.  If the direction of measurement is:

1	
	the same as the direction defined by the start and end of the SoL: (N)
	- the opposite to the direction defined by the start and end of the SoL: (O)
	- both directions: (B)
General explanations	
Reference	
Validation	
Number	1.1.1.7.10
	Steady red lights required
Title	
XML Name	SOL Track Parameter IHS_RedLights
Definition	Sections where two steady red lights are required in accordance with Implementing Regulation (EU) 2019/773
Applicable	Y/N/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list: Y/N
	Regulation (EU) 2019/773 says:
	Specific case:
	Belgium, France, Italy, Portugal, Spain and UK may continue to apply notified national rules that require freight trains to be equipped with 2 steady red lights as a condition to run on sections of their network, where this is justified by operating practices already in place and/or national rules notified before end of January 2019.  Cooperation with neighbouring countries:
General explanations	In the meantime Member States concerned, in particular at the request of the railway undertakings, shall perform an assessment with a view to accept the use of 2 reflective plates in one or more sections of their network if the result of the assessment is positive and define appropriate conditions, which shall be based upon an assessment of the risks and operational requirements. This assessment shall be completed within a maximum period of 6 months after receiving the railway undertaking's request. The acceptance of reflective plates shall be granted, unless the Member State can duly justify the refusal based on the negative result of the assessment.  Member States shall in particular endeavour to permit the use of reflective plates on rail
	freight corridors, with a view to prioritise the current bottlenecks. These sections and details of any conditions pertaining to them shall be recorded in the RINF. Until the information is encoded in RINF, the infrastructure manager shall ensure the information is communicated to railway undertakings by other appropriate means. The infrastructure manager shall identify the sections of lines on which 2 steady red lights are required in the RINF.
Reference	art 4.2.2.1.3.2. of Implementing Regulation (EU) 2019/773 "Freight trains"

1.1.1.7.11
Belonging to a quieter route
SOL Track Parameter IHS_QuietRoute
Belonging to a "quieter route" in accordance with Article 5b of Regulation (EU) 1304/2014.
Y/NYA
<u>N</u>
Single selection from the predefined list:
Y/N
Art 5B: A 'quieter route' means a part of the railway infrastructure with a minimum length of 20 km on which the average number of daily operated freight trains during the night-time as defined in national legislation transposing Directive 2002/49/EC of the European Parliament and of the Council (5) was higher than 12. The freight traffic in the years 2015, 2016 and 2017 shall be the basis for the calculation of that average number. In case the freight traffic due to exceptional circumstances diverges in a given year from that average number by more than 25 %, the Member State concerned can calculate the average number on the basis of the remaining two years  Art 5.C 1: Member States shall designate quieter routes in accordance with Article 5b and the procedure set out in Appendix D.1 of the Annex. They shall provide the European Union Agency for Railways ('the Agency') with a list of quieter routes six months after the date of publication of this Regulation at the latest. The Agency shall publish those lists on its
website.  Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel  Parameters of this group (from 1.1.1.1.8.1 to 1.1.1.1.8.11) are only applicable if tunnels exist on the SoL
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel  Parameters of this group (from 1.1.1.1.8.1 to 1.1.1.1.8.11) are only applicable
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel  Parameters of this group (from 1.1.1.1.8.1 to 1.1.1.1.8.11) are only applicable if tunnels exist on the SoL
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel  Parameters of this group (from 1.1.1.1.8.1 to 1.1.1.1.8.11) are only applicable  if tunnels exist on the SoL  Y
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel  Parameters of this group (from 1.1.1.1.8.1 to 1.1.1.1.8.11) are only applicable  if tunnels exist on the SoL  Y
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel  Parameters of this group (from 1.1.1.1.8.1 to 1.1.1.8.11) are only applicable if tunnels exist on the SoL  Y  1.1.1.1.8.1  IM's Code  SOLTunnelIMCode  Infrastructure Manager means any body or undertaking that is responsible in particular
Art 5b of Regulation (EU) 1304/2014 (amended by Regulation (EU) 2019/774) of 16 May 2019  1.1.1.1.8  Tunnel  SOLTunnel  Parameters of this group (from 1.1.1.1.8.1 to 1.1.1.8.11) are only applicable if tunnels exist on the SoL  Y  1.1.1.1.8.1  IM's Code  SOLTunnellMCode

Data presentation	[AAAA]
General explanations	The Code is a unique identifier for the Infrastructure Manager and it shall be verified on national level.  - If the IM is subject to TAF/TAP TSIs, it corresponds to the code used in TAF/TAP TSIs.  - In other cases, it corresponds to the "organisation code" assigned by the Agency for the specific needs of the RINF  Each Section of Line may concern only one IM.
Reference	Article 3 (2) of Directive 2012/34/EU
Validation	No verification by RINF application. Check of the link between MS and IM' Name must be done nationally.
Number	1.1.1.1.8.2
Title	Tunnel identification
XML Name	SOLTunnelIdentification
Definition	Unique tunnel identification or unique number within Member State
Applicable	Υ
Can be repeated	N
Data presentation	CharacterString.
Comments	Here should be given the name, number, code or any other expression which is normally used for the identification of the tunnel other than mentioned in parameters 1.1.1.1.8.3 – 1.1.1.1.8.4. In case when tunnel does not have its own identification within the Member State, the IM should deliver it himself.

Applicable  Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as (NN.NNNNNNN) in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poir on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example  SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"/:  Number  1.1.1.8.4  Title End of tunnel  XML Name SOLTunnelEnd  Definition Geographical coordinates in decimal degrees and km of the line at the end of a tunne Applicable  Y  Can be repeated N  Predefined CharacterString: [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)] Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo	Number	111107
XML Name  SOLTunnelStart  Definition  Geographical coordinates in decimal degrees and km of the line at the beginning of a tunnel.  Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical orginude is assumed as INN.NNNNNNN) in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poir on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example  SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"/:  Number  1.1.1.8.4  Title  End of tunnel  XML Name  SOLTunnelEnd  Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunnel Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the Randard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo		1.1.1.1.8.3
Definition  Geographical coordinates in decimal degrees and km of the line at the beginning of a tunnel.  Applicable  Y  Can be repeated  N  Predefined CharacterString:  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poir on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example  SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"/:  Number  1.1.1.8.4  Title End of tunnel  XML Name SOLTunnelEnd  Definition Geographical coordinates in decimal degrees and km of the line at the end of a tunnel Applicable  Y  Can be repeated N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the 8 track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the 8 track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.	Title	Start of tunnel
Applicable  Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poir on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example  SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"/c.  Number  1.1.1.1.8.4  Title  End of tunnel  XML Name  SOLTunnelEnd  Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunne Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R and the control of the point which is assumed to be the end of the tunnel it is the point on to track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	XML Name	SOLTunnelStart
Can be repeated N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poir on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example <a 51.5479123"="" :="" href="SolTunnelStart Latitude=" kilometer="0.270" longitude="-0.076732" number<="" td=""><td></td><td>Geographical coordinates in decimal degrees and km of the line at the beginning of a tunnel.</td></a>		Geographical coordinates in decimal degrees and km of the line at the beginning of a tunnel.
Data presentation  [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poir on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example  4 SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"/:  Number  1.1.1.1.8.4  Title  End of tunnel  XML Name  SOLTunnelEnd  Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunne Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the Rapharations track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the Rapharations track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.	Applicable	Υ
Data presentation  [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poir on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example  4 SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"/:  Number  1.1.1.8.4  Title  End of tunnel  XML Name  SOLTunnelEnd  Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunnel Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNN) + Longitude (±NN.NNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo track centre line where is laid the vertical shadow of the extreme part of the tunnel' is track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the Randard world Secretion of 10 m in the netwo	Can be repeated	N
Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo Kilometre shall concern the national line identification given in 1.1.0.0.0.2  Location of the point which is assumed to be the beginning of the tunnel it is the poin on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example <soltunnelstart <="" kilometer="0.270" latitude="51.5479123" longitude="-0.076732" silometer="0.270" td=""><td>Data presentation</td><td></td></soltunnelstart>	Data presentation	
General Explanations  Location of the point which is assumed to be the beginning of the tunnel it is the point on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example  SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"//.  Number  1.1.1.8.4  Title  End of tunnel  XML Name  SOLTunnelEnd  Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunnel Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo General  Explanations  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R		
Explanations  Location of the point which is assumed to be the beginning of the tunnel it is the poin on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R application.  XML example <soltunnelstart (nn.nnnnnn)="" (wgs).="" (±nn.nnnnnn)="" (±nnnn.nnn)]="" +="" 1.1.1.1.8.4="" 10="" :="" [latitude="" [nn.nnnnnnn]="" a="" according="" and="" applicable="" as="" assumed="" at="" be="" before="" both="" can="" centre="" characterstring:="" collected="" coordinates="" data="" decimal="" decimals="" definition="" degrees="" discretion="" end="" explanations="" extreme="" for="" general="" geodetic="" geographical="" gives="" in="" is="" it="" kilometer="0.270" km="" laid="" latitude="" line="" location="" longitude="" m="" miles="" n="" name="" netwo="" number="" of="" on="" part="" point="" portal.="" precision="" predefined="" r<="" repeated="" shadow="" soltunnelend="" standard="" system="" t="" td="" the="" title="" to="" track="" transformed="" tunnel="" tunnel's="" uk="" uploading="" vertical="" what="" where="" which="" will="" with="" world="" xml="" γ=""><td>General</td><td>Kilometre shall concern the national line identification given in 1.1.0.0.0.2</td></soltunnelstart>	General	Kilometre shall concern the national line identification given in 1.1.0.0.0.2
application.  XML example < SOLTunnelStart Latitude="51.5479123" Longitude="-0.076732" Kilometer="0.270"/s  Number		·
Number  1.1.1.1.8.4  Title  End of tunnel  XML Name  SOLTunnelEnd  Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunne Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General  Explanations  Coefficient of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R		Data collected in the UK in miles will be transformed to km before uploading to the RINF application.
Title End of tunnel  XML Name SOLTunnelEnd  Definition Geographical coordinates in decimal degrees and km of the line at the end of a tunne   Applicable	XML example	<soltunnelstart kilometer="0.270" latitude="51.5479123" longitude="-0.076732"></soltunnelstart>
Title End of tunnel  XML Name SOLTunnelEnd  Definition Geographical coordinates in decimal degrees and km of the line at the end of a tunne Applicable  Y  Can be repeated N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R		
XML Name  SOLTunnelEnd  Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunnel Applicable  γ  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General  Explanations  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	Number	1.1.1.1.8.4
Definition  Geographical coordinates in decimal degrees and km of the line at the end of a tunner Applicable  Y  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNNN) + Longitude (±NN.NNNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS).  Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General  Explanations  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	Title	End of tunnel
Applicable  Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS).  Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General  Explanations  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	XML Name	SOLTunnelEnd
Can be repeated  N  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS).  Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General  Explanations  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	Definition	Geographical coordinates in decimal degrees and km of the line at the end of a tunnel.
Data presentation  Predefined CharacterString:  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS).  Precision for both geographical latitude and geographical longitude is assumed as  [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General  Explanations  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	Applicable	Υ
Data presentation  [Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	Can be repeated	N
[Latitude (NN.NNNNNNN) + Longitude (±NN.NNNNNNN) + km (±NNNN.NNN)]  Geographical coordinates according to the standard World Geodetic System (WGS). Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General Explanations  Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	Data procentation	Predefined CharacterString:
Precision for both geographical latitude and geographical longitude is assumed as [NN.NNNNNNN] in degrees with decimals what gives discretion of 10 m in the netwo  General Explanations Location of the point which is assumed to be the end of the tunnel it is the point on t track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R	Data presentation	[Latitude (NN.NNNN <u>NNN</u> ) + Longitude (±NN.NNNN <u>NNN</u> ) + km (±NNNN.NNN)]
Explanations track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.  Data collected in the UK in miles will be transformed to km before uploading to the R		
		Location of the point which is assumed to be the end of the tunnel it is the point on the track centre line where is laid the vertical shadow of the extreme part of the tunnel's portal.
		Data collected in the UK in miles will be transformed to km before uploading to the RINF application.
Example <soltunnelend kilometer="0.270" latitude="51.5479123" longitude="-0.076732"></soltunnelend>	Example	<soltunnelend kilometer="0.270" latitude="51.5479123" longitude="-0.076732"></soltunnelend>

Number	1.1.1.1.8.5
Title	EC declaration of verification for tunnel (SRT)
XML Name	SOL Tunnel Parameter ITU_ECVerification
Definition	Unique number for EC declarations following format requirements specified in the 'Document about practical arrangements for transmitting interoperability documents'
Explanation on	(SRT) in title means that here we include only declarations concerning requirements o SRT TSI for infrastructure system on the specific track.
Definition	Parameter shall be repeated when different EC declarations were issued for different elements of infrastructure subsystem on the specific track in the tunnel.
	Y/N/NYA
Applicable	Explanation on applicability:  "Y" shall be selected in case when EC declaration was issued
Can be repeated	Υ
Data presentation	Predefined CharacterString:
	[CC/RRRRRRRRRRR/YYYY/NNNNNN]
General Explanations	With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the INF, ENE and CCS TSIs now includes all the networks (TEN an off-TEN) with the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 m
Reference concerning format	'Document about practical arrangements for transmitting interoperability documents' [23]
Validation	The validation is described before this Table, in section 2.3.

Number	1.1.1.1.8.6
Title	EI declaration of demonstration for tunnel (SRT)
XML Name	SOL Tunnel Parameter ITU_EIDemonstration
Definition	Unique number for EI declarations following the same format requirements as specified in the 'Document about practical arrangements for transmitting interoperability documents'
Explanation on Definition	(SRT) in title means that here we include only declarations concerning requirements of SRT TSI for infrastructure system on the specific track.  Parameter shall be repeated when different EI declarations were issued for different elements of infrastructure subsystem on the specific track in the tunnel.
	Y Explanation on repeatability:
Can be repeated	It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.
Applicable	Y/N/NYA Explanation on applicability:  "Y" shall be selected in case when the demonstration was executed and EI declaration was issued
Data presentation	Predefined CharacterString:  [CC/RRRRRRRRRRRRRR/YYYY/NNNNNN])
General Explanations	It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  The procedure for demonstration that existing network fits to requirements of the TSIs
	is executed on voluntary bases, so when EI declaration do not exist then the parameter is optional.  [22] Recommendation 2014/881/EU
References	[23] 'Document about practical arrangements for transmitting interoperability documents'
Validation	The validation is described before this Table, in section 2.3.

Number	1.1.1.8.7
Title	Length of tunnel
XML Name	SOL Tunnel Parameter ITU_Length
Definition	Length of a tunnel in metres from entrance portal to exit portal.
Applicable	Y/NYA
Applicable	Y only for a tunnel with length of 100 metres or more.
Can be repeated	N
Data presentation	[NNNN]
	Explanation on data presentation:
	Length of a tunnel in metres from portal to portal at the level of the top of rail.
Validation	As the validation, whether the parameter is mandatory cannot be performed by the RINF application, the validation has to be done by the NRE.
Number	1.1.1.1.8.8
Title	Cross section area
XML Name	SOL Tunnel Parameter ITU_CrossSectionArea
Definition	Smallest cross section area in square metres of the tunnel
	Y/N/NYA
<u>Applicable</u>	Y if the speed of the line is equal or greater than 200km/h
	Reference: 4.2.10.1 of INF TSI on Maximum pressure variations in tunnels
Can be repeated	<u>N</u>
Data procentation	[NNN]
<u>Data presentation</u>	Explanation on data presentation:
	Smallest real cross section area (expressed in square metres) of the tunnel.
Number	<u>1.1.1.1.8.8.1</u>
Title	compliance of the tunnel with INF TSI
XML Name	SOL Tunnel Parameter ITU_TSITunnel
Definition	compliance of the tunnel with INF TSI at the maximum permitted speed
Applicable	Y/N/NYA
<u>Applicable</u>	Y if the speed of the line is equal or greater than 200km/h
Can be repeated	N
	Single selection from the predefined list:
Data presentation	
	Y/N
	Explanation on data presentation:
L	

<u>Reference</u>	clause 4.2.10.1 of INF TSI on Maximum pressure variations in tunnels

Number	<u>1.1.1.1.8.8;2</u>
Title	Document available from the IM with precise description of the tunnel
XML Name	SOL Tunnel Parameter ITU_TunnelDocRef
Definition	Electronic document available from the IM stored by the Agency with precise description of the clearance gauge and geometry of the tunnel
<u>Applicable</u>	<u>Y/N/NYA</u>
Can be repeated	Ϋ́
<u>Data presentation</u>	Characterstring
<u>Explanation</u>	The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.

Number	1.1.1.1.8.9
Title	Existence of emergency plan
XML Name	SOL Tunnel Parameter ITU_EmergencyPlan
Definition	Indication whether emergency plan exists.
	Y/N/NYA
Applicable	Explanation on applicability: Y for tunnels longer than 1 km, in accordance with section 4.4.2 of SRT TSI, the emergency plan is mandatory only for tunnel length of more than 1km. 'N'=not applicable can be selected for short tunnels of less than 1 km, as for them the fire category according SRT TSI does not exist.
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
General Explanations	Emergency plan has to be a document developed for each tunnel under the direction o the IM, in co-operation, where appropriate, with RUs, Rescue services and relevant authorities. It shall be consistent with the self-rescue, evacuation and rescue facilities provided.
References	SRT TSI: 4.4. <u>2</u> OPE TSI: 4.2.3.7
Number	1.1.1.1.8.10
Title	Fire category of rolling stock required
XML Name	SOL Tunnel Parameter ITU_FireCatReq
Definition	Categorisation on how a passenger train with a fire on board will continue to operate for a defined time period
	Y/N/NYA
	Explanation on applicability:
	'N'=not applicable shall be selected for short tunnels of less than 1 km, as for them the
	fire category according SRT TSI does not exist.
Can be repeated	fire category according SRT TSI does not exist.  N
Can be repeated	
Can be repeated  Data presentation	N
	N Single selection from the predefined list:  A B none
Data presentation	N Single selection from the predefined list:  A B none Explanation on data presentation:  Wherever category B is not needed, generally the category A has to be understood as the default value. 'None' shall be selected when none of A or B fire category is applied
	N Single selection from the predefined list:  A B none Explanation on data presentation:  Wherever category B is not needed, generally the category A has to be understood as the default value. 'None' shall be selected when none of A or B fire category is applied for a specific tunnel.

Number	1.1.1.8.11
Title	National fire category of rolling stock required
XML Name	SOL Tunnel Parameter ITU_NatFireCatReq
Definition	Categorisation on how a passenger train with a fire on board will continue to operate
Can be repeated	for a defined time period - according to national rules if they exist.  N
Applicable	Y/N/NYA
Аррисавіе	Explanation on applicability:
	'Y' only for tunnels when for the parameter 1.1.1.1.8.10 the option 'none' was selected and national rules are existing.  'N'=not applicable shall be selected when respective national rules do not exist
	CharacterString
Data presentation	Explanation on data presentation:
•	Data shall include both the category and brief name of the document introducing the categorisation
Number Title	1.1.1.2
	Energy subsystem
Can be repeated	N
Number	1.1.1.2.1
Title	Declarations of verification for track
XML Name	EDE
Can be repeated	N

Number	1.1.1.2.1.1
Title	EC declaration of verification for track (ENE)
XML Name	SOL Track Parameter EDE_ECVerification
Definition	Unique number for EC declarations following format requirements specified in the 'Document about practical arrangements for transmitting interoperability documents'
Explanation on Definition	(ENE) in title means that here we include only declarations concerning energy subsystem on the specific track.
	Y/N/NYA
Applicable	Explanation on applicability:
	"Y" shall be selected in case when EC declaration was issued
	Υ
Can be repeated	Explanation on repeatability:
	Parameter shall be repeated when different EC declarations were issued for different
	elements of energy subsystem on the specific track.
Data presentation	Predefined CharacterString:
	[CC/RRRRRRRRRRRR/YYYY/NNNNNN]
General Explanations	The required value is the number of the EC declaration presented in format defined for ERADIS.
	With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the ENE TSI now includes all the networks (TEN and off-TEN) wit the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 mm
Reference concerning format	'Document about practical arrangements for transmitting interoperability documents' [23]
Validation	The validation is described before this Table, in section 2.3.

Number	1.1.1.2.1.2
Title	EI declaration of demonstration for track (ENE)
XML Name	SOL Track Parameter EDE_EIDemonstration
Definition	Unique number for El declarations following the same format requirements as specified in the 'Document about practical arrangements for transmitting interoperability documents'.
Explanation on Definition	(ENE) in title means that here we include only declarations concerning energy subsystem on the specific track.
	Y/N/NYA
Applicable	Explanation on applicability:
	"Y" shall be selected in case when the demonstration was executed and El declaration was issued
	Υ
Can be repeated	Explanation on repeatability:
	Parameter shall be repeated when different EI declarations were issued for different elements of energy subsystem on the specific track.
Data presentation	Predefined CharacterString:
	[CC/RRRRRRRRRRRRR/YYYY/NNNNNN])
General Explanations	It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.
	The procedure for demonstration that existing network fits to requirements of the TSIs is executed on voluntary bases, so when EI declaration do not exist then the parameter is optional. If EI declaration was not issued, then field shall be left empty.
References	[22] Recommendation 2014/881/EU
	[23] 'Document about practical arrangements for transmitting interoperability documents'
Validation	The validation is described before this Table, in section 2.3.

Number	1.1.1.2.2
Title	Contact line system
XML Name	ECS
Can be repeated	N
Number	1.1.1.2.2.1.1
Title	
XML Name	Type of contact line system
	SOL Track Parameter ECS_SystemType
Definition	Indication of the type of the contact line system.
Applicable	Y/NYA
	Υ
	If this parameter is repeated, parameters 1.1.1.2.2.1.2, and 1.1.1.2.2.2 shall be created also for the corresponding type. These two parameters are to be considered children of the current.
	For grouping "children" parameters of the current parameter, an XML attribute called "Set" must be declared at the parent and children levels with the same keyword value.
	Modification already accepted from the paragraph above
Can be repeated	If this parameter is repeated, parameters 1.1.1.2.2.1.2, and 1.1.1.2.2.2 shall be created also for the corresponding type. These two parameters are to be considered children of the current. For grouping "children" parameters of the current parameter, an XML attribute called "set" must be declared at the parent and children levels with the same keyword value.
	If this parameter is repeated, parameters 1.1.1.2.2.1.2, 1.1.1.2.2.2, 1.1.1.2.2.4 and 1.1.1.2.5.1 shall be created also for the corresponding type. These four parameters are to be considered children of the current.
	For grouping "children" parameters of the current parameter, an XML attribute called "set" must be declared at the parent and children levels with the same keyword value.  Single selection from the predefined list:
Data presentation	Overhead contact line (OCL) Third Rail Fourth Rail
Comments	Not electrified  When the value "not electrified" is chosen, all parameters 1.1.1.2.2.1.2 - 1.1.1.2.5.3 are not applicable.  When the value "Third Rail" or "Fourth Rail" is chosen, parameters 1.1.1.2.2.3,
	1.1.1.2.2.5 - 1.1.1.2.4.2.3, 1.1.1.2.5.2 and 1.1.1.2.5.3 are not applicable

Number	1.1.1.2.2.1.2

Title	Energy supply system (Voltage and frequency)
XML Name	SOL Track Parameter ECS_VoltFreq
Definition	Indication of the traction supply system (nominal voltage and frequency)
Applicable	Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType
Data presentation	AC 25kV-50Hz AC 15kV-16.7Hz DC 3kV DC 1.5kV DC (Specific Case FR) DC 750V DC 650V DC 600V DC 850V other  Explanation on data presentation:  If the real values exceed range of the EN 50163:2004, then option 'other' shall be selected.
References	ENE TSI: 4.2.3 EN 50163:2004: clause 4
Number	1.1.1.2.2.1.2.1
Title	Energy supply system TSI compliant
XML Name	SOL Track Parameter ECS_TSIVoltFreq
Definition	indication if the traction supply system (nominal voltage and frequency) is fully compliant with TSI
Applicable	Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType
Data presentation	Single selection from the predefined list:

	Υ
	N
	Explanation on data presentation:
References	This parameter is identified in appendix D1 of OPE TSI as being checked for route compatibility. But it is not of the corresponding list of the RINF Regulation as published the parameter stays not mandatory. The validation process will not request an xml line But as it is in the annex D1 of the OPE TSI, any railway undertaking can legitimately ask the IM to provide him the information.
Number	1.1.1.2.2.1.3
Title	Umax2 for lines referred to in sections 7.4.2.2.1 and 7.4.2.11.1 of Regulation (EU) 1301/2014.
XML Name	SOL Track Parameter ECS_Umax2
Definition	Specific for the French network
	Highest non-permanent voltage according to EN50163 for the lines referred to in point 7.4.2.2.1 and 7.4.2.11.1 of Regulation (EU) 1301/2014.
	Y/N/NYA
Applicable	Explanation on applicability:
PF	When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable.
	Y
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType
Data presentation	[NNNNN]
•	Explanation on data presentation:
References	

Number	1.1.1.2.2.2
Title	Maximum train current
XML Name	SOL Track Parameter ECS_MaxTrainCurrent
Definition	Indication of the maximum allowable train current expressed in amperes.
Explanation on Definition	Maximum current taken by the complete train (composition of one or more units). The value shall be given in amperes.
Applicable	Y/N/NYA Explanation on applicability:
	When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable.
	Y depending to the energy supply system (see 1.1.1.2.2.1.2)
Can be repeated	, SOL Track Parameter ECS_MaxTrainCurrent will be provided for each of selected voltage frequency
	An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType and to the parameter 1.1.1.2.2.1.2 / ECS_VoltFreq
Data presentation	[NNNN]
Reference	ENE TSI: 4.2.4.1
Number	1.1.1.2.2.3
Title	Maximum current at standstill per pantograph
XML Name	SOL Track Parameter ECS_MaxStandstillCurrent
Definition	Indication of the maximum allowable train current at standstill for DC systems expressed in amperes.
Explanation on Definition	Parameter related to current taken by the vehicle when it is not in a traction or regenerative mode, e.g. preheating, air-condition, etc.
Applicable	Y/N/NYA Explanation on applicability: This parameter is applicable ("Y") only if "Overhead containe (OCL)" is selected for parameter 1.1.1.2.2.1.1 and if DC system is selected in 1.1.1.2.2.1.2
	Y  An XML attribute called "Set" will be used to link the value of this parameter to the
Can be repeated	parameter 1.1.1.2.2.1.1 / ECS_SystemType and to the parameter 1.1.1.2.2.1.2 / ECS_VoltFreq
Can be repeated  Data presentation	parameter 1.1.1.2.2.1.1 / ECS_SystemType and to the parameter 1.1.1.2.2.1.2 /

Number	1.1.1.2.2.4
Title	Permission for regenerative braking
XML Name	SOL Track Parameter ECS_RegenerativeBraking
Definition	Indication whether regenerative braking is permitted or not.
Applicable	Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable
Can be repeated	Y  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType
Data presentation	Single selection from the predefined list:  Y N  "allowed under conditions"  Explanation on data presentation:
	When regenerative braking is permitted (also when under conditions) – then shall be selected 'yes', when it is not permitted – then shall be selected 'no'.
Number	1.1.1.2.2.5
Title	Maximum contact wire height
XML Name	SOL Track Parameter ECS_MaxWireHeight
Definition	Indication of the maximum contact wire height expressed in metres.
Applicable	Y/N/NYA Explanation on applicability:  This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected in 1.1.1.2.2.1.1
Can be repeated	N
Jan De repeated	

Number	1.1.1.2.2.6
Title	Minimum contact wire height
XML Name	SOL Track Parameter <b>ECS_MinWireHeight</b>
Definition	Indication of the minimum contact wire height expressed in metres.
	Y/N/NYA
Applicable	Explanation on applicability:
	This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected in 1.1.1.2.2.1.1
Can be repeated	N
	[N.NN]
Data procentation	Explanation on data presentation:
Data presentation	The value given can be design value or the last known measured value. If there is no change in height, nominal value will be given.
	Values shall be given in metres with precision of 0.01 m.
Number Title	1.1.1.2.3
	Pantograph
XML Name	EPA
Can be repeated	N
Number	1.1.1.2.3.1
Title	Accepted TSI compliant pantograph heads
XML Name	SOL Track Parameter <b>EPA_TSIHeads</b>
Definition	Indication of which TSI compliant pantograph heads are allowed to be used.
	Y/N/NYA
Applicable	Explanation on applicability:
	This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected for 1.1.1.2.2.1.1, It is not applicable ("N") if there is no contact line.
Can be repeated	Υ
	Single selection from the predefined list:
	1950 mm (Type 1)
	1950 mm (Type 1) with insulated horns. 1600 mm (EP) 2000 mm – 2260 mm
Data presentation	none
	Explanation on data presentation:
	The parameter can contain more than one pantograph defined in LOC&PAS TSI.  Presentation of those pantographs is done by repetition of the parameter with a single selection.
	If declaring acceptance of pantograph heads 1950 (type 1), both insulated and conductive horns shall be accepted.
	conductive norms shall be accepted.

	EN 50367 (2012): Annex A.2 and EN 50206-1 (2010): 4.2 and 6.2.3
Number	1.1.1.2.3.2
	1.1.1.2.3.2
Title	Accepted other pantograph heads
XML Name	SOL Track Parameter <b>EPA_OtherHeads</b>
Definition	Indication of which pantograph heads are allowed to be used
	Y/N/NYA
Applicable	Explanation on applicability:
	This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected in 1.1.1.2.2.1.1
	Υ
Can be repeated	Explanation on repeatability:
	When more than one value of the parameter has to be published, then parameter has to be repeated as many times as many values of the parameter will be published.
Data presentation	Single selection from the predefined list:  1950 mm (Type2) 1950 mm (PL) 1800 mm (NO,SE) 1760 mm (BE)  1600 mm (GB,CTRL) 1600 mm (GB) 1450 mm other none  Explanation on data presentation:  The parameter may contain more than one type of the pantograph head – all of them shall be indicated by repetition of the parameter with different single selections.
	Option 'other' shall be selected for types of pantograph heads not specified in the predefined list.
Poforoncos	LOC&PAS TSI: 7.3.2.14 (specific cases),
References	EN 50367 (2012): Annex B

Number	1.1.1.2.3.3
Title	Requirements for number of raised pantographs and spacing between them, at the given speed
XML Name	SOL Track Parameter <b>EPA_NumRaisedSpeed</b>
Definition	Indication of maximum number of raised pantographs per train allowed and minimum spacing centre line to centre line of adjacent pantograph heads, expressed in metres, the given speed
Applicable	Y/N/NYA Explanation on applicability:
	This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected in 1.1.1.2.2.1.1
Can be repeated	Υ
	Predefined CharacterString:
	[N] [NNN] [NNN]
	Explanation on data presentation:
Data presentation	[N] is number of pantographs.
	First [NNN] is minimum distance between pantographs, in metres.
	Second [NNN] is the speed considered in km/h. Data collected in the UK in miles per hour will be transformed to km per hour before uploading to the RINF application.
General Explanations	This parameter gives the information about the number of pantographs and the distance between them at a given speed for which the Overhead Contact Line (OCL) he been designed.
	As for different speeds different combinations of number of pantographs and distance between them may exist, so this parameter can be repeated to present all of them.
_	ENE TSI: 4.2.13 ;
References	LOC&PAS TSI: 4.2.8.2.9.7

Number	1.1.1.2.3.4
Title	Permitted contact strip material
XML Name	SOL Track Parameter <b>EPA_StripMaterial</b>
Definition	Indication of which contact strip materials are permitted to be used.
Applicable	Y/N/NYA
	Explanation on applicability:
	This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected in 1.1.1.2.2.1.1
	Υ
Can be repeated	Explanation on repeatability:
	When more than one value of the parameter has to be published, then parameter ha to be repeated – as many times as many values of the parameter will be published.
	Single selection from the predefined list:
Data presentation	copper plain carbon copper steel copper alloy impregnated carbon ([NN] % of metallic content) carbon with additive material carbon with cladded copper sintered copper other
	Explanation on data presentation:
	[NN] for impregnated carbon concern the metallic content in %. In case of selection o this option, the respective value of the metallic content has to be added. [NN] is the maximum percentage allowed.
	In case of permitted material different than specified in predefined list, the option 'other' shall be selected.
Reference	LOC&PAS TSI: 4.2.8.2.9.4.2
Number	1.1.1.2.4
Title	OCL separation sections
XML Name	EOS
Can be repeated	N

Number	1.1.1.2.4.1.1
Title	Phase separation
XML Name	SOL Track Parameter <b>EOS_Phase</b>
Definition	Indication of existence of phase separation and required information.
Applicable	Y/N/NYA
	Explanation on applicability:
	TI:
	This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected in 1.1.1.2.2.1.1
C b	
Can be repeated	N
	Single selection from the predefined list
	Υ
Data presentation	N
	Explanation on data presentation:
	Explanation on data presentation.
	In case of existence of phase separation on the track or on the section of the line the
	option 'Y' shall be selected.
Number	1.1.1.2.4.1.2
Title	Information on phase separation
XML Name	SOL Track Parameter <b>EOS_InfoPhase</b>
Definition	Indication of required several information on phase separation
Applicable	Y/N/NYA
	Explanation on applicability:
	Applicable when in parameter 1.1.1.2.4.1.1 selected option is 'Y'
Can be repeated	H Y
Data presentation	Predefined CharacterString:
	longth [NNN]   quitch off hypelics [V/N]   levels and the section [V/N]   levels and the section [V/N]
	length [NNN] + switch off breaker [Y/N] + lower pantograph [Y/N] + km [NNN.NNN] Explanation on data presentation:
	+ 'length [NNN]' – the length of the phase separation in metres
	+ 'switch off breaker [Y/N]' – single selection of 'Y=yes' or 'N=no' to show
	whether the breaker has to be switched off
	+ 'lower pantograph [Y/N]' – single selection of 'Y=yes' or 'N=no' to show whether the pantograph has to be lowered
	+ Km [NNN.NNN] - the location from the start of the line where the new value is valid
References	ENE TSI: 4.2.15

Number	1.1.1.2.4.2.1
Title	System separation
XML Name	SOL Track Parameter <b>EOS_System</b>
Definition	Indication of existence of system separation
Applicable	Y/N/NYA
	Explanation on applicability:
	This parameter is applicable ("Y") only if the value "Overhead contact line (OCL)" is selected for 1.1.1.2.2.1.1
Can be repeated	N
	Single selection from predefined list
Data presentation	Y N
Data presentation	Explanation on data presentation:
	Explanation on data presentation.
	In case of existence of system separation on the track or on the section of the line and required information on the section of the line, the option 'Y=yes' shall be selected.
Number	1.1.1.2.4.2.2
Title	Information on system separation
XML Name	SOL Track Parameter EOS_InfoSystem
Definition	Indication of required several information on system separation
Applicable	Y/N/NYA Explanation on applicability:
	Explanation on applicability.
	Selection 'Y'=yes when in parameter 1.1.1.2.4.2.1 selected option is 'Y'.
Can be repeated	<del>N</del> Y
Data presentation	Predefined CharacterString:
	length [NNN] + switch off breaker [Y/N] + lower pantograph [Y/N] +[CharacterString] + km [NNN.NNN] + change supply system [Y/N]
	Explanation on data presentation:
	+ 'length [NNN]' – the length of the system separation in metres
	+ 'switch off breaker [Y/N]' – single selection of 'Y=yes' or 'N=no' to show
	whether the breaker has to be switched off + 'lower pantograph [Y/N]' – single selection of 'Y=yes' or 'N=no' to show
	whether the pantograph has to be lowered
	+ [CharacterString] 'change supply system [Y/N]' - single selection of 'Y-yes' or 'N=no' to show whether the supply system has to be changed
	+ Km [NNN.NNN] - the location from the start of the line where the new value is valid
References	ENE TSI: 4.2.16
Number	1.1.1.2.4.3
Title	Distance between signboard and phase separation ending

Specific for route compatibility check on French network	XML Name	SOL Track Parameter EOS_DistSignToPhaseEnd
Applicable  Y/N/NYA Explanation on applicability: Specific for route compatibility check on French network.  Can be repeated N Data presentation Predefined CharacterString: [NNN] Explanation on data presentation: The distance is expressed in meters  References  Number 1.1.1.2.5 Title Requirements for rolling stock  XML Name ERS Can be repeated N  Number 1.1.1.2.5.1 Title Current or power limitation on board required  XML Name SOL Track Parameter ERS—PowerLimitOnBoard Definition Indication of whether an on board current or power limitation function on vehicles is required.  Y/N/NYA Explanation on applicability: When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Can be repeated  Y An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.1.1 [ECS, SystemType Single selection from predefined list:  Data presentation Y N References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2 Title Contact force permitted XML Name SOL Track Parameter ERS_ContactForce	Definition	Distance between the signboard authorizing the driver to "raise pantograph" or "close the circuit breaker" after passing the phase separation and the end of the phase
Explanation on applicability:  Specific for route compatibility check on French network.  Can be repeated N  Data presentation  Predefined CharacterString:  [NNN]  Explanation on data presentation:  The distance is expressed in meters  References  Number 1.1.1.2.5  Title Requirements for rolling stock  XML Name ERS  Can be repeated N  Number 1.1.1.2.5.1  Title Current or power limitation on board required  XML Name SOL Track Parameter FRS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  V References LOC&PASTSI: 4.2.8.2.4  Number 1.1.1.2.5.2.  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	Annlicable	
Can be repeated N  Data presentation   Predefined CharacterString: [NNN]   Explanation on data presentation: The distance is expressed in meters  References   Number   1.1.1.2.5   Title   Requirements for rolling stock   XML Name   ERS   Can be repeated   N    Number   1.1.1.2.5.1   Title   Current or power limitation on board required   XML Name   SOL Track Parameter ERS_PowerLimitOnBoard   Definition   Indication of whether an on board current or power limitation function on vehicles is required.   Applicable   Y/N/NYA   Explanation on applicability:   When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.   Y   An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1   ECS_SystemType   Single selection from predefined list:   Y   N   References   LOC&PASTSI: 4.2.8.2.4    Number   1.1.1.2.5.2   Title   Contact force permitted   XML Name   SOL Track Parameter ERS_ContactForce	дрисаыс	
Data presentation    Predefined CharacterString: [NNN]		Specific for route compatibility check on French network.
INNN	Can be repeated	N
Explanation on data presentation:  The distance is expressed in meters  References  Number 1.1.2.5  Title Requirements for rolling stock  XML Name ERS  Can be repeated N  Number 1.1.2.5.1  Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  Can be repeated An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Data presentation Y  N  References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	Data presentation	Predefined CharacterString:
References  Number 1.1.1.2.5 Title Requirements for rolling stock  XML Name ERS  Can be repeated N  Number 1.1.1.2.5.1 Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Can be repeated Y An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Data presentation Y N References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2. Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce		[NNN]
Number 1.1.1.2.5 Title Requirements for rolling stock  XML Name ERS Can be repeated N  Number 1.1.1.2.5.1 Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Can be repeated Y An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Y N References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2. Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce		Explanation on data presentation:
Number Title Requirements for rolling stock  XML Name ERS  Can be repeated N  Number 1.1.1.2.5.1  Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  YANXIL attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_systemType  Single selection from predefined list:  VANIL attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_systemType  Single selection from predefined list:  VANIL attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_systemType  Single selection from predefined list:  VANIL Attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_systemType  Single selection from predefined list:  VANIL Name  SOL Track Parameter ERS_ContactForce		The distance is expressed in meters
Title Requirements for rolling stock  XML Name ERS  Can be repeated N  Number 1.1.1.2.5.1  Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Can be repeated Y An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Y N  References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	References	
Title Requirements for rolling stock  XML Name ERS  Can be repeated N  Number 1.1.1.2.5.1  Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Y N  References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce		
XML Name  ERS  Can be repeated  N  Number  1.1.1.2.5.1  Title  Current or power limitation on board required  XML Name  SOL Track Parameter ERS_PowerLimitOnBoard  Definition  Indication of whether an on board current or power limitation function on vehicles is required.  Applicable  Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  Can be repeated  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Data presentation  Y  N  References  LOC&PAS TSI: 4.2.8.2.4  Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce		
Number  1.1.1.2.5.1  Title  Current or power limitation on board required  XML Name  SOL Track Parameter ERS_PowerLimitOnBoard  Definition  Indication of whether an on board current or power limitation function on vehicles is required.  Applicable  Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  Can be repeated  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Data presentation  Y  N  References  LOC&PAS TSI: 4.2.8.2.4   Number  1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce		Requirements for rolling stock
Number  1.1.1.2.5.1  Title  Current or power limitation on board required  XML Name  SOL Track Parameter ERS_PowerLimitOnBoard  Definition  Indication of whether an on board current or power limitation function on vehicles is required.  4pplicable  Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Y  N  References  LOC&PAS TSI: 4.2.8.2.4  Number  1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce	XML Name	ERS
Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/M/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  Can be repeated An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  V  N  References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2.  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	Can be repeated	N
Title Current or power limitation on board required  XML Name SOL Track Parameter ERS_PowerLimitOnBoard  Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/M/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  Can be repeated An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  V  N  References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2.  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce		
XML Name  SOL Track Parameter ERS_PowerLimitOnBoard  Definition  Indication of whether an on board current or power limitation function on vehicles is required.  Applicable  Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  Can be repeated  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Data presentation  Y  N  References  LOC&PAS TSI: 4.2.8.2.4   Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce	Number	1.1.1.2.5.1
Definition Indication of whether an on board current or power limitation function on vehicles is required.  Applicable Y/N/NYA Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType Single selection from predefined list:  Data presentation Y N References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2. Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	Title	Current or power limitation on board required
required.  Applicable  Y/N/NYA  Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  V  N  References  LOC&PAS TSI: 4.2.8.2.4  Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce	XML Name	SOL Track Parameter <b>ERS_PowerLimitOnBoard</b>
Explanation on applicability:  When "not electrified" is chosen in parameter 1.1.1.2.2.1.1, then this parameter is not applicable selection 'N'.  Y  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Data presentation  Y  N  References  LOC&PAS TSI: 4.2.8.2.4   Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce		required.
applicable selection 'N'.  Y  Can be repeated  An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Number  LOC&PAS TSI: 4.2.8.2.4  Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce	Applicable	
An XML attribute called "Set" will be used to link the value of this parameter to the parameter 1.1.1.2.2.1.1 / ECS_SystemType  Single selection from predefined list:  Pata presentation  Y N  References  LOC&PAS TSI: 4.2.8.2.4  Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce		
parameter 1.1.1.2.2.1.1 / ECS_SystemType Single selection from predefined list:  Data presentation  Y N  References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2.  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	Can be repeated	·
Data presentation  Y N  References  LOC&PAS TSI: 4.2.8.2.4  Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce		parameter 1.1.1.2.2.1.1 / ECS_SystemType
N References LOC&PAS TSI: 4.2.8.2.4  Number 1.1.1.2.5.2.  Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	Data presentation	
References  LOC&PAS TSI: 4.2.8.2.4  Number  1.1.1.2.5.2.  Title  Contact force permitted  XML Name  SOL Track Parameter ERS_ContactForce		
Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce	References	
Title Contact force permitted  XML Name SOL Track Parameter ERS_ContactForce		
XML Name SOL Track Parameter ERS_ContactForce	Number	1.1.1.2.5.2.
XML Name SOL Track Parameter ERS_ContactForce	Title	Contact force permitted
	XML Name	
	Definition	Indication of contact force allowed expressed in newtons

Applicable	Y/N/NYA
	Explanation on applicability:
	This parameter is applicable ("Y") only if the value "Overhead contact line (OCL)" is
	selected for 1.1.1.2.2.1.1
Can be repeated	
Can be repeated	N
Data presentation	CharacterString
	Explanation on data presentation:
	The force is either given as: a value of the static force and of the maximum force expressed in newtons, or as a formula for function of the speed.
	The formula of the function shall represent the curve describing the value of the contact
Comments	force in relation to the speed.
	Static and maximum forces are given only for the maximum permitted line speed (see parameter number 1.1.1.1.2.5).
References	EN 50367:2012 Annex A
Number	1.1.1.2.5.3
Number Title	1.1.1.2.5.3  Automatic dropping device required
Title	Automatic dropping device required
Title  XML Name	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired
Title  XML Name	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired  Indication of whether an automatic dropping device (ADD) required on the vehicle.
Title  XML Name	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired  Indication of whether an automatic dropping device (ADD) required on the vehicle.  Y/N/NYA
Title  XML Name	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired  Indication of whether an automatic dropping device (ADD) required on the vehicle.  Y/N/NYA  Explanation on applicability:  This parameter is applicable ("Y") only if the value "Overhead contact line (OCL)" is
Title  XML Name  Definition	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired  Indication of whether an automatic dropping device (ADD) required on the vehicle.  Y/N/NYA  Explanation on applicability:  This parameter is applicable ("Y") only if the value "Overhead contact line (OCL)" is selected for 1.1.1.2.2.1.1
Title  XML Name  Definition  Can be repeated	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired  Indication of whether an automatic dropping device (ADD) required on the vehicle.  Y/N/NYA  Explanation on applicability:  This parameter is applicable ("Y") only if the value "Overhead contact line (OCL)" is selected for 1.1.1.2.2.1.1
Title  XML Name  Definition	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired  Indication of whether an automatic dropping device (ADD) required on the vehicle.  Y/N/NYA  Explanation on applicability:  This parameter is applicable ("Y") only if the value "Overhead contact line (OCL)" is selected for 1.1.1.2.2.1.1
Title  XML Name  Definition  Can be repeated	Automatic dropping device required  SOL Track Parameter ERS_AutoDropRequired  Indication of whether an automatic dropping device (ADD) required on the vehicle.  Y/N/NYA  Explanation on applicability:  This parameter is applicable ("Y") only if the value "Overhead contact line (OCL)" is selected for 1.1.1.2.2.1.1  N  Single selection from the predefined list:

Number	1.1.1.3
Γitle	Control-command and signalling subsystem
Can be repeated	N
Number	1.1.1.3.1
XML Name	CDE
Title	Declarations of verification for track
Can be repeated	N
Number	1.1.1.3.1.1
Title	
	EC declaration of verification for track (CCS)
XML Name	SOL Track Parameter CDE_ECVerification
Definition	Unique number for EC declarations following format requirements specified in the 'Document about practical arrangements for transmitting interoperability document:
Explanation on	(CCS) in title means that here we include only declarations concerning command –
Definition	control and signalling subsystem on the specific track.
	Y/N/NYA
Applicable	Explanation on applicability:
	"Y" shall be selected in case when EC declaration was issued
	Y Explanation on repeatability:
Can be repeated	Ехрівнаціон он гереатарінту.
	For the specific track the several EC declarations may be issued, so parameter has to repeated as many times as many numbers of declarations has to be presented.
Data presentation	Predefined CharacterString:
	[CC/RRRRRRRRRRRRR/YYYY/NNNNNN]
General Explanations	With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the CCS TSI now includes all the networks (TEN and off-TEN) w the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 mm
Reference concerning format	'Document about practical arrangements for transmitting interoperability document [23]
Validation	The validation is described before this Table, in section 2.3.
Number	1.1.1.3.2
Title	TSI compliant train protection system (ETCS)
XML Name	СРЕ
Can be repeated	N

Number	1.1.1.3.2.1
Title	ETCS level
XML Name	SOL Track Parameter CPE_Level
Definition	ERTMS / ETCS application level related to the track side equipment.
Applicable	Y/NYA
Can be repeated	Y If this parameter is repeated, parameter 1.1.1.3.2.2 shall be created also for the corresponding type. This parameter is to be considered children of the current.  For grouping "children" parameters of the current parameter, an XML attribute called "Set" must be declared at the parent and childrent levels with the same keyword value.
Data presentation	Single selection from the predefined list:  N 0 1 2 3 NTC  Explanation on data presentation:  The different ERTMS / ETCS application levels are a way to express the possible operating relationships between track and train. Level definitions are principally related to the track side equipment used, to the way the track side information reaches the onboard units and to which functions are processed in the track side and in the on-board equipment respectively.  The ETCS value NTC is only relevant when the line is dual equipped with ETCS (i.e., balises are placed in the track) and Class B system, and both systems are in operation at the same time.  In those cases, this parameter should be filled relevant ETCS Level and repeated with the value "NTC".  If the line is only equipped with Class B, this should be reflected in Parameter
Validation	1.1.1.3.5.3, and this parameter should be set to "N".  If "N" (= no ETCS on the trackside) is chosen from the list, all other ETCS parameters
	(from 1.1.1.3.2.2 to 1.1.1.3.2.7) are not applicable.  If ETCS is on the trackside ('N' is not selected), all other ETCS parameters (from 1.1.1.3.2.2 to 1.1.1.3.2.10) are applicable
References	CCS TSI: 2.3
Number	1.1.1.3.2.2
Title	ETCS baseline
XML Name	SOL Track Parameter <b>CPE_Baseline</b>
Definition	ETCS baseline installed lineside.
Applicable	Y/N/NYA Explanation on applicability:  Not applicable ('N') when selected value for 1.1.1.3.2.1 is 'N'.
	Only applicable when selected value for 1.1.1.3.2.1 is not 'N'

Single choice from the predefined list prebaseline 2 baseline 2 baseline 2 baseline 3 Maintenance release 1 baseline 3 release 2 Explanation on data presentation:  Prebaseline 2 corresponds to older versions, e.g. "corridor 2007"  Reference CCS TSI: Table A2 of Annex 1 of Decision 2012/696/EU CCS TSI: Tables A2.1, A2.2 and A2.3 of Annex A of Regulation (EU) 2016/919  Number 1.1.1.3.2.3  Title ETCS infill necessary for line access  XML Name SOL Track Parameter CPE_Infill  Definition Indication whether infill is required to access the line for safety reasons.  Explanation on definition Infill is the criterion for a vehicle to get access to the network.line. explanation on applicability:  Only-applicable when selected value for 1.1.1.3.2.1 is '1'.  Can be repeated N  Single selection from the predefined list:  Y/N  General Explanations  As indicated in CCS TSI section 7.2.6 an ETCS Level 1 trackside application may require that the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  Reference CCS TSI: 7.2.6 and 4.2.3  Number 1.1.1.3.2.4  Title ETCS infill installed line-side  XML Name SOL Track Parameter CPE_InfillLineSide	Can be repeated	Y: SOL Track Parameter CPE_Baseline will be provided for each of selected ETCS Level (SOL Track Parameter CPE_Level)  An XML attribute called "Set" will be used to link the value of this parameter to the ETCS Level.
Reference  CCS TSI: Table A2 of Annex 1 of Decision 2012/696/EU  CCS TSI: Tables A2.1, A2.2 and A2.3 of Annex A of Regulation (EU) 2016/919  Number  1.1.1.3.2.3  Title  ETCS infill necessary for line access  XML Name  SOL Track Parameter CPE_Infill  Definition  Indication whether infill is required to access the line for safety reasons.  Explanation on definition  Applicable  Y/N/NYA  Explanation on applicability:  Only-applicable when selected value for 1.1.1.3.2.1 is '1'.  Can be repeated  N  Data presentation  Single selection from the predefined list:  Y / N  General  Explanations  As indicated in CCS TSI section 7.2.6 an ETCS Level 1 trackside application may require that the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  Reference  CCS TSI: 7.2.6 and 4.2.3  Number  1.1.1.3.2.4  Title  ETCS infill installed line-side  XML Name  SOL Track Parameter CPE_InfillLineSide	Data presentation	Single choice from the predefined list prebaseline 2 baseline 2 baseline 3 Maintenance release 1 baseline 3 release 2
Number 1.1.1.3.2.3  Title ETCS infill necessary for line access  XML Name SOL Track Parameter CPE_Infill  Definition Indication whether infill is required to access the line for safety reasons.  Explanation on definition	Reference	CCS TSI: Table A2 of Annex 1 of Decision 2012/696/EU
Title ETCS infill necessary for line access  XML Name SOL Track Parameter CPE_Infill  Definition Indication whether infill is required to access the line for safety reasons.  Explanation on definition Infill is the criterion for a vehicle to get access to the network.line.  Applicable Y/N/NYA Explanation on applicability:  Only-applicable when selected value for 1.1.1.3.2.1 is '1'.  Can be repeated N  Data presentation Single selection from the predefined list:		CCS TSI: Tables A2.1, A2.2 and A2.3 of Annex A of Regulation (EU) 2016/919
Title ETCS infill necessary for line access  XML Name SOL Track Parameter CPE_Infill  Definition Indication whether infill is required to access the line for safety reasons.  Explanation on definition Infill is the criterion for a vehicle to get access to the network.line.  Applicable Y/N/NYA Explanation on applicability: Only-applicable when selected value for 1.1.1.3.2.1 is '1'.  Can be repeated N  Data presentation Single selection from the predefined list: Y / N  General Explanations As indicated in CCS TSI section 7.2.6 an ETCS Level 1 trackside application may require that the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  Reference CCS TSI: 7.2.6 and 4.2.3  Number 1.1.1.3.2.4  Title ETCS infill installed line-side  XML Name SOL Track Parameter CPE_InfillLineSide	Number	1.11.3.2.3
XML Name       SOL Track Parameter CPE_Infill         Definition       Indication whether infill is required to access the line for safety reasons.         Explanation on definition       Infill is the criterion for a vehicle to get access to the network.line.         Applicable       Y/N/NYA         Explanation on applicability:       Only-applicable when selected value for 1.1.1.3.2.1 is '1'.         Can be repeated       N         Data presentation       Single selection from the predefined list:	Title	
Definition Indication whether infill is required to access the line for safety reasons.  Explanation on definition  Applicable  Y/N/NYA  Explanation on applicability:  Only-applicable when selected value for 1.1.1.3.2.1 is '1'.  Can be repeated  N  Data presentation  Single selection from the predefined list: Y/N  General Explanations  As indicated in CCS TSI section 7.2.6 an ETCS Level 1 trackside application may require that the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  Reference  CCS TSI: 7.2.6 and 4.2.3  Number  1.1.1.3.2.4  Title  ETCS infill installed line-side  XML Name  SOL Track Parameter CPE_InfillLineSide	XML Name	
Explanation on definition  Applicable  Y/N/NYA  Explanation on applicability:  Only-applicable when selected value for 1.1.1.3.2.1 is '1'.  Can be repeated  N  Data presentation  Single selection from the predefined list:	Definition	
Explanation on applicability:  Only-applicable when selected value for 1.1.1.3.2.1 is '1'.  Can be repeated  N  Single selection from the predefined list: Y/N  General Explanations  As indicated in CCS TSI section 7.2.6 an ETCS Level 1 trackside application may require that the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  Reference  CCS TSI: 7.2.6 and 4.2.3  Number  1.1.1.3.2.4  Title  ETCS infill installed line-side  XML Name  SOL Track Parameter CPE_InfillLineSide	·	
Data presentation  Single selection from the predefined list: Y/N  General Explanations  As indicated in CCS TSI section 7.2.6 an ETCS Level 1 trackside application may require that the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  CCS TSI: 7.2.6 and 4.2.3  Number  1.1.1.3.2.4  Title ETCS infill installed line-side  XML Name  SOL Track Parameter CPE_InfillLineSide	Applicable	Explanation on applicability:
Data presentation  Y / N  General Explanations  As indicated in CCS TSI section 7.2.6 an ETCS Level 1 trackside application may require that the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  CCS TSI: 7.2.6 and 4.2.3  Number  1.1.1.3.2.4  Title ETCS infill installed line-side  XML Name  SOL Track Parameter CPE_InfillLineSide	Can be repeated	N
Explanations the on-board is equipped with the corresponding in-fill data transmission (Euroloop or radio) if the release speed is set to zero for safety reasons.  Reference CCS TSI: 7.2.6 and 4.2.3  Number 1.1.1.3.2.4  Title ETCS infill installed line-side  XML Name SOL Track Parameter CPE_InfillLineSide	Data presentation	
Number 1.1.1.3.2.4  Title ETCS infill installed line-side  XML Name SOL Track Parameter CPE_InfillLineSide		the on-board is equipped with the corresponding in-fill data transmission (Euroloop or
Title ETCS infill installed line-side  XML Name SOL Track Parameter CPE_InfillLineSide	Reference	CCS TSI: 7.2.6 and 4.2.3
Title ETCS infill installed line-side  XML Name SOL Track Parameter CPE_InfillLineSide		
XML Name SOL Track Parameter CPE_InfillLineSide	Number	1.1.1.3.2.4
SOL Hack Parameter CPE_IIIIILINESide	Title	ETCS infill installed line-side
Definition Information about installed trackside equipment capable to transmit infill information	XML Name	SOL Track Parameter CPE_InfillLineSide
	Definition	Information about installed trackside equipment capable to transmit infill information
by loop or GSM-R for level 1 installation.  Applicable Y/N/NYA	Applicable	
Explanation on applicability:  Only applicable when selected value for 1.1.1.3.2.1 is '1'.	•	Explanation on applicability:
Can be repeated N	Can be repeated	

Single choice from the predefined list:
None
Loop
GSM-R radio infill
Loop & GSM-R radio infill
CCS TSI: 4.2.2
CCS TSI: 4.2.2

1.1.1.3.2.5
ETCS national <u>packet 44</u> application implemented
SOL Track Parameter CPE_NatApplication
Indication whether data for national applications is transmitted between track and train.
Y/N/NYA Explanation on applicability:
Not applicable 'N' when selected value for 1.1.1.3.2.1 is 'N'.
Only applicable when selected value for 1.1.1.3.2.1 is not 'N'
N
Single selection from the predefined list:
Y/N
Packets 44 are the means to transmit data for national applications between train and track and vice versa, using the data transmission facilities included within the ETCS.  NID_XUSER values managed by ERA in a document about ETCS variables available on ERA website.
CCS TSI: 6.3.4
1.1.1.3.2.6
Existence of operating restrictions or conditions
SOL Track Parameter CPE_RestrictionsConditions
Indication whether restrictions or conditions due to partial compliance with the CCS TSI exist.
Y/N/NYA Explanation on applicability:
Not applicable 'N' when selected value for 1.1.1.3.2.1 is 'N'.
Only applicable when selected value for 1.1.1.3.2.1 is not 'N'
N
Single selection from the predefined list:

	In case of Y, the RU have to contact the IM to be informed of these conditions.
General explanations	These conditions and restrictions of use are considered in section 6.4 of the CCS TSI.  They should be described using the template available on Agency website (Certification and deviations – Guidelines for using the ERA template) with the following link:  https://www.era.europa.eu/activities/european-rail-traffic-management-system-ertms_en#meeting6
Reference	CCS TSI: 6.4

Number	1.1.1.3.2.8
Title	Train integrity confirmation from on-board necessary for line access
XML Name	SOL Track Parameter CPE_IntegrityConfirmation
Definition	Indication whether Train Integrity monitoring system (TIMS) is required to access the line for safety reasons.
Applicable	Y/N/NYA Explanation on applicability:
Can be repeated	Only applicable when selected value for 1.1.1.3.2.1 is '3"  N
Data presentation	Single selection from the predefined list: Y / N
General Explanations	
Reference	
<u>i</u>	
Number	1.1.1.3.2.9
Title	ETCS system compatibility
XML Name	SOL Track Parameter CPE_SystemCompatibility
Definition	ETCS requirements used for demonstrating technical compatibility.
Applicable	Y/N/NYA Explanation on applicability:  Only applicable when selected value for 1.1.1.3.2.1 is not 'N'
Can be repeated	Explanation on repeatability:  The vehicles are considered compatible with the infrastructure regarding this parameter, if matches any of the values declared. In case the value "Not Defined" or "ESC-EU-0" is used, is not expected to have repetitions with additional values.
Data presentation	Single selection from the predefined list:  Not Defined  ESC-EU-0

ESC-SE-01-HiL2 ESC-SE-02-BoL2 ESC-SE-03-L3 ESC-SE-04-HiL2B3 ESC-SE-05-BoL2B3 ESC-NL-01 ESC-NL-02 ESC-NL-03 ESC-NL-04 ESC-NL-05 ESC-NL-06 ESC-NL-07 ESC-NL-08 ESC-NL-09 ESC-NL-10 ESC-NL-11 ESC-NL-12 ESC-NL-13 ESC-NL-14 ESC-NL-15 ESC-NL-16 ESC-NL-17 ESC-NL-18 ESC-NL-19 ESC-NL-20 ESC-NL-21 ESC-NL-22 ESC-NL-23 ESC-FR-01-LB ESC-FR-02-LB ESC-FR-03-LB ESC-FR-04-LB ESC-FR-05-LB ESC-FR-06-LB ESC-FR-07-SF ESC-FR-08-SF ESC-FR-09-SF ESC-FR-10-SF ESC-FR-11-SF ESC-FR-12-SF

```
ESC-FR-13-SF
ESC-FR-14-SF
ESC-FR-15-SF
ESC-FR-16-SF
ESC-FR-17-SF
ESC-FR-18-SF
ESC-FR-19-SF
ESC-FR-20-SF
ESC-FR-21-SF
ESC-FR-22-LB
ESC-FR-23-LB
ESC-FR-24-AA
ESC-FR-25-AD
ESC-FR-26-AE
ESC-FR-27-LGVEE
ESC-FR-28-LGVEE
ESC-FR-29-LGVEE
ESC-FR-30-LGVEE
ESC-FR-31-LGVEE
ESC-FR-32-LGVEE
ESC-FR-33-SEA
ESC-FR-34-SEA
ESC-FR-35-BPL
ESC-FR-36-BPL
ESC-BE-02-L2FS
ESC-BE-03-L1LS
ESC-BE-01-L1FS
ESC-BE-04-LGV3 4
ESC-IT-01-RFI-1.0_L2_AVp_RMNA_01
ESC-IT-02-RFI-1.0 L2 AVp MIBO 01
ESC-IT-03-RFI-1.0_L2_AVp_BOFI_01
ESC-IT-04-RFI-1.0_L2_AVp_TOMI_01
ESC-IT-05-RFI-1.0_L2_AVp_TRBR_01
ESC-IT-06-RFI-1.0_L2_AVp_DD_01
ESC-IT-08-RFI-2.0_L1_Cs_DONO_01
ESC-IT-07-RFI-2.0_L1_Cs_ISDO_01
ESC-IT-09-RFI-2.0_L1_Cs_CHIASSO_01
ESC-IT-10-RFI-2.1_L2_Cs_NOPD_01
ESC-IT-11-RFI-2.0_L1_Cs_PTLU_01ESC-IT-12-RFI-2.0_L1_Cs_ISDO_CH_01
```

ESC-IT-13-RFI-2.0 L1 Cs PTLU CH 01 ESC-IT-14-RFI\_2.1\_L1\_Cs\_VENTIMIGLIA\_01 ESC-IT-15-RFI\_2.1\_L1\_Cs\_VENTIMIGLIA\_FR\_01 ESC-IT-16-RFI\_2.1\_L1\_Cs\_VIVO\_01 ESC-IT-17-RFI\_2.1\_L2\_Cs\_MIMOCH\_01 ESC-IT-18-RFI\_2.1\_L2\_Cs\_NOPD\_02 ESC-IT-19-RFI 1.0 L2 AVp AGGR01 01 ESC-IT-20-RFI\_1.0\_L2\_AVp\_AGGR02\_01 ESC-IT-21-RFI 2.0 L1 Cs AGGR03 01 ESC-IT-22-RFI 1.0 L1 Cs AGGR04 01 ESC-IT-23-RFI\_2.1\_L1\_Cs\_AGGR05\_01 ESC-PL-01-L1 ESC-PL-02-L1LS ESC-PL-03-L2 ESC-PL-04-L2 ESC-PL-05-L2 ESC-PL-06-L2 ESC-NO-01 ESC-NO-02 ESC-DK-01-East ESC-DK-02-West ESC-AT-01 ESC-CZ-01 ESC-CZ-02 ESC-RO-01 ESC-DE-01-B2\_L2 ESC-DE-02-B3 L2 As defined in the revised CCS TSI in sections 6.1.2.4 and 6.1.2.5, the Agency will "set up and manage in a technical document the set of checks to demonstrate the technical compatibility of an on-board subsystem with the trackside subsystem". The predefined list of values will follow the changes in that technical document. Each set of checks will have a unique id, like "ESC-1" (final format not defined). The different values to be defined inside each network need to be submitted by each IM with the support of their suppliers to the Agency. (CCS TSI 6.1.2.4 and 6.1.2.5 – Regulation (EU) 2019/776). **General Explanations** The Agency will then compile them in a Technical Document, give them an identifier, and after, these identifiers will be available for selection in RINF and ERA TV. Therefore, these values will not be available until the IM has communicated the checks to the Agency. There is information about the ESC/RSC and the submission to the Agency in the ERA

webpage (Link). More information will be included in the CCS TSI application guide.

The deadline set in the CCS TSI for IMs to complete this process is 16 January 2020.

Reference	Agency Technical Document ESC/RSC (https://www.era.europa.eu/sites/default/files/activities/docs/era_td-011rec1028_esc-rsc_technical_document_en.pdf). CCS TSI Regulation (EU) 2019/776 section 4.2.17 and 6.1.2.4
Number	1.1.1.3.2.10
Title	ETCS M_version
XML Name	SOL Track Parameter CPE_MVersion
Definition	ETCS M_version according to SRS 7.5.1.9
Applicable	Y/N/NYA
	Explanation on applicability:
	Only applicable when selected value for 1.1.1.3.2.1 is $\frac{'1'}{}$ Not 'N'
Can be repeated	N
	Single selection from the predefined list:
	1.0
Data presentation	1.1
	2.0
	2.1
General Explanations	
Reference	CCS TSI: ETCS M_version according to SRS 7.5.1.9
Number	1.1.1.3.3
Title	TSI compliant radio (GSM-R)
XML Name	CRG
Can be repeated	N
<u>.</u>	
Number	1.1.1.3.3.1
Title	GSM-R version
XML Name	. SOL Track Parameter CRG_Version
Definition	GSM-R version installed lineside
Applicable	Y/NYA
	Υ
	Explanation on repeatability:
Can be repeated	When more than one value of the parameter has to be published, then parameter has
	to be repeated – as many times as many values of the parameter will be published. The
	parameter may be repeated if different versions are installed in different sections of the network.
Data presentation	Single selection from the predefined list:
	none previous version to Baseline 0
	Baseline 0 r3
	Baseline 0 r4 Baseline 1

	Explanation on data presentation:
	Since more than one version may be installed in different areas, the information has to be done by parameter repetition using a single selection.
General Explanations	In case there is no GSM-R network available, please select "none".  In case you have installed FRS 7.3.0/SRS15.3.0, please select "Baseline 0 r3". In case you have installed FRS 7.4.0/SRS 15.4.0, please select "Baseline 0 r4".  In case you have installed FRS 8.0.0/SRS 16.0.0, please select "Baseline 1".  In case you have installed a version prior to those (i.e. FRS 7/SRS 15 or FRS 6/SRS 14) please select "Previous version to Baseline 0".
Comments	If "none" is chosen from the list of 1.1.1.3.3.1, all other GSM-R parameters (number 1.1.1.3.3.2 and 1.1.1.3.3.3) are not applicable.
Reference	CCS TSI: Table A2 of Annex 1 of Decision 2012/696/EU
Number	1.1.1.3.3.2
Title	Number of active GSM-R mobiles (EDOR) or simultaneous communication session on- board for ETCS Level 2 (or level 3) needed to perform radio block centre handovers without having an operational disruption
XML Name	SOL Track Parameter CRG_NumActiveMob
Definition	
applicability	Y/N/NYA Applicable only when level 2 or 3 is selected for parameter 1.1.1.3.2.1
Can be repeated	N
Data presentation	Single selection from the predefined list:
	0
	1
	2
	Explanation on data presentation:
	In case there is no ETCS Level 2 in the line (ETCS Level 1), please select "0".
	In case there is ETCS Level 2 in the line, the minimum number of EDOR required on board would be 1.
	In case ETCS baseline 3 release 2 is selected, select "2"
	Please select "1" or "2", taking into account that TSI compliant trains may only be fitted with 1 EDOR.
Reference	No reference in TSI yet.

Number	1.1.1.3.3.3
Title	Optional GSM-R functions
XML Name	SOL Track Parameter CRG_OptionalFunctions
Definition	Use of optional GSM-R functions which might improve operation on the line. They are for information only and not for network access criteria.
Applicable	Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
	Υ
Can be repeated	Explanation on repeatability:
	To show more than one function by indicating single selection, the parameter has to be repeated as many times as many function has to be presented.
	Single selection from the predefined list:
	Network selection manual (*1)
	Network selection via balise (*1)
	Network selection automatic (*1)
	Public emergency (112) available (*2)
	Broadcast calls (VBS) used (*3)
	Text message service used (SMS) (*4)
	Restriction of display of called/calling user (*5)
	Automatically forward of incoming call if no reply (*5)
	Automatically forward of incoming call if not reachable (*5)
	Use of chargeable Network Services (*6)
	General data applications (*7)
	ETCS RBC or other devices alerted when initiating a REC (Railway Emergency Call) (*8)
Data presentation	Display at the controller terminal of the location of the mobile initiating a REC (Railway Emergency Call) (*8)
	Use of enhanced Railway Emergency Call (eREC) (*8)
	GSM-R shunting used (*8)
	Data recorded in case of Shunting Emergency Call (*8)
	Extended frequency bands used (*9)
	Other(*11):
	Explanation on data presentation:
	(*1) These inputs refer to the expected behaviour by your network, i.e. if you have any area or point where an automatic selection of network should be done or if you have any location where you have installed balises to instruct a change of radio network. In order to be able to attend to these indications (automatic network, network change by balise) some configuration is needed in the mobile.
	In case there is a balise used to announce the change of the network, or if there are locations where the network selection is planned by the IM to be done automatically (and not manually, as stated in the requirements). It should be considered as an item that is related to the design of the infrastructure.

	(*2) the possibility to dial 112 is something specific to the network that should be communicated to the vehicles accessing it.
	(*3) the use of broadcast calls is something specific to the network that has to be configured in it.
	(*4) it is something specific to the network that has to be configured in it if the service is provided.
	(*5) it is something specific to the network that has to be configured in it if the service is provided; something may need to be configured on the network but also in the mobile subscriber data if it wants to use the service. What is requested here is the information of the network capability.
	(*6) if they are configured on the network. Please indicate which in the "Other information" box.
	(*7) To be selected if other data applications, different from ETCS L2, can be used within the network –
	(*8) if it is configured on the network.
	"GSM-R Shunting used" in order to make public if the GSM-R is used in the network for shunting activities.
	(*9) Please specify in the "Other information" box for which services /applications are they planned and which are the frequencies in use.
	(*11): Please use this field to indicate any additional information on network characteristics, e.g.; interference level, leading to the need of additional on-board protection; areas where GPRS for ETCS can be used;
Number	1.1.1.3.3.3.1
Title	
	Additional information on network characteristics
XML Name	Additional information on network characteristics  SOL Track Parameter CRG_AdditionalnetworkInfo
XML Name  Definition	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA
XML Name	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection
XML Name  Definition	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA
XML Name  Definition	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
XML Name  Definition  Applicable	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
XML Name  Definition  Applicable	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
XML Name  Definition  Applicable  Can be repeated	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  Y  Explanation on repeatability:
XML Name  Definition  Applicable  Can be repeated	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  Y  Explanation on repeatability:  [Characterstring]
XML Name Definition  Applicable  Can be repeated  Data presentation	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection  Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  Y  Explanation on repeatability:  [Characterstring]  Please use this field to indicate any additional information on network.  The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the
XML Name Definition  Applicable  Can be repeated  Data presentation  explanations	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection  Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  Y  Explanation on repeatability:  [Characterstring]  Please use this field to indicate any additional information on network.  The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the
XML Name Definition  Applicable  Can be repeated  Data presentation  explanations	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection  Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  Y  Explanation on repeatability:  [Characterstring]  Please use this field to indicate any additional information on network.  The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the
XML Name Definition  Applicable  Can be repeated  Data presentation  explanations  Reference	SOL Track Parameter CRG_AdditionalnetworkInfo  Any additional information on network characteristics or corresponding document available from the IM and stored by the Agency, e.g.; interference level, leading to the recommendation of additional on-board protection Y/N/NYA  Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  Y  Explanation on repeatability:  [Characterstring]  Please use this field to indicate any additional information on network.  The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.

XML Name	SOL Track Parameter <b>CRG_GPRSForETCS</b>
Definition	Indication if GPRS can be used for
Applicable	Y/N/NYA
	Explanation on applicability:
	Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1 or when 1.1.1.3.2.1 is "N", "NTC", "0" or "1".
	N
Can be repeated	Explanation on repeatability:
Data presentation	Single selection from the predefined list: Y / N
explanations	Indicate if GPRS can be used for ETCS
Reference	Sections of EIRENE and ETCS subsets for trackside in TSI
Number	1.1.1.3.3.3.3
Title	Area of implementation of GPRS
XML Name	SOL Track Parameter CRG_GPRSAreaOfImpl
Definition	Indication of the area in which GPRS can be used for ETCS
	Y/N/NYA
Applicable	Explanation on applicability:
Аррисавіе	Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1 or when 1.1.1.3.2.1 is "N", "NTC", "0" or "1".
	Applicable if the answer to 1.1.1.3.3.3.2 / GPRS for ETCS is Y
Can be repeated	Υ
	Explanation on repeatability:
Data presentation	[Characterstring]
explanations	Since GPRS can be used for ETCS, indicate in which areas it is implemented (e.g. whole section, only between two signals, at the station)
Reference	Sections of EIRENE optional for trackside in TSI
Number	1.1.1.3.3.4
Title	Use of group 555
XML Name	SOL Track Parameter CRG_Needof555
Definition	Indication if group 555 is needed
	Y/N/NYA
Applicable	Explanation on applicability:
	Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
	N

Can be repeated	Explanation on repeatability:
Data presentation	Selection from the predefined list:
	Y/N
explanations	
Reference	Sections of EIRENE not covered by references in TSI
Number	1.1.1.3.3.5
Title	GSM-R networks covered by a roaming agreement
XML Name	SOL Track Parameter CRG_RoamingAgreement
Definition	Name of the own GSM-R network and list of GSM-R networks which are covered by a
Deminion	roaming agreement (for CS services.)
	Y/N/NYA
Applicable	Explanation on applicability:
присаыс	
	Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
Can be repeated	Υ
	Explanation on repeatability:
Data presentation	Single selection from the predefined list:
	GSM-R A (Austria)
	GSM-R AL (Albania)
	GSM-R B (Belgium)
	GSM-R BA (Bosnia Herzegovina)
	GSM-R BG (Bulgaria)
	GSM-R BY (Belarus)
	GSM-R CH (Switzerland)
	GSM-R CZ (Czech Rep.) GSM-R D (Germany)
	GSM-R DK (Denmark)
	GSM-R E (Spain)
	GSM-R EE (Estonia)
	GSM-R F (France)
	GSM-R FI (Finland)
	GSM-R GB (UK (Great Britain))
	GSM-R GR (Greece) GSM-R HR (Croatia)
	GSM-R HU (Hungary)
	GSM-R I (Italy)
	GSM-R IE (Ireland)
	GSM-R IS (Iceland)
	GSM-R KO (Kosovo)
	GSM-R L (Luxembourg)
	GSM-R LT (Lithuania) GSM-R LV (Latvia)
	GSM-R MD (Moldova)
	GSM-R ME (Montenegro)
	GSM-R MK (Macedonia)
	GSM-R N (Norway)
	GSM-R NL (Netherlands)
	GSM-R P (Portugal) GSM-R PL (Poland)
	GSM-R PL (Poland) GSM-R RO (Romania)
	GSM-R RO (Romania)

	GSM-R RU (Russia)
	GSM-R S (Sweden)
	GSM-R SI (Slovenia)
	GSM-R SK (Slovakia)
	GSM-R SR (Serbia )
	GSM-R TR (Turkey)
	GSM-R UA (Ukraine)
	Name of the own GSM-R network and list of-GSM-R networks which are covered by a roaming agreement for CS services.
explanations	This list is managed by UIC. The Agency will monitor it in order to update the list of possible values when necessary.
	For Route Compatibility purposes and simplicity, the own network needs to be declared by the IM, so the RUs can systematically check the compatibility.
	For voice services, roaming for CS is applicable. For ETCS, as long as roaming for CS is ensured, the interoperability will be guaranteed.
Reference	Sections of EIRENE not covered by references in TSI
Number	1.1.1.3.3.6
Title	Existence of roaming to public networks
XML Name	
	SOL Track Parameter CRG_RoamingPublic
Definition	Existence of roaming to a public networks (if roaming to a public network is configured, please indicate so)
	Y/N/NYA
	Explanation on applicability:
Applicable	
	Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
Can be repeated	N Surface the surface and the surface transfer to the surface transfer transfer transfer transfer to the surface transfer t
	Explanation on repeatability:
D-1	Colonia form the modefined live
Data presentation	Selection from the predefined list:
	Y N
	14
explanations	In case of y: provide the name of the public network in parameter 1.1.1.3.3.7
Reference	Sections of EIRENE not covered by references in TSI
Number	1.1.1.3.3.7
Title	Details on roaming to public networks
VMI Nama	
XML Name	SOL Track Parameter CRG_RoamingPublicDetails
Definition	If roaming to public networks is configured, please indicate to which networks, for
	which users and in which areas.
	Y/N/NYA
Applicable	Explanation on applicability:
Applicable	

	Applicable if the answer to parameter 1.1.1.3.3.6 / Existence of roaming to public networks is 'Y'
Can be repeated	N
cuit be repeated	Explanation on repeatability:
Data presentation	Character string
	If roaming to a public network is configured, please indicate to which networks, for
	which users and in which areas. Please also add if there is any operational restriction f
	vehicles that cannot roam into any of the available public networks.
Explanations	If roaming to a public network is configured, please indicate to which networks, for
	which users and in which areas. Please list if any GSM-R functionality is not available
	when roaming to a public network (e.g. REC, Functional Addressing, Group Calls). Plea
	also add if there is any operational restriction for vehicles that cannot roam into any o the available public networks.
Reference	
Number	1.1.1.3.3.8
Title	No GSMR coverage
XML Name	SOL Track Parameter <b>CRG_GSMRNoCoverage</b>
Definition	Indication if there is a no GSMR coverage
	Y/N/NYA
Applicable	Y/N/NYA Explanation on applicability:
Applicable	
	Explanation on applicability:
	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
Can be repeated	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list:
Can be repeated	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:
Can be repeated	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N
Can be repeated	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS
Can be repeated  Data presentation	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS specifications as packet 68. Another possible use is the declaration of a temporary
Can be repeated  Data presentation	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS specifications as packet 68. Another possible use is the declaration of a temporary situation where, although the area is in principle covered by GSM-R, there is a long-te
Can be repeated  Data presentation	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case of Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS
Can be repeated  Data presentation	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case of Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS specifications as packet 68. Another possible use is the declaration of a temporary situation where, although the area is in principle covered by GSM-R, there is a long-teroutage or a project for replacement of the radio (i.e. a section that will not be covered with GSM-R for half a year or longer
Can be repeated  Data presentation  explanations	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case of Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS specifications as packet 68. Another possible use is the declaration of a temporary situation where, although the area is in principle covered by GSM-R, there is a long-temporary outage or a project for replacement of the radio (i.e. a section that will not be covered.
Can be repeated  Data presentation  explanations	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case of Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS specifications as packet 68. Another possible use is the declaration of a temporary situation where, although the area is in principle covered by GSM-R, there is a long-teroutage or a project for replacement of the radio (i.e. a section that will not be covered with GSM-R for half a year or longer
Can be repeated  Data presentation  explanations	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case of Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS specifications as packet 68. Another possible use is the declaration of a temporary situation where, although the area is in principle covered by GSM-R, there is a long-teroutage or a project for replacement of the radio (i.e. a section that will not be covered with GSM-R for half a year or longer
Can be repeated  Data presentation  explanations  Reference	Explanation on applicability:  Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.  N  Explanation on repeatability:  Single selection from the predefined list: Y / N  Indication if there is no GSMR coverage. This parameter is mainly to capture the case of Radio Hole functionality (lack of GSM-R coverage), that is foreseen in the ETCS specifications as packet 68. Another possible use is the declaration of a temporary situation where, although the area is in principle covered by GSM-R, there is a long-tere outage or a project for replacement of the radio (i.e. a section that will not be covered with GSM-R for half a year or longer  Sections of EIRENE not covered by references in TSI

Definition	Radio requirements used for demonstrating technical compatibility voice
	Y/N/NYA
Applicable	Explanation on applicability:
Аррпсаые	
	Not applicable ('N') when "none" is selected in parameter 1.1.1.3.3.1.
	Υ
C b	Explanation on repeatability:
Can be repeated	The vehicles are considered compatible with the infrastructure regarding this
	parameter, if matches any of the values declared. In case the value "Not Defined" or
	"RSC-EU-0" is used, is not expected to have repetitions with additional values.
Data presentation	Single selection from the predefined list:
Data presentation	06.c. 50.000.0
	- Not Defined
	- RSC-EU-0
	- RSC-ES-01-V
	- RSC-ES-02-V
	- RSC-ES-03-V - RSC-ES-04-V
	- RSC-ES-05-V
	- RSC-SE-01-V
	- RSC-FR-01-V
	- RSC-AT-01-V
	- RSC-BE-01-V
	- RSC-RO-01-V
	- RSC-DE-01-V
	- RSC-LU-01-V
	As defined in the revised CCS TSI in sections 6.1.2.4 and 6.1.2.5, the Agency will "set up and manage in a technical document the set of checks to demonstrate the technical compatibility of an on-board subsystem with the trackside subsystem". The predefined list of values will follow the changes in that technical document. Each set of checks will have a unique id, like "ESC-1" (final format not defined).
	The different values to be defined inside each network need to be submitted by each with the support of their suppliers to the Agency. (CCS TSI 6.1.2.4 and 6.1.2.5 – Regulation (EU) 2019/776).
explanations	The Agency will then compile them in a Technical Document, give them an identifier,
explanations	and after, these identifiers will be available for selection in RINF and ERA TV. Therefor these values will not be available until the IM has communicated the checks to the Agency.
	There is information about the ESC/RSC and the submission to the Agency in the ERA webpage (Link). More information will be included in the CCS TSI application guide.
	The deadline set in the CCS TSI for IMs to complete this process is 16 January 2020.
Reference	Agency Technical Document ESC/RSC
	(https://www.era.europa.eu/sites/default/files/activities/docs/era_td-011rec1028_esrsc_technical_document_en.pdf). CCS TSI Regulation (EU) 2019/776 section 4.2.17 and 6.1.2.5

Number	1.1.1.3.3.10
Title	Radio system compatibility data
XML Name	SOL Track Parameter CRG_RadioCompData
Definition	Radio requirements used for demonstrating technical compatibility data voice
	Y/N/NYA
Applicable	Explanation on applicability:
	Not applicable ('N') when:
	- "none" is selected in parameter 1.1.1.3.3.1 OR
	- parameter 1.1.1.3.3.1 is not "None" AND parameter 1.1.1.3.2.1 is not "2" or "3".
	Υ
	Explanation of repeatability:
Can be repeated	
	The vehicles are considered compatible with the infrastructure regarding this parameter, if matches any of the values declared. In case the value "Not Defined" or "RSC-EU-0" is used, is not expected to have repetitions with additional values.
Data presentation	Single selection from the predefined list:  - Not Defined  - RSC-EU-0  - RSC-ES-01-D  - RSC-ES-02-D  - RSC-ES-03-D  - RSC-ES-03-D  - RSC-ES-04-D  - RSC-ES-05-D  - RSC-SE-01-D  - RSC-FR-01-D  - RSC-FR-01-D  - RSC-FR-01-D  - RSC-ES-03.ALBALI-D  - RSC-ES-03.ANTGRA-D  - RSC-ES-03.CORMAL-D  - RSC-ES-03.SAGTOL-D  - RSC-ES-03.SAGTOL-D  - RSC-ES-03.MADVLC-D  - RSC-ES-03.MONMUR-D  - RSC-ES-03.MONMUR-D  - RSC-ES-03.MONMUR-D  - RSC-ES-03.OLMPED-D  - RSC-ES-03.OLMPED-D  - RSC-ES-03.VALLEOBUR-D  - RSC-ES-03.VALLEOBUR-D  - RSC-ES-03.VALLEOBUR-D  - RSC-ES-03.VALLEOBUR-D  - RSC-ES-03.HORAT-D  - RSC-ES-04.ARAVIL-D  - RSC-ES-04.ARAVIL-D  - RSC-ES-05.PEDORE-D
explanations	As defined in the revised CCS TSI in sections 6.1.2.4 and 6.1.2.5, the Agency will "set up and manage in a technical document the set of checks to demonstrate the technical compatibility of an on-board subsystem with the trackside subsystem". The predefined

	1.1.1.3.5.3
Can be repeated	CPO N
Title	Train protection legacy systems
Number	1.1.1.3.5
Reference	CCS TSI: Annex A Index 77
General Explanations	Verification of compliance with TSI includes application of notified national rules (when they exist).
Data presentation	Single choice from the predefined list:  Y N
Can be repeated	N
Applicable	Y/NYA
Definition	Indication if there is any train detection system installed and fully compliant with the CCS TSI requirements.
XML Name	SOL Track Parameter CCD_TSITrainDetection
Title	Existence of train detection system fully compliant with the TSI
Number	1.1.1.3.4.1
Can be repeated	N
XML Name	CCD
Title	Train detection systems fully compliant with the TSI
Number	1.1.1.3.4
Reference	Agency Technical Document ESC/RSC (https://www.era.europa.eu/sites/default/files/activities/docs/era_td-011rec1028_escionsc_technical_document_en.pdf). CCS TSI Regulation (EU) 2019/776 section 4.2.17 and 6.1.2.5
	There is information about the ESC/RSC and the submission to the Agency in the ERA webpage (Link). More information will be included in the CCS TSI application guide.  The deadline set in the CCS TSI for IMs to complete this process is 16 January 2020.
	The Agency will then compile them in a Technical Document, give them an identifier, and after, these identifiers will be available for selection in RINF and ERA TV. Therefore these values will not be available until the IM has communicated the checks to the Agency.
	The different values to be defined inside each network need to be submitted by each II with the support of their suppliers to the Agency. (CCS TSI 6.1.2.4 and 6.1.2.5 – Regulation (EU) 2019/776).
	list of values will follow the changes in that technical document. Each set of checks will have a unique id, like "ESC-1" (final format not defined).

	Indication of which class B system is installed
Applicable	Y/NYA
Can be repeated	Υ
Data presentation	Single selection from the predefined list:  None ALSN ASFA ATB First generation ATB new generation ATC v2 ATC vR ATP ATP-VR/RHK BACC CAWS Chiltern-ATP Crocodile DAAT EBICAB 700 BU EBICAB 700 PT EBICAB 900 ES EuroSIGNUM EuroZUB EVM GNT (Geschwindigkeitsüberwachung für NeiTech-Züge) GW ATP INDUSI I60 KCVB KCVP KVB LS LZB LZB LZ2, LZB LZ2 CE I and LZB LZ2 CE II) LZB ES Mechanical Trainstops MEMOR II+ NEXTEO PKP radio system with Radiostop function PZB 90 RETB RSDD/SCMT SHP SSC TBL 1 TBL 2 TBL 1 TBL 2 TBL 1 TBL 2 TBL 1 TPWS/AWS TVM 300 TVM 430 TUM 430 TUM 430 TUM 430 TUM 122 ES
References	version 4.0 of the TD/2011-11 List of CCS Class B systems
Number	1.1.1.3.6
Title	Other radio systems
XML Name	CRS

Can be repeated	N
Number	1.1.1.3.6.1
Title	Other radio systems installed (Radio Legacy Systems)
XML Name	SOL Track Parameter CRS_Installed
Definition	Indication if other radio systems in normal operation are installed line-side.
	Indication of radio legacy systems installed.
Applicable	Y/NYA
Can be repeated	Υ
	Single selection from the predefined list:
	None
	UIC Radio Chapter 1-4
	UIC Radio Chapter 1-4+6
	UIC Radio Chapter 1- 4 + 6 (Irish system)
	UIC Radio Chapter 1-4 (TTT radio system installed at Cascais line)
	TTT radio system CP_N
	PKP radio system
	TRS — The Czech Railways radio system
	LDZ radio system
	CH — Greek Railways radio system (VHF)
	UIC Radio Chapter Bulgaria
	The Estonian radio system
Data presentation	The Lithuanian radio system
	450 Mhz UIC (kanál C)
	Analogue Radio Germany - UIC 751
	BOSCH
	GSM-P
	Multikom
	OMEGA
	RDZ - in compliance with UIC 751-3
	RETB (voice)
	Radio Network of CFR
	SRO
	Shunting Radio Communication System
	ZUGFUNK 95

	ZUGFUNK 2000
	SRV
	Telecar 10/460 (AEG Mobile)
Reference	National Rules and version 4.0 of the TD/2011-11 List of CCS Class B systems,
Number	1.1.1.3.7
Title	Train detection systems not fully compliant with the TSI
XML Name	СТД
Can be repeated	N
Number	1.1.1.3.7.1.1
Title	Type of train detection system
XML Name	SOL Track Parameter CTD_DetectionSystem
Definition	Indication of types of train detection systems installed
A 15 14	Y/N/NYA "N" for 1.1.1.3.7.1.1 will trigger "N" for parameters 1.1.1.3.7.1.2 to 1.1.1.3.7.23
Applicable	is 151 111157/112 with this parameters 1111157/112 to 1111157/125
	NYA for 1.1.1.3.7.1.1 will trigger NYA for parameters 1.1.1.3.7.1.2 to 1.1.1.3.7.23 Y
	Explanation on repeatability:
Can be repeated	If this parameter is repeated, parameters 1.1.1.3.7.2 to 1.1.1.3.7.23 shall be created also for the corresponding type. These parameters are to be considered children of the current. But not all parameters are applicable to all types of train detection systems; it depends on the applicability condition.
	Single selection from the predefined list:
Data presentation	track circuit wheel detector loop
	Explanation on data presentation:
	Following parameters 1.1.1.3.7.2 -1.1.1.3.7.23 depend on which type of train detection is installed on the track.
	The option of 'wheel detector' has to be also selected for: wheel sensor for axle counter, pedal or treadle.
Reference	National Rules
Number	1.1.1.3.7.1.2
Title	Type of track circuits or axle counter to which specific checks are needed
XML Name	SOL Track Parameter CTD_TCCheck
Definition	Indication of types of train detection systems to which specific checks are needed
Applicable	Y/N/NYA

	γ
Can be repeated	Explanation on repeatability:
can be repeated	
	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type.
	Single selection from the predefined list:
	Direct current Track circuit
	50Hz Track circuit
	Zp30K / Zp30H
	83.3 Hz track circuit
Data presentation	125 Hz track circuit
	ZP 43 E (manufactured prior to 2015)
	83.3 Hz and 125 Hz track circuits
	83.3 Hz track circuit and ZP 43 E (manufactured prior to 2015)
	125 Hz track circuit and ZP 43 E (manufactured prior to 2015)
	83.3 Hz and 125 Hz track circuits and ZP 43 E (manufactured prior to 2015)
	Explanation on data presentation:
Reference	National Rules
Number	1.1.1.3.7.1.3
Title	Document with the procedure(s) related to the type of track circuits declared in 1.1.1.3.7.1.2
XML Name	SOL Track Parameter CTD_TCCheckDocRef
Definition	Electronic document available in two EU languages from the IM stored by the Agency
	with precise procedures for the specific check to be performed for train detection systems identified in 1.1.1.3.7.1.2.
Applicable	Y/N/NYA
	the applicability remains the latitude of the IM Y
Can be repeated	Explanation on repeatability:
can be repeated	
	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type.
D-1	Single selection from the predefined list:
Data presentation	
	CharacterString
Explanations	The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the
	parameter using the characterstring format.
Reference	National Rules
Number	1.1.1.3.7.1.4
Title	Section with train detection limitation
XML Name	SOL Track Parameter CTD_TCLimitation
Definition	Specific for route compatibility check on French network. Sections with:
	-1 Tonnage circulated per track is inferior to 15000 tons/day/track
	-2 Directional Interlocking

	-3 45-second delay for directional interlocking
	-4 Installation with track circuit announcement
	-5 Absence of a shunting assistance pedal in the normal direction of circulation for
	non-reversible double track lines -6 Absence of a shunting assistance pedal regardless of the direction of traffic for
	single track lines and tracks for two way working
	-7 Absence of a pedal announcement mechanism
Analiaahla	-8 45-second delay for specific announcement reset devices
Applicable	Y/N/NYA
	Y Substitution and the little of the little
Can be repeated	Explanation on repeatability:
	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type.
	Single selection from the predefined list:
Data presentation	Single selection from the predefined list:
	[Y / N ]+N The number N is between 1 and 8 as from the definition above
	Explanation on data presentation:
Reference	National Rules
Number	1.1.1.3.7.2.1
Title	TSI compliance of maximum permitted distance between two consecutive axles
XML Name	SOL Track Parameter CTD_TSIMaxDistConsecutiveAxles
Definition	Indication whether required distance is compliant with the TSI.
Explanation on Definition	Related to the minimum length of train detection section. This requirement is related to the minimum length of a signalling section, so that if a vehicle does not bridge it, making the train detection system reports it as "unoccupied".
Applicable	Y/N/NYA
	Y but only one per train detection type (CTD_DetectionSystem)
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type.
Data presentation	Single selection from the predefined list: TSI compliant Not TSI compliant
Reference	CCS TSI: 3.1.2.1 of Annex A, Index 77
Number	1.1.1.3.7.2.2
Title	Maximum permitted distance between two consecutive axles in case of TSI non-compliance
XML Name	SOL Track Parameter CTD_MaxDistConsecutiveAxles
Definition	Indication of maximum permitted distance between two consecutive axles in case of TSI non-compliance, given in millimetres
Applicable	Y/N/NYA
• •	Applicable ('Y') when in 1.1.1.3.7.2.1 selected option is 'Not TSI compliant'
Can be repeated	Y but only one per train detection type (CTD_DetectionSystem)

	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type.
	Example:
	<soltrackparameter id="CTD_DetectionSystem" isapplicable="Y" set="track circuit" value="10"></soltrackparameter>
	<soltrackparameter id="CTD_TSIMaxDistConsecutiveAxles" isapplicable="Y" set="track circuit" value="20"></soltrackparameter>
	<soltrackparameter id="CTD_MaxDistConsecutiveAxles" isapplicable="Y" set="track circuit" value="123"></soltrackparameter>
Data presentation	[NNNN]
Reference	CCS TSI: 3.1.2.1 of Annex A, Index 77

Number	1.1.1.3.7.3
Title	Minimum permitted distance between two consecutive axles
XML Name	SOL Track Parameter CTD_MinDistConsecutiveAxles
Definition	Indication of distance given in millimetres.
Applicable	Y/N/NYA
	Explanation on applicability:
	Applicable ('Y') when in parameter 1.1.1.3.7.1.1 the selected option is 'wheel detector'
	Υ
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	[NNNN]
General Explanation	The distance is that corresponding to the maximum speed of the SoL. The CCS TSI gives formula in accordance with the gauge that apply if the maximum line speed is lower or equal to 350 km/h. It is an open point for line speed higher than 350 km/h.
	Axle counter systems have to be able to distinguish the detection of an axle by 2 subsequent counters with sufficient resolution; otherwise, the result will be a counterror.
Reference	CCS TSI: Annex A, index 77 section 3.1.2.2 and 3.1.2.3 (open point)
Reference	CCS TSI: Index 77 updated (V2.0 of ERA/ERTMS/033281)
•	
Number	1.1.1.3.7.4
Title	Minimum permitted distance between first and last axle
XML Name	SOL Track Parameter CTD_MinDistFirstLastAxles
Definition	Indication of distance given in millimetres.
Explanation on Definition	Related to track circuits or respective specific cases. The electrical joints between adjacent track circuits may have an area where the detection of an axle of a vehicle is not ensured.
	Y/N/NYA
Applicable	Explanation on applicability:
	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track circuits'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	[NNNN]
Reference	CCS TSI: 3.1.2.4 of Annex A, Index 77

Number	1.1.1.3.7.5
Title	Maximum distance between end of train and first axle
XML Name	SOL Track Parameter CTD_MaxDistEndTrainFirstAxle
Definition	Indication of maximum distance between end of the train and first axle, given in millimetres, applicable for both sides (front and rear) of a vehicle or train.
Applicable	Y/N/NYA  Explanation on applicability: Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 th selected option is 'track circuits' or 'wheel detector'.
	<ul> <li>A train detection system shall be able to detect:</li> <li>the first axle before the nose of the train reaches a danger point ahead</li> <li>the last axle until the tail of the train has passed the danger point.</li> </ul>
Can be repeated	Y but only one per train detection type (CTD_DetectionSystem)  An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	[NNNN]
General Explanations	Length given in millimetres. Related to track circuits and axle counters.  A train detection system shall be able to detect the first axle before the nose of the treaches a danger point ahead as well as the last axle until the tail of the train has left the danger point.  'Nose' is applicable for both sides (front and rear) of a vehicle or train.
Reference	CCS TSI: 3.1.2.5 (HS) and 3.1.2.6 (other lines) of Annex A, Index 77
Number	1.1.1.3.7.6
Title	Minimum permitted width of the rim
XML Name	SOL Track Parameter CTD_MinRimWidth
Definition	Indication of width given in millimetres.
Explanation on Definition	Related to axle counters, pedals and treadles. The detection field of the axle counter influenced by the wheel which passes. The rim width has to be big enough to influence the field sufficiently to ensure appropriate detection.
Applicable	Y/N/NYA
<u></u>	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel detector'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Predefined CharacterString: [NNN]

Number	1.1.1.3.7.7
Title	Minimum permitted wheel diameter
XML Name	SOL Track Parameter CTD_MinWheelDiameter
Definition	Indication of wheel diameter given in millimetres.
Explanation on Definition	Compatibility with axle counters. The area of the influence (on the flange surface of a wheel) of the detection field of the axle counter is related to the wheel diameter.
	Y/N/NYA
Applicable	Explanation on applicability:
	Applicable ('Y') only when for parameter $1.1.1.3.7.1.1$ the selected option is 'wheel detector'.
	Υ
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	[NNN]
References	LOC&PAS TSI: 4.2.3.5.2.2, Table 5
Number	1.1.1.3.7.8
Title	Minimum permitted thickness of the flange
XML Name	SOL Track Parameter CTD_MinFlangeThickness
Definition	Indication of flange thickness given in millimetres.
	Y/N/NYA
Applicable	Explanation on applicability:
	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel detector'.
	Υ
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train
	detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	[NN.N]
	Compatibility with axle counters, pedals and treadles. The detection field of the axle counter is influenced by the wheel which passes. The flange thickness has to be big
General	enough to influence the field sufficiently to ensure appropriate detection. Thickness
Explanations	given in millimetres with decimals. The TSI makes distinction between several values depending on the wheel diameter; The less value acceptable by the infrastructure (axle
	counters, pedals and treadles) has to be provided.
Reference	LOC&PAS TSI: 4.2.3.5.2.2, Table 5
li	

Number	1.1.1.3.7.9
Title	Minimum permitted height of the flange
XML Name	SOL Track Parameter CTD_MinFlangeHeight
Definition	Indication of height of flange given in millimetres.
Applicable	Y/N/NYA Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel
	detector'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the traidetection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles
	[NN.N]
Data presentation	Explanation on data presentation:
	Height given in millimetres with decimals.
General Explanations	Compatibility with axle counters, pedals and treadles. The detection field of the axle counter is influenced by the wheel which passes. The flange height has to be big enoug to influence the field sufficiently to ensure appropriate detection. The TSI makes distinction between several values depending on the wheel diameter; The least acceptable value by the infrastructure has to be provided.
Reference	LOC&PAS TSI: 4.2.3.5.2.2, Table 5
Number	1.1.1.3.7.10
Number Title	1.1.1.3.7.10  Maximum permitted height of the flange
Title	Maximum permitted height of the flange
Title  XML Name	Maximum permitted height of the flange  SOL Track Parameter CTD_MaxFlangeHeight
Title  XML Name  Definition	Maximum permitted height of the flange  SOL Track Parameter CTD_MaxFlangeHeight  Indication of height of flange given in millimetres.  Y/N/NYA  Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel
Title  XML Name  Definition  Applicable	Maximum permitted height of the flange  SOL Track Parameter CTD_MaxFlangeHeight  Indication of height of flange given in millimetres.  Y/N/NYA  Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel detector'.  Y  An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 /
Title  XML Name  Definition  Applicable  Can be repeated	Maximum permitted height of the flange  SOL Track Parameter CTD_MaxFlangeHeight  Indication of height of flange given in millimetres.  Y/N/NYA  Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel detector'.  Y  An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).

Number	<u>1.1.1.3.7.11.1</u>
Title	Minimum permitted axle load per category of Vehicle
XML Name	SOL Track Parameter CTD_MinAxleLoadByVehicleCat
Definition	Indication of load given in tons depending of the category of vehicle.
	Y/N/NYA
<u>Applicable</u>	Explanation on applicability:
	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track circuit' or 'wheel detector'.
	<u>Y</u>
<u>Can be repeated</u>	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD TSIMaxDistConsecutiveAxles).
	Single selection from the predefined list representing categories of vehicle which is amended by value of minimum permitted axle load [tons] for a specific category:
<u>Data presentation</u>	<u>Vehicle axle load</u> <u>Harmonized parameter for 1435mm, 1524mm, 1600mm and 1668mm track gauge:</u> <u>The axle load is</u>
	[NN.N] at least 3,5 t for vehicles with more than 4 axles and wheel tread brakes [NN.N] at least 4 t for vehicles with 4 axles and wheel tread brakes [NN.N] at least 5 t for other vehicles (that is, vehicles that do not fall into categories 1 or 2)
<u>General</u> Explanations	Compatibility with track circuits, pedals and treadles. A minimum axle load will activate pedals and treadles. Also, minimum axle load will have a beneficiary effect on the resistance between wheel and track, which is important for the operation of track circuits. Load given in tons (unit of mass).
Reference	In case that there is no restriction for "wheel detector' the Value =0.0 can be given"  CCS TSI: Annex A Index 77 3.1.7.1
Number	
	1.1.1.3.7.12
Title	TSI compliance of rules for metal-free space around wheels
XML Name	SOL Track Parameter CTD_TSIMetalFree
Definition	Indication whether rules are compliant with the TSI.
Applicable	Y/N/NYA  Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel
	detector'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.12/CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:

	TSI compliant not TSI compliant
General Explanations	Compatibility with wheel sensors for axle counters. The principle of axle counters is based on the distortion of an electromagnetic field. The distortion should occur only by the passage of the wheel and not of the surrounding parts of rolling stock.
Comments	Verification of compliance with TSI includes application of notified national rules (when they exist) in case of part covered by open point.
Reference	CCS TSI: 3.1.3.5, Annex A, Index 77

Number	1.1.1.3.7.13
Title	TSI compliance of rules for vehicle metal construction
XML Name	SOL Track Parameter CTD_TSIMetalConstruction
Definition	Indication whether rules are compliant with the TSI.
Applicable	Y/N/NYA Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'loop'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:  TSI compliant not TSI compliant
General Explanations	Compatibility with induction loops. The metal-mass influences loop detection systems. Verification of compliance with TSI includes application of notified national rules (when they exist) concerning the part covered by open point.
Reference	CCS TSI: 3.1.7.2 of Annex A, Index 77
Number	1.1.1.3.7.14
Title	TSI compliance of Ferromagnetic characteristics of wheel material required
XML Name	SOL Track Parameter CTD_TSIFerroWheelMat
Definition	Indication whether rules are compliant with the TSI.
Applicable	Y/N/NYA  Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'wheel detector'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:  TSI compliant not TSI compliant
General Explanations	Compatibility with wheel sensors for axle counters. This characteristic is necessary to generate the distortion of the electromagnetic field of axle counters, to ensure appropriate detection.
Reference	CCS TSI: 3.1.3.6, Annex A, Index 77

Number	1.1.1.3.7.15.1
Title	TSI compliance of maximum permitted impedance between opposite wheels of a wheelset
XML Name	SOL Track Parameter CTD_TSIMaxImpedanceWheelset
Definition	Indication whether rules are compliant with the TSI.
	Y/N/NYA
Applicable	Explanation on applicability: Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track circuit'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:  TSI compliant  Not TSI compliant
General Explanations	Compatibility with track circuits. A track circuit is only able to detect rolling stock if the impedance between rails does not exceed a certain value.
Reference	CCS TSI 3.1.9 Annex A, Index 77
Number	1.1.1.3.7.15.2
Title	Maximum permitted impedance between opposite wheels of a wheelset when not TSI compliant
XML Name	SOL Track Parameter CTD_MaximpedanceWheelset
Definition	The value of maximum permitted impedance given in ohm in case of TSI non-compliance.
Applicable	Y/N/NYA
	Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.15.1 the selected option is 'Not TSI compliant'
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	[N.NNN]
	A track circuit is only able to detect rolling stock if the impedance between rails does not exceed a certain value, given by the impedance of the opposite wheels of the wheelsets and the contact resistance at the wheel-rail surface.
General Explanations	The interface requirement given here is only related to the electrical resistance between the running surfaces of the opposite wheels of a wheelset.
	Remark: operational rules may apply to ensure that a sufficiently low value of the contact resistance is maintained during service: see 3.1.4 (Use of sanding equipment), 3.1.5 (On board flange lubrication) and 3.1.6 (Use of composite brake blocks).
Reference	CCS TSI 3.1.9 Annex A, Index 77
Number	1.1.1.3.7.17
Title	Maximum sanding output Maximum amount of sand

XML Name	SOL Track Parameter CTD_MaxSandOutput
Definition	Maximum <u>amount of sand within</u> <del>value of sanding output for</del> 30 s given in grams accepted on the track.
Applicable	Y/N/NYA
пррисавіс	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track
	circuit' and when selection for parameter 1.1.1.3.7.18 is "yes".
	Υ
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the
	train detection type (see example given for 1.1.1.3.7.2.2 /
	CTD_TSIMaxDistConsecutiveAxles).
Data presentation	<del>[NNNN]</del>
	Single selection from the predefined list:
	TSI compliant when speed lower than140km/h
	Not TSI compliant when speed lower than 140km/h
	TSI compliant when speed higher than 140km/h Not TSI compliant when speed higher than 140km/h
Reference	CCS TSI: 3.1.4.1 of Annex A, Index 77
Hererenee	
Number	1.1.1.3.7.18
Title	Sanding override by driver required
XML Name	SOL Track Parameter CTD_SandDriverOverride
Definition	Indication whether possibility to activate/deactivate sanding devices by driver,
	according to instructions from the Infrastructure Manager, is required or not.
Explanation on	Compatibility with track circuits at places where the use of sanding is not permitted.
Definition	
A ali-a la la	V/N/NVA
Applicable	Y/N/NYA  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track
	circuit'.
	Y
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the
	train detection type (see example given for 1.1.1.3.7.2.2 /
	CTD_TSIMaxDistConsecutiveAxles).
	Single selection from the predefined list:
Data presentation	γ
	N
Reference	OPE TSI: Appendix B (C1)
<u></u>	
	1.1.1.3.7.19
	TSI Compliance of rules on sand characteristics
	SOL Track Parameter CTD_TSISandCharacteristics
	Indication whether rules are compliant with the TSI.
Explanation on Definition	Compatibility with track circuits where sanding is permitted.
	Y/N/NYA
	¥ / IN / IN ¥ 🕰

	Explanation on applicability:
Applicable	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track circuit' and when the track belongs to a 1520 mm gauge.
	Υ
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:  TSI compliant  Not TSI compliant
Reference	CCS TSI: 3.1.4.2 of Annex A, Index 77; open point for 1435 mm gauge
i.	
Number	1.1.1.3.7.20
Title	Existence of rules on on-board flange lubrication
XML Name	SOL Track Parameter CTD_FlangeLubeRules
Definition	Indication whether rules for activation or deactivation of flange lubrication exist.
Explanation on Definition	Concerns activation or deactivation of flange lubrication according to instructions from IM, for compatibility with the track circuits.
Applicable	Y/N/NYA
	Explanation on applicability:
	Applicable ('Y') only when for parameter $1.1.1.3.7.1.1$ the selected option is 'track circuit'.
	Υ
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
	Single selection from the predefined list:
Data presentation	Υ
	N
Poforonces	LOC&PAS TSI: 7.5.3.1
References	CCS TSI: 3.1.5 of Annex A, Index 77
<u>i</u>	
Number	1.1.1.3.7.21
Title	TSI compliance of rules on the use of composite brake blocks
XML Name	SOL Track Parameter CTD_TSICompositeBrakeBlocks
Definition	Indication whether rules are compliant with the TSI.
	Y/N/NYA
Applicable	Explanation on applicability:
	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track circuit'.
Can be repeated	Υ

	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 /
	CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:
	TSI compliant Not TSI compliant
General Explanation	Composite brake blocks can create an isolating film between wheels and rail compromising detection by track circuits.
References	LOC&PAS TSI Appendix J-2, index 1, clause 3.1.6
	CCS TSI: 3.1.6 of Annex A, Index 77

Number	1.1.1.3.7.22
Title	TSI compliance of rules on shunt assisting devices
XML Name	SOL Track Parameter CTD_TSIShuntDevices
Definition	Indication whether rules are compliant with the TSI.
Applicable	Y/N/NYA Explanation on applicability:
	Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track circuit'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:  TSI compliant  Not TSI compliant
General Explanations	In some cases, shunt assisting devices may be necessary to operate track circuits.  According to the TSI, they should not be required.
Reference	CCS TSI: 3.1.8 of Annex A, Index 77
Number	1.1.1.3.7.23
Title	TSI compliance of rules on combination of RST characteristics influencing shunting impedance
XML Name	SOL Track Parameter CTD_TSIRSTShuntImpedance
Definition	Indication whether rules are compliant with the TSI.
Applicable	Y/N/NYA  Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1.1 the selected option is 'track circuit'.
Can be repeated	An XML attribute called "Set" will be used to link the value of this parameter to the train detection type (see example given for 1.1.1.3.7.2.2 / CTD_TSIMaxDistConsecutiveAxles).
Data presentation	Single selection from the predefined list:  TSI compliant  Not TSI compliant
General Explanations	The composition of a train may impact on the compatibility with track circuits' detection.
Reference	CCS TSI: 3.1.10 of Annex A, Index 77
	1.

Number Title	1.1.1.3.8
	Transitions between systems
XML Name	CTS
Can be repeated	N
Number	1.1.1.3.8.1
Title	Existence of switch over between different protection, control and warning systems while running
XML Name	SOL Track Parameter CTS_SwitchProtectControlWarn
Definition	Indication whether a switch over between different systems whilst running exist
Applicable	Y/N/NYA Explanation on applicability:  Applicable ('Y') when at least two different protection, control and warning systems exist.
Can be repeated	N
	Single selection from the predefined list:
Data presentation	Y N
General Explanations	Switch over between different systems whilst running. Installation depends on local conditions.
Reference	CCS TSI and national rules
Number	1.1.1.3.8.2
Title	Existence of switch over between different radio systems
XML Name	SOL Track Parameter CTS_SwitchRadioSystem
Definition	Indication whether a switch over between different radio systems and no communication system whilst running exist
Applicable	Y/N/NYA Explanation on applicability: Applicable ('Y') when at least two different radio systems exist.
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
General Explanations	Switch over between different radio systems and no communication system whilst running. Installation depends on local conditions. The "Indication if other radio systems in normal operation are installed line-side" is given in parameter 1.1.1.3.6.1 / SOL Track Parameter CRS_Installed".
Reference	CCS TSI and national rules
	.l.
Number	1.1.1.3.9
Title	Parameters related to electromagnetic interferences
XML Name	CEI
Can be repeated	N
•	17

1.1.1.3.9.1
Existence and TSI compliance of rules for magnetic fields emitted by a vehicle
SOL Track Parameter <b>CEI_TSIMagneticFields</b>
Indication whether rules exist and are compliant with the TSI.
Y/N/NYA Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1 the selected option is 'wheel detector'.
N
Single selection from the predefined list:  none TSI compliant Not TSI compliant
Compatibility with wheel detectors. The electromagnetic fields generated by rolling stock can interfere with the operation of axle counters and wheel detectors.  'none' means that the rules do not exist.  'TSI compliant' means the rules exist and are compliant with the frequency management specified in the TSI  'Not TSI compliant' means the rules exist and are not compliant with the frequency management specified in the TSI
Verification of compliance with TSI includes application of notified national rules (when they exist) in case of part covered by open point.
CCS TSI: 3.2 of Annex A, Index 77
1.1.1.3.9.2
Existence and TSI compliance of limits in harmonics in the traction current of vehicles
SOL Track Parameter <b>CEI_TSITractionHarmonics</b>
Indication whether rules exist and are compliant with the TSI.
Y/N/NYA Explanation on applicability:  Applicable ('Y') only when for parameter 1.1.1.3.7.1 the selected option is 'wheel detector' or 'track circuit'.
N
Single selection from the predefined list:  none TSI compliant Not TSI compliant
Compatibility with track circuits and wheel detectors of axle counters. The harmonics in the traction current in the rails can interfere with the operation of track circuits. The DC current in the rails may saturate the detectors of the axle counters, preventing their operation.

Comments	Verification of compliance with TSI includes application of notified national rules (when they exist) in case of part covered by open point.
Reference	LOC&PAS TSI : Appendix J-2, index 1, clause 3.2.2
Number	1.1.1.3.10
Title	Line-side system for degraded situation
XML Name	CLD
Can be repeated	N
	i.
Number	1.1.1.3.10.1
Title	ETCS level for degraded situation
XML Name	SOL Track Parameter CLD_ETCSSituation
Definition	ERTMS / ETCS application level for degraded situation related to the track side
	equipment Y/N/NYA
Applicable	Explanation on applicability:
Аррпсавіе	
	'N'=not applicable shall be selected when ETCS is not installed (selection of parameter 1.1.1.3.2.1 is 'no').
	1.1.1.3.2.115 110 ).
Can be repeated	Υ
	Single selection from the predefined list:
	none
Data presentation	<u>0</u>
Data presentation	<u> </u>
	2
	3
	<u>NTC</u>
	System for degraded situation. In case of failure of the ETCS Level for normal operation,
	train movement can be supervised in another ETCS Level. Example: Level 1 as a
Camanal	degraded mode for Level 2.
General	
Explanations	If the actual level (see 1.1.1.3.2.1) was "no", none degradation is possible, so only 'none'
	level is possible for degraded case.
Comments	It assumed that the degraded level has to be lower than the actual operating level.
	OPE TSI: 4.2.1.2.1 and 4.4
References	
	National rules

Number	1.1.1.3.10.2
Title	Other train protection, control and warning systems for degraded situation
XML Name	SOL Track Parameter CLD_OtherProtectControlWarn
Definition	Indication of existence of other systems than ETCS for degraded situation.
Applicable	Y/N/NYA
	Y in case when for parameter 1.1.1.3.10.1 was selected 'none'.
Can be repeated	N
	Single selection from predefined list:
	None
	ALSN
	ASFA
	ATB First generation
	ATB new generation
	ATC v2
	ATC vR
	ATP
	ATP-VR/RHK
	BACC
	CAWS
	Chiltern-ATP
	Crocodile
	DAAT
Data presentation	EBICAB 700 BU
	EBICAB 700 PT
	EBICAB 900 ES
	EuroSIGNUM
	EuroZUB
	EVM
	GNT (Geschwindigkeitsüberwachung für NeiTech-Züge)
	GW ATP
	INDUSI 160
	KCVB
	KCVP
	KVB
	KVBP LS
	LZB (LZB L72, LZB L72 CE I and LZB L72 CE II)
	LZB ES
	Mechanical Trainstops
	iviccianical Hallistops

MEMOR II+
NEXTEO
PKP radio system with Radiostop function PZB 90
RETB
RSDD/SCMT
SHP
SSC
TBL 1
TBL 2
TBL1+
TPWS/AWS
TVM 300
TVM 430
ZUB 123
Explanation on data presentation:
Selected value shall answer the question whether any other system than ETCS exists on the respective track.
version 4.0 of the TD/2011-11 List of CCS Class B systems,
1.1.1.3.11
Brake related parameters
СВР
N
1.1.1.3.11.1
Maximum braking distance requested
SOL Track Parameter CBP_MaxBrakeDist
The maximum value of the braking distance [in metres] of a train shall be given for the maximum line speed.
Y/NYA
N
[NNNNN]
This distance corresponds to the smallest physical distance between signals of the section of line at V max, taking into account the effect of gradient, minus the value of the safety margin used by the IM  The braking capability of a train allows it to respect this braking distance.  Note that the OPE TSI provides for an exchange of detailed information between the infrastructure manager and the railway undertaking to ensure safe operation.

References	OPE TSI: 4.2.2.6
References	CCS TSI: 4.2.2
Number	1.1.1.3.11.2
Title	Availability by the IM of additional information
XML Name	SOL Track Parameter CBP_AddInfoAvailable
Definition	Availability by the IM of additional information as defined in 4.2.2.6.2 (2) Regulation XXX - OPE TSI
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list: Y/N
General explanations	[See TSI OPE 4.2.2.6.2 (2)]
Reference	[See TSI OPE 4.2.2.6.2 (2)]
Validation	
Number	1.1.1.3.11.3
Title	Documents available by the IM relating to braking performance
XML Name	SOL Track Parameter CBP_BrakePerfDocRef
Definition	Electronic document available in two EU languages from the IM stored by the Agency providing additional information as defined in point (2) of point 4.2.2.6.2 of the Annex to Regulation XXX - OPE TSI
Applicable	Y/N/NYA
Applicable	Y in case of Y for 1.1.1.3.11.2
Can be repeated	Y
Data presentation	CharacterString
	The infrastructure manager should have submitted such document to the Agency in an electronic format and in two EU languages.
General explanations	The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.
Reference	
Validation	
Number	1.1.1.4

Title	Rules and restrictions
XML Name	RUL
Can be repeated	N
Number	1.1.1.4.1
Title	Existence of rules and restrictions of a strictly local nature
XML Name	SOL Track Parameter RUL_LocalRulesOrRestrictions
Definition	Existence of rules and restrictions of a strictly local nature
Applicable	Y/N/NYA
Can be repeated	N
	Single selection from the predefined list: Y/N
Data presentation	
	"In case of Y, the RU have to contact the IM to be informed of these conditions"
	There is a general obligation for Member States to notify existing national rules but: "Member States may decide not to notify rules and restrictions of a strictly local nature.
	In such cases, Member States shall mention those rules and restrictions in the registers
	of infrastructure."
General	In this eventuality, this parameter allows the IM accordingly to its Member State
explanations	decision to declare the existence of such rules and to provide them with the parameter 1.1.1.4.2. Documents regarding the rules or restrictions of a strictly local nature
	available by the IM.
_ ^	IOD: Notification of national rules Art 14. 11:
Reference	
Validation	
Number	1.1.1.4.2
Title	Documents regarding the rules or restrictions of a strictly local nature available by the IM
XML Name	SOL Track Parameter RUL_LocalRulesOrRestrictionsDocRef
Definition	Electronic document available from the IM stored by the Agency providing additional
Definition	information
Applicable	Y/N/NYA
Can be repeated	Y Clark Circ
Data presentation	CharacterString
	The document itself has to be upload by the NRE via the "reference document
General	management" functionality. The reference of the document is provided for the
explanations	parameter using the characterstring format.
	IOD: Notification of national rules Art 14. 11. Member States may decide not to notify
Reference	rules and restrictions of a strictly local nature. In such cases, Member States shall mention those rules and restrictions in the registers of infrastructure referred to in
	Article 49
Validation	
Number	1.2
Title	
	OPERATIONAL POINT

	Υ
Can be repeated	Explanation on repeatability:
	It means that many Operational Points within MS may be described – depending on the number of OPs in MS - and for each of them the whole set of data has to be filled. OPs do not have to be numbered as identification is done by OP IDs.

Number	1.2.0.0.0
	Generic information
Can be repeated	N
Number	1.2.0.0.0.1
Title	Name of Operational Point
XML Name	OPName
Definition	Name normally related to the town or village or to traffic control purpose
Explanation on Definition	Name of OP may not always exist in common use. In such case IM should propose a name for OP.
Can be repeated	N
Applicable	Υ
Data presentation	CharacterString
Number	
	1.2.0.0.0.2
Title	Unique OP ID
XML Name	UniqueOPID
Definition	Code composed of country code and alphanumeric OP code.
Explanations on definition	The first part 'AA' is the country code in two-letter system of ISO.  The second part is alphanumeric OP code within the MS. For example, an OP code could be current abbreviation of name used in route books.  In case of borders point, the code is to be selected in the corresponding list in annex 5.1.
Applicable	Υ
Can be repeated	N
	Predefined CharacterString: [AA+AAAAAAAAA]
	Explanation on data presentation: The first two characters represent the country code in two-letter system of ISO.
	The second part 'AAAAAAAAAA' is maximum 10 Characters String corresponding to OP code within the MS.
Data presentation	'LUAB4' or 'LUAB46TH-G' or 'LUAB4/ERT7' are accepted by the validation process.
	In case of "borders point", the code is to be selected in the corresponding list in annex 5.1 (this first part "AA" is EU. The second part is 'AAAAAAAAAA'). Any OP ID that is not referenced in the annex 5.1 will not be accepted by the validation process.
	In case of "domestic borders point", the code will be selected in the corresponding list in annex 5.2 that will be developed later.  Any OP ID that is not referenced in the annex 5.1 will not be accepted by the validation process
Validation	The provided OP ID must be unique within each Member State. The validation has to be made nationally by NRE. The exceptions are "Border point" and "domestic border point" that must be referenced in annex 5.1.
Reference	ISO 3166-1 alpha 2

Number	1.2.0.0.0.3
Title	OP TAF TAP primary code
XML Name	OPTafTapCode
Definition	Primary code developed for TAF/TAP.
Can be repeated	Υ
	Explanation on repeatability: Unique OP ID may cover area which is described by several TAF TAP Codes, so as in such case all those Primary Codes have to specified, the parameter 1.2.0.0.0.3 has to be repeated for every Primary Code.
Applicable	Y/N/NYA Y in case when OP TAF TAP primary code exists, otherwise N
	Predefined CharacterString:
Data presentation	[AANNNNN]
Reference	Primary code developed for TAF TSI by SEDP as given in CEN CWA15541:May2006. It is composed of two letters for the Country Code and five numbers for the Location Code.
Number	1.2.0.0.0.4
Title	Type of Operational Point
XMLName	ОРТуре
Definition	Type of facility in relation to the dominating operational functions.
Explanations on definition	Each existing case has to be approximated to the one of the above defined types by including size, importance and dominating functions. It is most important to recognize the most important role of specific OP in the network. That is why only one type for one OP is permitted.
Applicable	Υ
Can be repeated	N
	Single selection from the predefined list:
Data presentation	station small station passenger terminal freight terminal depot or workshop train technical services passenger stop junction border point shunting yard technical change switch private siding domestic border point
Explanations to format	<ol> <li>For purpose of RINF, there were defined the following types of OPs:</li> <li>Station – big or huge station with several functions, important for international traffic, basic for national railway system</li> <li>Small station – multifunctional OP not so big and not so important like "station"</li> </ol>

- Passenger terminal OP with dominating function of service for passenger traffic
- 4. Freight terminal OP with dominating functions related to loading and unloading of freight trains
- 5. Depot or workshop OP which is a group of tracks used by depot or workshop for rolling stock maintenance
- 6. Train technical services OP which is a group of tracks for servicing trains (parking, cleaning, washing, current revisions, etc.)
- Passenger stop small OP consisting of at least one platform, normally serving mostly for local passenger services
- 8. Junction OP consisting of at least one turnout, normally used mostly for changing direction of trains, with reduced or not existing other functions
- 9. Border point located exactly in the point where a border between MSs meets a railway line.
- 10. Shunting yard group of tracks used for shunting trains, mostly related to freight trains
- 11. Technical change to describe a change on CCS or a type of contact line or gauge changeover facility fixed installation allowing a train to travel across a break of gauge where two railway networks with different track gauges meet.
- 12: Switch
- 13: Private siding OP allowing to provide more information on the "private siding" and on the way it is linked to the main network. Its use is left to the discretion of each Member State.
- 14: Domestic border point: located exactly in the point where networks of different IMs are connected in a Member State

Number	1.2.0.0.4.1
Title	Type of track gauge changeover facility
XMLName	<b>OPTypeGaugeChangeover</b>
Definition	Type of track gauge changeover facility
Explanations on definition	
Applicable	Y/N/NYA
Can be repeated	N
Data presentation	Characterstring
Explanations to format	

Number	<u>1.2.0.0.0.5</u>
Title	Geographical location of Operational Point
XML Name	OPGeographicLocation
Definition	Geographical coordinates in decimal degrees normally given for the centre of the OP.
Applicable	Υ
Can be repeated	N

	[Latitude (NN.NNNN <u>NNN</u> ) + Longitude (±NN.NNNN <u>NNN</u> )
	Explanation on data presentation:
Data presentation	Geographical coordinates according to the standard World Geodetic System (WGS) defining the location of the OP. This will normally be in the centre point of the OP. Values for coordinates are in degrees with decimals precision of 0.0001.
Comments	Latitude and Longitude are expressed in the WGS-grid for GPS-coordinates.

Number	1.2.0.0.0.6
Title	Railway location of Operational Point
XML Name	OPRailwayLocation
Definition	Kilometre related to line identification defining the location of the OP. This will normally be in the centre of the OP.
Explanation on Definition	The railway location identifies the location of an OP in the system of reference of a given line.
	The parameter can be repeated to allow to describe the location of the OP when it belongs to several lines.
Applicable	Υ
Can be repeated	Υ
	Predefined CharacterString:
	[±NNNN.NNN] + [CharacterString]
	Explanation on data presentation:
Data presentation	The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001). The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all SoL.
	In [CharacterString] the name of the line shall be used the same type like in SoL description in parameter 1.1.0.0.0.2 National line identification.
Number	121
Title	1.2.1  RUNNING TRACK
XML Name	OPTrack
	Y
Can be repeated	Explanation on repeatability:
	There might be more than one track within the Operational Point, so then the whole set of data for track has to be repeated as many times as many tracks exists.
Applicable	Parameters of this group (from $1.2.1.0.0.1$ to $1.2.1.0.4.1$ ) are only applicable if running tracks exist in the OP.
Number	1.2.1.0.0
Title	Generic information
Can be repeated	N Furl control of the
	Explanation on repeatability:

	For each track may exist only one set of 'Generic information'
	1.0. Cash data may exist only one set of Generic information
Number	1.2.1.0.0.1
Title	IM's Code
XML Name	OPTrackIMCode
Definition	Infrastructure Manager means any body or undertaking that is responsible in particular for establishing and maintaining railway infrastructure or a part thereof.
Applicable	Υ
Can be repeated	N
<u>Data presentation</u>	[AAAA]
	The Code is a unique identifier for the Infrastructure Manager and it shall be verified on national level.
<u>General</u> Explanations	- If the IM is subject to TAF/TAP TSIs, it corresponds to the code used in TAF/TAP TSIs.
	- In other cases, it corresponds to the "organisation code" assigned by the Agency for the specific needs of the RINF
	Each Section of Line may concern only one IM.
Reference	Article 3 (2) of Directive 2012/34/EU
Validation	No verification by RINF application. Check of the link between MS and IM' Name must be done nationally.
Number	1.2.1.0.0.2
Title	Identification of track
XML Name	OPTrackIdentification
Definition	Unique track identification or unique number within OP
Applicable	Υ
	N
Can be repeated	Explanation on repeatability:
	Each track shall have unique identification or number within the OP. This number cannot be used for naming any other track in the same OP.
Data presentation	CharacterString
Validation	The check of fact that ID is unique within OP has to be done on national level (preferably by IM).
Number Title	1.2.1.0.1
	Declarations of verification for track
XML Name	IDE
Applicable	Υ
Can be repeated	N
General Explanations	This group of data concerns infrastructure subsystem on the specific track.

There are two types of declarations included: EC declaration issued according to mandatory procedure defined by Interoperability Directive and EI declaration which may be issued according to the voluntary procedure defined by EC Recommendation [22].

Number	1.2.1.0.1.1
Title	EC declaration of verification for track (INF)
XML Name	OP Track Parameter IDE_ECVerification
Definition	Unique number for EC declarations following format requirements specified in the 'Document about practical arrangements for transmitting interoperability documents'
Explanation on Definition	(INF) in the title means that here we include only declarations concerning infrastructure subsystem on the specific track.
Applicable	Y/N/NYA Explanation on applicability:  "Y" shall be selected in case when EC declaration was issued
Can be repeated	Y Explanation on repeatability:  The parameter may be repeated only when several EC declarations were issued after verification of the track and several numbers has to be registered.
Data presentation	Predefined CharacterString:
General Explanations	[CC/RRRRRRRRRRRR/YYYY/NNNNNN]  With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the INF TSI now includes all the networks (TEN and off-TEN) with the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 mm
Reference concerning format	'Document about practical arrangements for transmitting interoperability documents' [23]
Validation	The validation is described before this Table, in section 2.3.
Number	1.2.1.0.1.2
Title	El declaration of demonstration for track (INF)
XML Name	OP Track Parameter IDE_EIDemonstration
Definition	Unique number for EI declarations following the same format requirements as specified in the 'Document about practical arrangements for transmitting interoperability documents'
Applicable	Y/N/NYA Explanation on applicability:  "Y" shall be selected in case when the demonstration was executed and EI declaration was issued.
Can be repeated	Y Explanation on repeatability:  It may happen that several EI declarations were issued – then parameter has to be
	repeated as many times as many declarations were issued.

	Dura define ad Cheura atau Ctuius au
Data presentation	Predefined CharacterString:  [CC/RRRRRRRRRRRRRR/YYYY/NNNNNN])
General Explanations	It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.  The procedure for demonstration that existing network fits to requirements of the TSIs is executed on voluntary bases, so when EI declaration do not exist then the parameter is optional. If EI declaration was not issued, then field shall be left empty.
References	[22] Recommendation 2014/881/EU  [23] 'Document about practical arrangements for transmitting interoperability documents'
Number	1,2,1,0,2
Title	
XML Name	Performance parameters
Can be repeated	IPP
Explanation	N
	For each track only the one set of 'Performance parameters' may be presented
Number	1.2.1.0.2.1
Title	TEN classification of track
XML Name	
Definition	OP Track Parameter IPP_TENClass  Indication of the part of the trans-European network the track belongs to
Applicable	Y/NYA
Can be repeated	Y
	Single selection from the predefined list:
Data presentation	Part of the TEN-T Comprehensive Network
	Part of the TEN-T Core Freight Network
	Part of the TEN-T Core Passenger Network
Deferen	Off-TEN
Reference	[24] Regulation (EU) No 1315/2013
Number	1.2.1.0.2.2
Title	Category of Line
XML Name	OP Track Parameter IPP_LineCat
Definition	Classification of a line according to the INF TSI
Explanations on definition	INF TSI classifies lines based on the type of traffic (traffic code).

	TSI categories of line shall be used for the classification of existing lines to define a target system so that the relevant performance parameters will be met.
	Y
	'
Can be repeated	Explanation on repeatability:
	When more than one value of the parameter has to be published, then parameter has to be repeated as many times as many values of the parameter will be published.
Applicable	Y/N/NYA
	Explanation on applicability:
	Technical scope of the INF TSI now includes all the networks (TEN and off-TEN) for nominal track gauges 1435, 1520, 1524, 1600 and 1668 mm
	Applicable if track is included in technical scope of the TSI.
	Not applicable when tables 2 or 3 of 4.2.1(7) of INF TSI are not usable on the UK network for Great Britain according to the specific case 7.7.17.1(2).
	Single selection of the predefined list
	Passengers:
	P1
	P2
	P3
	P4
	P5
	P6
	P1520
	P1600
Data presentation	Freight:
	F1
	F2
	F3
	F4
	F1520
	F1600
	Explanation on data presentation:
	The TSI category of line is a combination of traffic codes. For lines where only one typ of traffic is carried (for example a freight only line), a single code can be used to describe the requirements; where mixed traffic runs the category will be described by one or more codes for passenger and freight in case of two types of traffic. Then the parameter is repeated if relevant. The combined traffic codes describe the envelope within which the desired mix of traffic can be accommodated.
Example	If a line is operated by passenger trains with speed of 250 km/h, local commuter train with speed of 120 km/h and heavy freight trains in the night, then the best combination of traffic codes seems to be P2, P5 and F1.

	Then, the TSI category of line for this case would simply be P2-P5-F1.
References	INF TSI 4.2.1
Number	1.2.1.0.2.3
Title	Part of a Railway Freight Corridor
XML Name	OP Track Parameter IPP_FreightCorridor
Definition	Indication whether the line is designated to a Railway Freight Corridor
Applicable	Y/N/NYA
Applicable	Y if the line is part of a RFC
Can be repeated	Υ
	Single selection from the predefined list:
	Rhine-Alpine RFC (RFC 1)
	North Sea-Mediterranean RFC (RFC 2)
	Scandinavian – Mediterranean RFC (RFC 3)
	Atlantic RFC (RFC 4)
	Baltic-Adriatic RFC (RFC 5)
Data presentation	Mediterranean RFC (RFC 6)
	Orient-EastMed RFC (RFC 7)
	North Sea-Baltic RFC (RFC 8)
	Rhine-Danube RFC (RFC 9)
	Alpine-Western Balkan RFC (RFC 10)
	Amber RFC (RFC 11)
	Explanation on data presentation:
	If a line belongs to several corridors, repeat the parameter
Reference	Regulation (EU) No 913/2010
Reference	Regulation (EU) No 913/2010
Reference Number	Regulation (EU) No 913/2010  1.2.1.0.3
Number	1.2.1.0.3
Number Title	1.2.1.0.3 Line layout
Number Title XML Name	1.2.1.0.3  Line layout  ILL
Number Title XML Name Can be repeated Explanations	1.2.1.0.3  Line layout  ILL  N
Number Title XML Name Can be repeated Explanations	1.2.1.0.3  Line layout  ILL  N
Number Title XML Name Can be repeated Explanations	1.2.1.0.3  Line layout  ILL  N  For specific track only one line layout may be described
Number Title XML Name Can be repeated Explanations	1.2.1.0.3  Line layout  ILL  N  For specific track only one line layout may be described  1.2.1.0.3.4  Gauging  SOL OP Track Parameter ILL_Gauging
Number Title XML Name Can be repeated Explanations Number Title	1.2.1.0.3  Line layout  ILL  N  For specific track only one line layout may be described  1.2.1.0.3.4  Gauging

Applicable Y/NYA Single selection from the pr	
Single selection from the pr	
GA GB GC G1 DE3 G2 GB1 GB2 BE1 BE2 BE3 FR-3.3 PTb PTb+ PTc FIN1 SEa SEc DE1 DE2 Z-GCD UK1 UK1[D] W6 FS S GHE16 GEA16 GEB16 GEC16 IRL1 IRL2 IRL3 GI1 GI2 GI3 GEE10 GED10 AFM 423 NL1 NL2 FR-3.4.1 FR-3.4.2 AFG AFM427 M30 M80 Tram-train 2.40	edefined list:

	GČD
	GEI1
	GEI2 GEI3
	GEC14
	other
	EN15273-3 (2013): Annex C and Annex D
	INF TSI: 4.2.3.1
References	
	It is proposed to update the reference to EN 15273-3 (2013): Annex C taking into account
	corrigendum A1
Number	1.2.1.0.3.5
Title	Railway location of particular points requiring specific checks
XML Name	ILL_GaugeCheckLoc
Explanation on	
Definition	Location of particular points requiring specific checks due to deviations from gauging referred to in 1.2.1.0.3.4.
Explanations of the	
definition	The railway location identifies the location of the structure in the system of reference of
	the line to which the track belongs
Applicable	Y/N/NYA
Can be repeated	i .
'	N
	N  Predefined CharacterString:
'	
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]
'	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:
'	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is
Data presentation	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all SoL.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all SoL.  This parameter could be also applicable when the gauge is infringed. This means that
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol.
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all SoL.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.
	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol.
Data presentation	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol.
Data presentation	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol.
Data presentation	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol.
Data presentation	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol.
Data presentation	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol.
Data presentation  References  Number	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol. description in parameter 1.1.0.0.0.2 National line identification.
Data presentation  References	Predefined CharacterString:  [±NNNN.NNN] + [CharacterString]  Explanation on data presentation:  The location (generally the distance from the origin of the line to the centre) on a line is given in kilometres with decimals (precision of 0.001).  The aim of the "CharacterString" at the end of the format has to precise the name or number of the line. The same 'CharacterString' has to be used as 'National line identification' for a specific line in description both all OPs and all Sol.  This parameter could be also applicable when the gauge is infringed. This means that the obstacles are inside the infrastructure gauge. This case could happen for example for platforms where the platform does not fulfill the gauge.  In [CharacterString] the name of the line shall be used the same type like in Sol description in parameter 1.1.0.0.0.2 National line identification.

Definition	Electronic document available from the IM stored by the Agency with the transversal section of the particular points requiring specific checks due to deviations from gaugin referred to in 1.2.1.0.3.4. Where relevant, guidance for the check with the particular point may be attached to the document with the transversal section.
Applicable	Y/N/NYA
Can be repeated	Υ
Data presentation	CharacterString
Explanation	The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the parameter using the characterstring format.
References	EN 50125-1 (1999): 4.7 and 4.8 LOC&PAS TSI: 4.2.6.1.2
Number	1.2.1.0.4
Title	Track parameters
XML Name	ITP
Can be repeated	N
Number	1.2.1.0.4.1
Title	Nominal track gauge
XML Name	OP Track Parameter ITP_NomGauge
Definition	A single value expressed in millimetres that identifies the track gauge
Definition  Can be	A single value expressed in millimetres that identifies the track gauge Y
Can be	
Can be	Y Explanation on repeatability:
Can be repeated	Y Explanation on repeatability:  When in the track has been installed a track gauge changeover without having OP typ 'Technical change', the value of nominal track gauge has to be given twice, for each track gauge separately.
Can be repeated	Y Explanation on repeatability:  When in the track has been installed a track gauge changeover without having OP typ 'Technical change', the value of nominal track gauge has to be given twice, for each
	Y Explanation on repeatability:  When in the track has been installed a track gauge changeover without having OP typ 'Technical change', the value of nominal track gauge has to be given twice, for each track gauge separately.  Y/NYA
Can be repeated Applicable	Explanation on repeatability:  When in the track has been installed a track gauge changeover without having OP type 'Technical change', the value of nominal track gauge has to be given twice, for each track gauge separately.  Y/NYA  Single selection from the predefined list:  750 1000 1435 1520 1524 1600 1668

Number	1.2.1.0.5
Title	Tunnel
XML Name	OPTrackTunnel
Applicable	Parameters of this group (from 1.2.1.0.5.1 to 1.2.1.0.5.8) are only applicable if tunnels exist in the OP.
Can be repeated	Υ
Number	1.2.1.0.5.1
Title	IM's Code
XML Name	OPTrackTunnelIMCode
Definition	Infrastructure Manager means any body or undertaking that is responsible in particular for establishing and maintaining railway infrastructure or a part thereof.
Applicable	Y
Can be repeated	N
Data presentation	[AAAA]
General Explanations	The Code is a unique identifier for the Infrastructure Manager and it shall be verified or national level.  - If the IM is subject to TAF/TAP TSIs, it corresponds to the code used in TAF/TAP TSIs.  - In other cases, it corresponds to the "organisation code" assigned by the Agency for the specific needs of the RINF
Reference	Each Section of Line may concern only one IM.
Keterence	Article 3 (2) of Directive 2012/34/EU
Validation	No verification by RINF application. Check of the link between MS and IM' Name must be done nationally.

Number	1.2.1.0.5.2
Title	Tunnel identification
XML Name	OPTrackTunnelIdentification
Definition	Unique tunnel identification or unique number within Member State
Can be repeated	N
Applicable	Υ
присавіс	In case when tunnel does not have own identification within the Member State, the IM should deliver it himself.
Data presentation	CharacterString
Comments	Here should be given the name, number, code or any other expression which is normally used for the identification of the tunnel
Number	1.2.1.0.5.3
Title	EC declaration of verification for tunnel (SRT)
XML Name	OP Track Tunnel Parameter ITU_ECVerification

Definition	Unique number for EC declarations following format requirements specified in the 'Document about practical arrangements for transmitting interoperability documents'
	Υ
	Explanation on repeatability:
Can be repeated	(SRT) in title means that here we include only declarations concerning requirements of SRT TSI for infrastructure system on the specific track.
	Parameter shall be repeated when different EC declarations were issued for different elements of infrastructure subsystem on the specific track in the tunnel.
Applicable	Y/N/NYA
Аррпсавіе	Explanation on applicability:
	"Y" shall be selected in case when EC declaration was issued
Data presentation	Predefined CharacterString:
	[CC/RRRRRRRRRRRRR/YYYY/NNNNNN]
General Explanations	With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the INF, ENE and CCS TSIs now includes all the networks (TEN and off-TEN) with the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 mm.
Reference concerning format	'Document about practical arrangements for transmitting interoperability documents' [23]
Validation	The validation is described before this Table, in section 2.3.
Number	1.2.1.0.5.4
Title	El declaration of demonstration for tunnel (SRT)
XML Name	OP Track Tunnel Parameter ITU_EIDemonstration
Definition	Unique number for EI declarations following the same format requirements as specified in the 'Document about practical arrangements for transmitting interoperability documents'
	Υ
	Explanation on repeatability:
Can be repeated	(SRT) in title means that here we include only declarations concerning requirements of SRT TSI for infrastructure system on the specific track.
	Parameter shall be repeated when different EI declarations were issued for different elements of infrastructure subsystem on the specific track in the tunnel.
	Y/N/NYA
Applicable	Explanation on applicability:
	"Y" shall be selected in case when the demonstration was executed and EI declaration was issued.
D-4	Predefined CharacterString:
Data presentation	[CC/RRRRRRRRRRRR/YYYY/NNNNNN])
	It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.
General	
Explanations	The procedure for demonstration that existing network fits to requirements of the TSIs is executed on voluntary bases, so when EI declaration do not exist then the parameter is optional. If EI declaration was not issued, then field shall be left empty.

Reference	[22] Recommendation 2014/881/EU
	[23] 'Document about practical arrangements for transmitting interoperability documents'
Validation	The validation is described before this Table, in section 2.3.
Number	1.2.1.0.5.5
Title	Length of tunnel
XML Name	OP Track Tunnel Parameter ITU_Length
Definition	Length of a tunnel in metres from entrance portal to exit portal.
Explanations on definition	Length of a tunnel in metres from portal to portal at the level of the top of rail.
Can be repeated	N
Applicable	Y/N/NYA
	Y only for a tunnel with length of 100 metres or more.
Data presentation	Predefined CharacterString:
zata presentation	[NNNN]
Validation	The validation whether the parameter is mandatory cannot be performed by the RINF application, the validation has to be done by the NRE.

Number	1.2.1.0.5.6
Title	Existence of emergency plan
XML Name	OP Track Tunnel Parameter ITU_EmergencyPlan
Definition	Indication whether emergency plan exists.
Can be repeated	N
Applicable	Y/N/NYA  Explanation on applicability: Y for tunnels longer than 1 km, in accordance with section 4.4.2 of SRT TSI, the emergency plan is mandatory only for tunnel length of more than 1km.  'N'=not applicable can be selected for short tunnels of less than 1 km, as for them the fire category according SRT TSI does not exist.
Data presentation	Single selection from the predefined list:  Y N
General Explanations	Emergency plan has to be a document developed for each tunnel under the direction of the IM, in co-operation, where appropriate, with RUs, Rescue services and relevant authorities. It shall be consistent with the self-rescue, evacuation and rescue facilities provided.
References	SRT TSI: 4.4.3  SRT TSI: 4.4.2

Number	1.2.1.0.5.7
Title	Fire category of rolling stock required
XML Name	OP Track Tunnel Parameter ITU_FireCatReq
Definition	Categorisation how a passenger train with a fire on board will continue to operate for a defined time period.
Can be repeated	N
Applicable	Y/N/NYA
	Explanation on applicability:  'N'=not applicable shall be selected for short tunnels of less than 1 km, as for them the fire category according SRT TSI does not exist.
	Single selection from the predefined list:
	A B none
Data presentation	Explanation on data presentation:
	Wherever category B is not needed, generally the category A has to be understood as the default value.
	'none' shall be selected when none of A or B fire category is applied for a specific tunnel.
	SRT: section 4.2.3.3.4
References	SRT TSI: 4.2.5.5
	LOC&PAS 4.2.10.4.4
Number	1.2.1.0.5.8
Title	National fire category of rolling stock required
XML Name	OP Track Tunnel Parameter ITU_NatFireCatReq
Definition	Categorisation on how a passenger train with a fire on board will continue to operate for a defined time period - according to national rules if they exist.
Can be repeated	N
Applicable	Y/N/NYA
	Explanation on applicability:
	'N'=not applicable shall be selected when respective national rules do not exist
	Y only for tunnels when for the parameter 1.2.1.0.5.7 the option 'none' was selected.
Data presentation	CharacterString Explanation on data presentation:
Sata presentation	Data shall include both the category and brief name of the document introducing the categorisation
Number	1.2.1.0.5.9
Title	Diesel or other thermal traction allowed

XML Name	OP Track Tunnel Parameter ITU_DieselThermAllowed
Definition	Indication whether it is allowed to use diesel or other thermal traction in the tunnel
Can be repeated	N
Applicable	Y/N/
	Explanation on applicability:
	'N'= not applicable shall be selected when respective national rules do not exist
	'Y'= only for tunnels when for the parameter 1.2.1.0.5.7 the option 'none' was selected
	Single selection from the predefined list:
Data presentation	
	Y/N Evaluation on data precentation:
	Explanation on data presentation:
Number	1.2.1.0.6
Title	Platform
XML Name	OPTrackPlatform
Applicable	Parameters of this group (from 1.2.1.0.6.1 to 1.2.1.0.6.7) are only applicable if platfor
Can be repeated	exist on the OP
Can be repeated	Y
Number	1.2.1.0.6.1
Title	IM's Code
XML Name	OPTrackPlatformIMCode
Definition	Infrastructure Manager means any body or undertaking that is responsible in particular
Can be repeated	for establishing and maintaining railway infrastructure or a part thereof.
-	N
Applicable	Y
Data presentation	[AAAA]
	The Code is a unique identifier for the Infrastructure Manager and it shall be verified of
	national level.
	- If the IM is subject to TAF/TAP TSIs, it corresponds to the code used in
General	TAF/TAP TSIs.
Explanations	- In other cases, it corresponds to the "organisation code" assigned by the
	Agency for the specific needs of the RINF
-	Each Section of Line may concern only one IM.
Reference	Article 3 (2) of Directive 2012/34/EU
Validation	No verification by RINF application. Check of the link between MS and IM' Name must be done nationally.

Number	1.2.1.0.6.2
Title	Identification of platform
XML Name	OPTrackPlatformIdentification
Definition	Unique platform identification or unique platform number within OP
Can be repeated	N
Applicable	Y
Data presentation	CharacterString
General Explanations	Platform for the purpose of RINF is understood as a platform edge. Platform identification shall concern only the part of the structure neighbouring to the track (interfaced with trains).  In case when normal platform numbering concern the whole structure between two
	tracks, the "RINF track" may be labelled with the identification made of platform number and the track ID to which the specific edge belongs. Other solutions for the identification of the platform as the edge adopted by IM or MS are also permitted.
Number	
Number	1.2.1.0.6.3
Title	1.2.1.0.6.3  TEN Classification of platform
Title XML Name	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass
Title  XML Name  Definition	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass  Indicates the part of the trans-European network the platform belongs to.
Title  XML Name  Definition  Can be repeated	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass
Title  XML Name  Definition	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass  Indicates the part of the trans-European network the platform belongs to.  Y  Y/ NYA
Title  XML Name  Definition  Can be repeated	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass  Indicates the part of the trans-European network the platform belongs to.  Y  Y/ NYA  Single selection from the predefined list:
Title  XML Name  Definition  Can be repeated  Applicable	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass  Indicates the part of the trans-European network the platform belongs to.  Y  Y/ NYA  Single selection from the predefined list:  Part of the TEN-T Comprehensive Network
Title  XML Name  Definition  Can be repeated	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass  Indicates the part of the trans-European network the platform belongs to.  Y  Y/ NYA  Single selection from the predefined list:  Part of the TEN-T Comprehensive Network  Part of the TEN-T Core Freight Network
Title  XML Name  Definition  Can be repeated  Applicable	1.2.1.0.6.3  TEN Classification of platform  OP Track Platform Parameter IPL_TENClass  Indicates the part of the trans-European network the platform belongs to.  Y  Y/ NYA  Single selection from the predefined list:  Part of the TEN-T Comprehensive Network

Number	1.2.1.0.6.4
Title	Usable length of platform
XML Name	OP Track Platform Parameter IPL_Length
Definition	The maximum continuous length (expressed in metres) of that part of platform in froi of which a train is intended to remain stationary in normal operating conditions for passengers to board and alight from the train, making appropriate allowance for stopping tolerances.
Explanation on Definition	The maximum continuous length (expressed in metres) of that part of platform in from of which a train is intended to remain stationary in normal operating conditions for passengers to board and alight from the train, making appropriate allowance for stopping tolerances
Applicable	Y/NYA
Can be repeated	N
Data presentation	[NNNN]
Comments about problems in the definitions	Platform dimensions are always related to one neighbouring track at a time.  So, if two tracks are along a platform, this platform should be divided into two RINF platforms to have precise description of each.
References	INF TSI 4.2.10,  OPE TSI: 2.3.6 and 2.3.7 of Appendix D
Number	
	1.2.1.0.6.5
Title	Height of platform
XML Name	OP Track Platform Parameter IPL_Height
Definition	Distance between the upper surface of platform and running surface of the neighbouring track. It is the nominal value expressed in millimetres.
Applicable	Y/ NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:
	250 280 550 760 300-380 200 580 680 685 730 840 900 915 920 960 1100 other

	Explanation on data presentation:
	Values included in the list are taken from PRM and INF TSIs including Specific Cases. They are the values which are mandatory for the design of the platform at the respective part of the network. They are not real values measured at real platforms.
Comment	Platform dimensions are always related to one neighbouring track at a time.
	So, if two tracks are along a platform, this platform should be divided into two or more 'RINF platforms' to have precise description of each.
References	INF TSI 4.2.10.4
	PRM TSI 4.1.8 and 4.1.2.18
	OPE TSI: 2.3.8 of Appendix D
Number	1.2.1.0.6.6
Title	Existence of platform assistance for starting train
XML Name	OP Track Platform Parameter IPL_AssistanceStartingTrain
Definition	Indication of existence of equipment or staff supporting the train crew in starting the train.
Explanation on Definition	Fixed equipment (for example mirrors or CCTV cameras) or station staff indicating to train crew or driver when to close doors and whether this has been done successfully.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
Number	
	1.2.1.0.6.7
Title	Range of use of the platform boarding aid
XML Name	OP Track Platform Parameter IPL_AreaBoardingAid
Definition	Information of the train access level for which the boarding aid can be used.
Applicable	Y/NYA
Can be repeated	N
Data presentation	[NNNN]
	Explanation on data presentation: Vertical difference that is overcome by the platform boarding aid in millimetres  The value "0" means that the platform is not equipped with a platform boarding aid
General Explanations	This parameter is mandatory only if such a device exists. There is no check on the provision of the parameter in the verification process of the RINF application.

Number	1.2.2	
Title	SIDING	
XML Name	OPSiding	
	Υ	
Can be repeated	Explanation on repeatability:	
	The set of data for siding may be repeated as many times as many sidings within the same OP exist.	
Applicable	Parameters of this group are only applicable (from 1.2.2.0.0.1 to 1.2.2.2.0.4.6) if sidings exist in the OP	
Number	1.2.2.0.0	
Title	Generic information	
Can be repeated	N Evaluation on reportability	
can be repeated	Explanation on repeatability:	
	For each siding it may exist only one set of 'Generic information'	
Number	1.2.2.0.0.1	
Title	IM's Code	
XML Name	OPSidingIMCode	
Definition	Infrastructure Manager means any body or undertaking that is responsible in particular for establishing and maintaining railway infrastructure or a part thereof.	
Applicable	Υ	
Can be repeated	N	
Data presentation	[NNNN]	
General Explanations	Code shall correspond to the name of Infrastructure Manager and it shall be verified on national level. It should correspond to the code used in TAF/TAP TSIs to identify IMs. Each Section of Line may concern only one IM.	
Reference	Article 3 (2) of Directive 2012/34/EU	
Validation	No verification by RINF application. Check of the link between MS and IM' Name must be done nationally.	
Number	1.2.2.0.0.2	
Title	Identification of siding	
XML Name	OPSidingIdentification	
Definition	Unique siding identification or unique siding number within OP	
	N	
	Explanation on repeatability:	
Can be repeated	Each track shall have unique identification or number within the OP. This number cannot be used for naming any other track in the same OP.	
Applicable	Υ	
Data presentation	CharacterString	
Validation	The check of fact that ID is unique within OP has to be done on national level (preferably by IM).	
Number	1.2.2.0.0.3	

Title	TEN classification of siding
XML Name	OP Siding Parameter IPP_TENClass
Definition	Indication of the part of the trans-European network the siding belongs to.
Can be repeated	Y
Applicable	Y/NYA
Data presentation	Single selection from the predefined list:  Part of the TEN-T Comprehensive Network  Part of the TEN-T Core Freight Network  Part of the TEN-T Core Passenger Network  Off-TEN
Reference	[24] Regulation (EU) No 1315/2013
umber	[24] Regulation (EU) No 1315/2013  1.2.2.0.1
Title	
XML Name	Declaration of verification for siding
	IDE
Can be repeated	N
Explanation	As RINF includes only INF parameters for OP, information on EC declaration concerns also only infrastructure subsystem verification
Number	
	1.2.2.0.1.1
Title	EC declaration of verification for siding (INF)
XML Name	OP Siding Parameter IDE_ECVerification
Definition	Unique number for EC declarations following format requirements specified in the 'Document about practical arrangements for transmitting interoperability documents'  Y
Can be repeated	Explanation on repeatability:  (INF) in the title means that here we include only declarations concerning infrastructure subsystem on the specific siding. The parameter may be repeated only when several EC declarations were issued after verification of the siding and several numbers has to be registered.
	Y/N/NYA
Applicable	Explanation on applicability:
	"Y" shall be selected in case when EC declaration was issued
Data presentation	Predefined CharacterString:  [CC/RRRRRRRRRRRRR/YYYY/NNNNNN]
General Explanations	With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the INF TSI now includes all the networks (TEN and off-TEN) with the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 mm
Reference concerning format	'Document about practical arrangements for transmitting interoperability documents' [23]
Validation	The validation is described before this Table, in section 2.3.
Number	1.2.2.0.1.2
Л	

Title	El declaration of demonstration for siding (INF)
XML Name	OP Siding Parameter IDE_EIDemonstration
Definition	Unique number for EI declarations following the same format requirements as specific in the 'Document about practical arrangements for transmitting interoperability documents'
Can be repeated	Υ
Applicable	Y/N/NYA
	Explanation on applicability:  "Y" shall be selected in case when the demonstration was executed and EI declaration was issued.
	Predefined CharacterString:
Data presentation	[CC/RRRRRRRRRRRRRR/YYYY/NNNNNN])
General Explanations	It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.
	The procedure for demonstration that existing network fits to requirements of the TS is executed on voluntary bases, so when EI declaration do not exist then the parameter is optional. If EI declaration was not issued, then field shall be left empty.
	[22] Recommendation 2014/881/EU
Reference	[23] 'Document about practical arrangements for transmitting interoperability documents'
Validation	The validation is described before this Table, in section 2.3.
	i
Number	1.2.2.0.2
Title	Performance parameter
XML Name	IPP
Can be repeated	N
Explanation	For each siding only the one set of 'Performance parameters' may be presented
Number	1.2.2.0.2.1
Title	Usable length of siding
XML Name	OP Siding Parameter IPP_Length
	Or Slaing Farameter in Lacingtin
Definition	Total length of the siding/stabling track expressed in metres where trains can be park safely.  Y/NYA
Definition  Applicable  Can be repeated	safely.
Definition Applicable	safely. Y/NYA
Definition Applicable	safely.  Y/NYA  N  [NNNN]  Explanation on data presentation:  The value shall include operational rules for braking, position of vehicles not influenci
Definition  Applicable  Can be repeated	Y/NYA  N [NNNN]

Number	1.2.2.0.3
Title	Line layout
XML Name	ILL
Can be repeated	N
	i.
Number	1.2.2.0.3.1
Title	Gradient for stabling tracks
XML Name	OP Siding Parameter ILL_Gradient
Definition	Maximum value of the gradient expressed in millimetres per metre.
Applicable	Y/N/NYA
Can be repeated	N
Data presentation	[NN.N]
General Explanations	It has to be shown the real value of the gradient when it exceeds the TSI limit of 2.5 expressed in millimetres per metre.
Reference	INF TSI: 4.2.4.3 (8)
N L	422022
Number	1.2.2.0.3.2
Title	Minimum radius of horizontal curve
XML Name	OP Siding Parameter ILL_MinRadHorzCurve
Definition	Radius of the smallest horizontal curve expressed in metres.
Applicable	Y/N/NYA
Can be repeated	N
Data presentation	[NNN]
General Explanations	The real value of the radius (expressed in metres) has to be presented if it is below the minimum limit of 150 m given in CR INF TSI.
References	INF TSI: 4.2.3.4
	1
Number	1.2.2.0.3.3
Title	Minimum radius of vertical curve
XML Name	OP Siding Parameter ILL_MinRadVertCurve
Definition	Radius of the smallest vertical curve expressed in metres
Applicable	Y/N/NYA
Can be repeated	N
Data presentation	Predefined CharacterString:
	[NNN+NNN]

	Explanation on data presentation:
	Here shall be presented the real values of the radius of vertical curve when at least on of the values in crest or in hollow is smaller than the minimum limit given in INF TSI.
	The first 'NNN' is a value of crest, second 'NNN' is a value of hollow, both expressed in metres,
	For the TSI compliant lines the default values of crest is 600 m, and for hollow is 900 n For TSI compliant marshalling yards default values are: crest 250 m, hollow 300 m.
References	INF TSI: 4.2.3.4
Number	1.2.2.0.4
Title	Fixed installations for servicing trains
XML Name	ITS
Can be repeated	N
Number	1.2.2.0.4.1
Title	Existence of toilet discharge
XML Name	OP Siding Parameter ITS_ToiletDischarge
Definition	Indication whether exists an installation for toilet discharge (fixed installation for servicing trains) as defined in INF TSIs.
Applicable	Y/NYA
Can be repeated	N
	Charles also the force the good fined list.
Data presentation	Single selection from the predefined list:
Data presentation	

Number	1.2.2.0.4.2
Title	Existence of external cleaning facilities
XML Name	OP Siding Parameter ITS_ExternalCleaning
Definition	Indication whether exists an installation for external cleaning facility (fixed installation for servicing trains) as defined in INF TSIs.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
References	INF TSI: 4.2.13.3.
Number	1.2.2.0.4.3
Title	Existence of water restocking
XML Name	OP Siding Parameter ITS_WaterRestocking
Definition	Indication whether exists an installation for water restocking (fixed installation for servicing trains) as defined in INF TSIs.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
References	INF TSI: 4.2.13.4.
Number	1.2.2.0.4.4
Title	Existence of refuelling
XML Name	OP Siding Parameter ITS_Refuelling
Definition	Indication whether exists an installation for refuelling (fixed installation for servicing trains) as defined in INF TSIs.
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:
·	N

Number	1.2.2.0.4.5
Title	Existence of sand restocking
XML Name	OP Siding Parameter ITS_SandRestocking
Definition	Indication whether an installation for sand restocking exists (fixed installation for servicing trains).
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
Reference	
Number	1.2.2.0.4.6
Title	Existence of electric shore supply
XML Name	OP Siding Parameter ITS_ElectricShoreSupply
Definition	Indication whether an installation for electric shore supply exists (fixed installation for servicing trains).
Applicable	Y/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:  Y N
References	INF TSI: 4.2.12.6 and 6.2.4.14
Number	
	1.2.2.0.5
Title XML Name	Tunnel
	OPSidingTunnel  Parameters of this group (from 1.2.2.0.5.1 to 1.2.2.0.5.8) are only mandatory if tunnels
Applicable	exist on the siding on the OP
Can be repeated	Υ
Number	1.2.2.0.5.1
Title	IM's Code
XML Name	OPSidingTunnelIMCode
Definition	Infrastructure Manager means any body or undertaking that is responsible in particular for establishing and maintaining railway infrastructure or a part thereof.
Can be repeated	N
Applicable	Υ
Data presentation	[AAAA]

General Explanations	The Code is a unique identifier for the Infrastructure Manager and it shall be verified on national level.  - If the IM is subject to TAF/TAP TSIs, it corresponds to the code used in TAF/TAP TSIs.  - In other cases, it corresponds to the "organisation code" assigned by the Agency for the specific needs of the RINF  Each Section of Line may concern only one IM.				
Reference	Article 3 (2) of Directive 2012/34/EU				
Validation	No verification by RINF application. Check of the link between MS and IM' Name must be done nationally.				
Number	1.2.2.0.5.2				
Title	Tunnel identification				
XML Name	OPSidingTunnelIdentification				
Definition	Unique tunnel identification or unique number within Member State				
Applicable	Y				
	In case when tunnel does not have own identification within the Member State, the IM should deliver it himself.				
Can be repeated	N				
Data presentation	CharacterString				
Comments	Here should be given the name, number, code or any other expression which is normally used for the identification of the tunnel.				
Number	1.2.2.0.5.3				
Title	EC declaration of verification for tunnel (SRT)				
XML Name	OP Siding Tunnel Parameter ITU_ECVerification				
Definition	Unique number for EC declarations following format requirements specified in the 'Document about practical arrangements for transmitting interoperability documents'				
Can be repeated	Explanation on repeatability:  (SRT) in title means that here we include only declarations concerning requirements of SRT TSI for infrastructure system on the specific track.  Parameter shall be repeated when different EC declarations were issued for different elements of infrastructure subsystem on the specific track in the tunnel.				
Applicable	Y/N/NYA Explanation on applicability:  "Y" shall be selected in case when EC declaration was issued				
Data presentation	Predefined CharacterString:				
General Explanations	[CC/RRRRRRRRRRRRR/YYYY/NNNNNN]  With the extension of scope according to Interoperability Directive 2008/57/EC, geographical scope of the INF, ENE and CCS TSIs now includes all the networks (TEN and off-TEN) with the following nominal track gauges: 1435, 1520, 1524, 1600 and 1668 mm				

Reference concerning format	'Document about practical arrangements for transmitting interoperability documents' [23]
Validation	The validation is described before this Table, in section 2.3.
Number	1.2.2.0.5.4
Title	El declaration of demonstration for tunnel (SRT)
XML Name	OP Siding Tunnel Parameter ITU_EIDemonstration
Definition	Unique number for El declarations following the same format requirements as specific in the 'Document about practical arrangements for transmitting interoperability documents'
	Y Explanation on repeatability:
Can be repeated	(SRT) in title means that here we include only declarations concerning requirements o SRT TSI for infrastructure system on the specific track.
	Parameter shall be repeated when different EI declarations were issued for different elements of infrastructure subsystem on the specific track in the tunnel. It may happe that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.
	Y/N/NYA
Applicable	Explanation on applicability:
	"Y" shall be selected in case when the demonstration was executed and EI declaration was issued
	It may happen that several EI declarations were issued – then parameter has to be repeated as many times as many declarations were issued.
General Explanations	The procedure for demonstration that existing network fits to requirements of the TS is executed on voluntary bases, so when EI declaration do not exist then the parameter is optional. If EI declaration was not issued, then field shall be left empty.
Data presentation	Predefined CharacterString:
	[CC/RRRRRRRRRRRR/YYYY/NNNNNN])
	[22] Recommendation 2014/881/EU
References	'Document about practical arrangements for transmitting interoperability documents [23]
	The validation is described before this Table, in section 2.3.

Number	1.2.2.0.5.5				
Title	Length of tunnel				
XML Name	OP Siding Tunnel Parameter ITU_Length				
Definition	Length of a tunnel in metres from entrance portal to exit portal.				
Explanations on definition	Length of a tunnel in metres from portal to portal at the level of the top of rail.				
Can be repeated	N				
Applicable Y/N/NYA					
	Y only for a tunnel with length of 100 metres or more.				
Data presentation	[NNNNN]				
Number	1.2.2.0.5.6				
Title	Existence of emergency plan				
XML Name	OP Siding Tunnel Parameter ITU_EmergencyPlan				
Definition	Indication whether emergency plan exists.				
Can be repeated	N				
Applicable	Y/ N/NYA  Explanation on applicability: Y for tunnels longer than 1 km, in accordance with section 4.4.2 of SRT TSI, the emergency plan is mandatory only for tunnel length of more than 1km.  'N'=not applicable can be selected for short tunnels of less than 1 km, as for them the fire category according SRT TSI does not exist.				
Data presentation	Single selection from the predefined list:  Y N				
General Explanations	Emergency plan has to be a document developed for each tunnel under the direction of the IM, in co-operation, where appropriate, with RUs, Rescue services and relevant authorities. It shall be consistent with the self-rescue, evacuation and rescue facilities provided.				
Reference	SRT TSI: 4.4.2				
Number	1.2.2.0.5.7				
Title	Fire category of rolling stock required				
XML Name	OP Siding Tunnel Parameter ITU_FireCatReq				
Definition	Categorisation on how a passenger train with a fire on board will continue to operate for a defined time period.				
Can be repeated	N				
Applicable	Y/N/NYA  Explanation on applicability:  'N'=not applicable shall be selected for short tunnels of less than 1 km, as for them the				
	fire category according SRT TSI does not exist.				

	Single selection from the predefined list: A B					
	none					
	Explanation on data presentation:					
Data presentation	·					
	Wherever category B is not needed, generally the category A has to be understood as					
	the default value.					
	'none' shall be selected when none of A or B fire category is applied for a specific					
	tunnel.					
_	SRT TSI: 1.1.3					
References	CR LOC&PAS TSI: 4.2.10.1					
Number	1.2.2.0.5.8					
Title	National fire category of rolling stock required					
XML Name	OP Siding Tunnel Parameter ITU_NatFireCatReq					
Definition	Categorisation on how a passenger train with a fire on board will continue to operate					
	for a defined time period - according to national rules if they exist.					
Can be repeated	N					
Applicable	Y/N/NYA					
	Explanation on applicability:					
	'N'=not applicable shall be selected when respective national rules do not exist					
	Y only for tunnels when for the parameter 1.2.2.0.5.7 the option 'none' was selected.					
	CharacterString					
Data presentation	Explanation on data presentation:					
	Data shall include both the category and brief name of the document introducing the categorisation					
	Cottegorisation					
Number	1.2.2.0.6					
Title	Contact line system					
XML Name	ECS					
Can be repeated	N					
Number						
Number	1.2.2.0.6.1					
Title	Maximum current at standstill per pantograph					

XML Name	ECS_MaxStandstillCurrent
Definition	Indication of the maximum allowable train current at standstill for DC systems expressed in amperes.
Explanation on Definition	Parameter related to current taken by the vehicle when it is not in a traction or regenerative mode, e.g. preheating, air-condition, etc.
Applicable	Y/N/NYA  Explanation on applicability: This parameter is applicable ("Y") only if "Overhead contact line (OCL)" is selected for parameter 1.1.1.2.2.1.1 and if DC system is selected in 1.1.1.2.2.1.2  It can be not applicable, at the initiative of the IM, in the following cases:  • If the siding is not electrified in DC  • Siding destined to freight traffic, whose trains have a low consumption in stationary (the maximum demand of energy is due to air conditioning systems, which is not significant in these trains).
	Siding used in access to depots or workshops.  Y
Can be repeated	
Data presentation	[NNN]
References	ENE TSI: 4.2.5 LOC&PAS TSI: 4.2.8.2.5
Number	1.2.3
Title	Rules and restrictions
XML Name	<b>OPRules</b>
Can be repeated	N
Explanations	The two following parameters:  - 1.2.3.1 /existence of rules and restrictions of a strictly local nature /RUL_LocalRulesOrRestrictions - 1.2.3.2/Documents regarding the rules or restrictions of a strictly local nature available by the IM /RUL_LocalRulesOrRestrictionsDocRefare declared at the level of operational point
Number	1.2.3.1
Title	Existence of rules and restrictions of a strictly local nature
XML Name	RUL_LocalRulesOrRestrictions
Definition	Existence of rules and restrictions of a strictly local nature
Applicable	Y/N/NYA
Can be repeated	N
Data presentation	Single selection from the predefined list:

	Y/N
	"In case of Y, the RU have to contact the IM to be informed of these conditions"
	There is a general obligation for Member States to notify existing national rules but: "Member States may decide not to notify rules and restrictions of a strictly local natur In such cases, Member States shall mention those rules and restrictions in the register of infrastructure."
General explanations	In this eventuality, this parameter allows the IM accordingly to its Member State decision to declare the existence of such rules and to provide them with the paramete 1.2.3.2
	Documents regarding the rules or restrictions of a strictly local nature available by the IM
Reference	IOD: Notification of national rules Art 14. 11:
Validation	regarding the rules or restrictions of a strictly local nature available by the IM
Number	1222
Number Title	1.2.3.2  Documents regarding the rules or restrictions of a strictly local nature available by the
Title	Documents regarding the rules or restrictions of a strictly local nature available by the IM
Title XML Name	Documents regarding the rules or restrictions of a strictly local nature available by the IM  RUL_LocalRulesOrRestrictionsDocRef  Electronic document available from the IM stored by the Agency providing additional
Title  XML Name  Definition	Documents regarding the rules or restrictions of a strictly local nature available by the IM  RUL_LocalRulesOrRestrictionsDocRef  Electronic document available from the IM stored by the Agency providing additional information
Title  XML Name  Definition  Applicable	Documents regarding the rules or restrictions of a strictly local nature available by the IM  RUL_LocalRulesOrRestrictionsDocRef  Electronic document available from the IM stored by the Agency providing additional information  Y/N/NYA
Title  XML Name  Definition  Applicable  Can be repeated	Documents regarding the rules or restrictions of a strictly local nature available by the IM  RUL_LocalRulesOrRestrictionsDocRef  Electronic document available from the IM stored by the Agency providing additional information  Y/N/NYA  Y
Title  XML Name  Definition  Applicable  Can be repeated  Data presentation  General	Documents regarding the rules or restrictions of a strictly local nature available by the IM  RUL_LocalRulesOrRestrictionsDocRef  Electronic document available from the IM stored by the Agency providing additional information  Y/N/NYA  Y  CharacterString  The document itself has to be upload by the NRE via the "reference document management" functionality. The reference of the document is provided for the

## 5.2 Lists of Borders points and of Domestic Border points

The list of border points below is still under development. Some questions are still pending as:

- How to deal with sections of line that cross the border several times between two following OPs.
- Consistency between the geographical coordinates provided by NREs

It has been developed by the Agency on the basis of information and agreement from NREs. Any change shall be justified and agreed by the relevant NREs, sent to ERA for the numbering (if needed) of the border point and published.



Making the railway system work better for society.

Table 6 : List of border points

BP NAME	Вє	etween MS	Betwee	n OPs	Latitude	Longitude
EU00001	Germany	Netherlands	Ihrhove	Nieuweschans	53.187480	7.210411
EU00002	Germany	Netherlands	Bad Bentheim	Oldenzaal	52.309093	7.040075
EU00003	Germany	Netherlands	Gronau	Enschede	52.218058	6.979838
EU00004	Germany	Netherlands	Emmerich	Zevenaar Oost	51.901252	6.137680
EU00005	Germany	Netherlands	Kaldenkirchen	Venlo	51.340989	6.192566
EU00006	Germany	Netherlands	Herzogenrath	Landgraaf	50.880347	6.084949
EU00007	Germany	Belgium	Aachen West	Montzen	50.753375	6.021325
				Abzw.		
EU00008	Germany	Belgium	Aachen Hbf/Aachen Süd	Hammerbrücke, Hergenrath	50.718479	6.041337
EU00009	Germany	Luxembourg	Igel	Wasserbillig	49.7138000	6.5066000
2000003	Germany	Luxembourg	igei	wasserbillig	45.7136000	0.300000
EU00010	Germany	France	Perl	Apach	49.4690000	6.3696000
EU00011	Germany	France	Hemmersdorf	Bouzonville	49.3360000	6.5911000
EU00012	Germany	France	Saarbrücken	Forbach	49.2140000	6.9442000

BP NAME	Bet	tween MS	Between	n OPs	Latitude	Longitude
EU00013	Germany	France	Hanweiler	Sarreguemines	49.1119000	7.0573000
EU00014	Germany	France	Winden	Wissembourg	49.0271000	7.9788000
EU00015	Germany	France	Wörth	Lauterbourg	48.9752000	8.1954000
EU00016	Germany	France	Kehl	Strasbourg	48.5756000	7.8010000
EU00017	Germany	France	Neuenburg	Bantzenheim	47.8143000	7.5464000
EU00018	Germany	Switzerland	Weil-am-Rhein - RB	Basel Bad Bhf RB		
EU00019	Germany	Switzerland	Grenzach	Basel Bad Bhf PB		
EU00020	Germany	Switzerland	Lörrach	Riehen		
EU00021	Germany	Switzerland	Waldshut (DB)	Koblenz (AG)	47.61010	8.23502
EU00022	Germany	Switzerland	Lotstetten [1]	Rafz		
EU00023	Germany	Switzerland	Neuhausen-am-Rheinfall	Jestetten		
EU00024	Germany	Switzerland	Erzingen (Baden)	Trasadingen		
EU00025	Germany	Switzerland	Thayngen	Singen		
EU00026	Germany	Switzerland	Konstanz	Kreuzlingen	47.65460	9.17769
EU00027	Germany	Switzerland	Konstanz	Kreuzlingen Hafen	47.65350	9.17890
EU00028	Germany	Austria	Lindau-Reutin	Lochau-Hörbranz	47.5344	9.7360
EU00029	Germany	Austria	Pfronten-Steinach	Vils	47.5604	10.5905
EU00030	Germany	Austria	Griesen	Ehrwald	47.4697	10.9302
EU00031	Germany	Austria	Mittenwald	Scharnitz	47.3978	11.2675

BP NAME	Bet	ween MS	Betwe	en OPs	Latitude	Longitude
EU00032	Germany	Austria	Kiefersfelden	Kufstein	47.6012	12.1774
EU00033	Germany	Austria	Freilassing	Salzburg	47.8319	12.9890
EU00034	Germany	Austria	Simbach	Braunau	48.2620	13.0384
EU00035	Germany	Austria	Passau	Wernstein	48.5633	13.4517
EU00036	Germany [3]	Czech Republic	Bayerisch Eisenstein	Železná Ruda st.hr.	49.12162	13.20916
EU00037	Germany	Czech Republic	Furth im Wald	Česká Kubice st.hr.	49.33266	12.87956
EU00038	Germany	Czech Republic	Schirnding	Cheb st.hr.	50.08700	12.25349
EU00039	Germany	Czech Republic	Bad Brambach [4]	Vojtanov st.hr.	50.21365	12.32714
EU00040	Germany	Czech Republic	Zwotental	Kraslice st.hr.	50.35392	12.46645
EU00041	Germany	Czech Republic	Johanngeorgenstadt	Potůčky st.hr.	50.43227	12.73535
EU00042	Germany	Czech Republic	Cranzahl	Vejprty st.hr.	50.50482	13.03204
EU00043	Germany	Czech Republic	Bad Schandau	Děčín st.hr.	50.85942	14.22218
				Dolní Poustevna		
EU00044	Germany	Czech Republic	Sebnitz	st.hr.	50.98116	14.27914
EU00045	Germany	Czech Republic	Ebersbach (Sachs)	Rumburk st.hr.	50.99774	14.57976
EU00046	Germany	Czech Republic	Großschönau	Varnsdorf st.n.st.hr.	50.90259	14.64450
EU00047	Germany	Czech Republic	Seifhennersdorf	Varnsdorf st.hr.	50.92107	14.60403
EU00048	Germany	Poland	Zittau	Porajów	50.89360	14.83100
EU00049	Germany	Poland	Görlitz	Zgorzelec	51.14410	14.99260
EU00050	Germany	Poland	Horka	Węgliniec	51.28740	15.03260

BP NAME	Between MS		Between	ı OPs	Latitude	Longitude
EU00051	Germany	Poland	Forst (Lausitz)	Tuplice	51.73800	14.66170
EU00052	Germany	Poland	Guben	Gubin	51.97410	14.70740
EU00053	Germany	Poland	Frankfurt (Oder)	Rzepin	52.32260	14.57860
EU00054	Germany	Poland	Küstrin-Kietz	Kostrzyn	52.58240	14.63060
EU00055	Germany	Poland	Tantow	Szczecin Gumieńce	53.32720	14.41650
EU00056	Germany	Poland	Löcknitz	Szczecin Gumieńce	53.41740	14.37530
EU00057	Germany	Poland	Hirschfelde	Hirschfelde Grenze	50.94970	14.89570
EU00058	Germany	Poland	Hagenwerder	Krzewina Zgorzelecka	51.04800	14.95790
EU00059	Denmark	Germany	Padborg	Abzw. Flensburg Friedensweg	54,815211	9,362975
EU00059	Germany	Denmark	Abzw. Flensburg Friedensweg	Padborg	54.81690	9.36413
EU00060	Austria	Czech Republic	Summerau	Horní Dvořiště st.hr.	48.5930684	14.4337144
EU00061	Austria	Czech Republic	Gmünd N.Ö.	České Velenice st.hr.	48.7644450	14.9683315
EU00062	Austria	Czech Republic	Retz	Znojmo st.hr.	48.7736541	16.0146800
EU00063	Austria	Czech Republic	Bernhardsthal	Břeclav st.hr.	48.7125441	16.8683839,
EU00064	Czech Republic	Poland	Frýdlant v Č.st.hr.	Zawidów	51,0122497	15,0379603
EU00065	Czech Republic	Poland	Harrachov st.hr.	Szklarska Poręba Górna	50,7783593	15,3963301

BP NAME	Between MS		Between OPs		Latitude	Longitude
EU00066	Czech Republic	Poland	Královec st.hr.	Kamienna Góra	50,6862142	15,9847073
EU00067	Czech Republic	Poland	Meziměstí st.hr.	Mieroszów	50,6363285	16,2203686
EU00068	<del>Czech</del> <del>Republic</del>	Poland	Otovice st.hr.	<del>Ścinawka Średnia</del>	<del>50.5508</del> 4	<del>16.41019</del>
EU00069	Czech Republic	Poland	Lichkov st.hr.	Międzylesie	50,0985290	16,6910866
EU00070	Czech Republic	Poland	Mikulovice st.hr.	Głuchołazy	50,3073883	17,3533552
EU00071	Czech Republic	Poland	Jindřichov ve Slezsku st.hr.	Głuchołazy	50,2747098	17,5047550
EU00072	Czech Republic	Poland	Bohumín-Vrbice st.hr.	Chałupki	49,9163930	18,3224690
EU00073	Czech Republic	Poland	Bohumín st.hr.	Chałupki	49,9164400	18,3225230
EU00074	Czech Republic	Poland	Petrovice u Karviné.st.hr.	Zebrzydowice	49,8844722	18,5701565
EU00075	Czech Republic	Poland	Český Těšín st. hr.	Cieszyn	49,7521247	18,6187543
EU00076	Czech Republic	Slovakia	Horní Lideč st.hr.	Lúky pod Makytou št. hr.	49.17981	18.12982

BP NAME	Bet	ween MS	Betweer	n OPs	Latitude	Longitude
EU00077	Czech Republic	Slovakia	Vlársky průsmyk st.hr.	Horné Srnie št. hr.	49.03166	18.05331
EU00078	Czech Republic	Slovakia	Velká nad Veličkou st.hr.	Vrbovce št. hr.	48.82603	17.51682
EU00079	Czech Republic	Slovakia	Sudoměřice nad Moravou st.hr.	Skalica na Slovensku št. hr.	48.86982	17.24065
EU00080	Czech Republic	Slovakia	Hodonín st.hr.	Holíč nad Moravou št. hr.	48.83772	17.12643
EU00081	Czech Republic	Slovakia	Lanžhot st.hr.	Kúty št. hr.	48.71112	17.00042
EU00082	Czech Republic	Slovakia	Mosty u Jablunkova st.hr.	Čadca št. hr.	49.49439	18.76439
EU00083	Belgium	France	Esplechin	Wannehain	3.2784511	50.5720246
EU00084	Belgium	France	Mouscron	Tourcoing	3.1961674	50.7220695
EU00085	Belgium	France	Blandain	Baisieux	3.2636772	50.6174356
EU00086	Belgium	France	Quévy	Aulnoye	3.9083749	50.3288424
EU00087	Belgium	France	Erquelines	Jeumont	4.1091807	50.3027051
EU00088	Belgium	France	Aubange	Longwy	5.8128487	49.5474178
EU00089	Belgium	Netherlands	Antwerpen- Noorderkempen	Breda (grens)	51.485665	4.734452
EU00090	Belgium	Netherlands	Essen	Roosendaal	51.469130	4.448921
EU00091	Belgium	Netherlands	Neerpelt	Budel	51.247263	5.555298

BP NAME	Ве	tween MS	Betwee	en OPs	Latitude	Longitude
EU00092	Belgium	Netherlands	Lanaken	Maastricht	50.880098	5.666877
EU00093	Belgium	Netherlands	Visé	Eijsden / Maastricht Randwyck	50.758825	5.703065
EU00094	Belgium	Netherlands	Zelzate	Sas van Gent	51.210866	3.799830
EU00095	Belgium	Luxemburg	Gouvy	Troisvierges	50,1730	5,9653
EU00096	Belgium	Luxemburg	Autelbas	Kleinbettingen	49,6437	5,9042
EU00097	Belgium	Luxembourg	Aubange	Pétange	49,5518	5,8250
EU00098	Belgium	Luxemburg	Athus	Pétange	49,5518	5,8106
EU00099	France	Luxembourg	Mont-St-Martin	Pétange	49,5433	5,8106
EU00100	France	Luxembourg	Audun-le Tiche	Esch-sur-Alzette	49,4859	5,9688
EU00101	<del>France</del>	Luxembourg	Volmerange-les-Mines	Dudelange-Usines		
EU00102	France	Luxembourg	Thionville	Bettembourg	49,4720532	6,1078419
EU00103	Austria	Hungary	Baumgarten	Sopron	47.7136868847223	16.5413599522395
EU00104	Austria	Hungary	Loipersbach- Schattendorf	Sopron	47.6989654931559	16.4940757080922
EU00105	Austria	Hungary	Nickelsdorf	Hegyeshalom	47.9384856496069	17.0954082578180
EU00106	Austria	Hungary	Pamhagen	Fertöszéplak-Fertöd	47.6882186710393	16.8839494446881
EU00107	Austria	Hungary	Deutschkreutz	Harka	47.6267713611272	16.6248597012975
EU00108	Austria	Hungary	Jennersdorf	Szentgotthárd	46.9504875132700	16.2461343496966
EU00109	Austria	Slovakia	Kittsee	Bratislava-Petržalka št. hr.	48.102834	17.084221

<sup>| 120</sup> Rue Marc Lefrancq | BP 20392 | FR-59307 Valenciennes Cedex

BP NAME	Bet	ween MS	Betwee	n OPs	Latitude	Longitude
EU00110	Austria	Slovakia	Marchegg	Devínska Nová Ves št. hr.	48.241229	16.946641
EU00111	Austria	Slovenia	Bleiburg	Prevalje	46.5667	14.8399
EU00112	Austria	Slovenia	Rosenbach	Jesenice	46.4815	14.0199
EU00113	Austria	Slovenia	Spielfeld-Straß	Šentilj	46.6920	15.6404
EU00114	Austria	Italy	Sillian	Prato alla Drava	46,74025	12,37123
EU00115	Austria	Italy	Steinach in Tirol	Brennero	47.0067	11.5074
EU00116	Austria	Italy	Thörl-Maglern	Tarvisio Boscoverde	46,53482	13,64054
EU00117	Austria	Lichtenstein	Tosters	Nendeln	47.2188547	9.5697512
EU00118	Austria	Switzerland	Lustenau	St. Margrethen	47.447697	9.657876
EU00119	France	Spain	Hendaya	Irún/Irún Cambiador	43.35065	-1.78589
EU00120	France	Spain	Cerbère	PortBou/Portbou Cambiador	42.43494	3.15970
EU00121	France	Spain	RFF - TP FERRO	Límite Adif-TPFerro	42.45679	2.86245
EU00122	France	Spain	La Tour de Carol-Envigt	Puigcerdà	42.44716	1.91449
EU00123	Portugal	Spain	Valença do Minho	Tui	42,03630	-8,64676
EU00124	Portugal	Spain	Vilar Formoso	Fuente de Oñoro	40,60570	-6,82600
EU00125	Portugal	Spain	Elvas	Badajoz	38,92024	-7,03015
				Ventimiglia / Ventimiglia Parco		
EU00126	France	Italy	Menton-Garavan	Roja	43,78537	7,52957

BP NAME	Betw	veen MS	Betweer	n OPs	Latitude	Longitude
EU00127	France	Italy	Modane	Bardonecchia	45,13757	6,68342
EU00128	France	Italy	Vievola	Limone Piemonte	44,15268	7,56981
EU00129	France	Italy	Breil-sur-Roja	Olivetta - S. Michele	43,89028	7,53092
EU00130	France	Switzerland	Pougny-Chancy	La Plaine	46,177452	5,990589
EU00131	France	Switzerland	Annemasse	Chènes-Bourg	46,193923	6,212824
			Les Longevilles-			
EU00132	France	Switzerland	Rochejean	Vallorbe	46,712404	6.370559
EU00133	France	Switzerland	Pontarlier	Les Verrières	46,89917	6,45899
EU00134	France	Switzerland	Morteau	Le Locle-Col-des- Roches	47,050231	6,716949
EU00135	France	Switzerland	Delle	Boncourt	47,502777	7,012894
EU00136	France	Switzerland	Leymen	Flüh		
EU00137	Switzerland	France	Rodersdorf [7]	Leymen		
EU00138	France	Switzerland	Saint-Louis	Basel St. Johann	47,577565	7,567592
EU00139	France	Switzerland	St.Gingolph France	St.Gingolph	46,393185	6,804059
EU00140	Switzerland	France	Le Châtelard-Frontière [8]	Vallorcine	46,051295	6,947907
EU00141	Denmark	Sweden	Peberholm	Lernacken	55,605923	12,738071
EU00142	Lithuania	Poland	Mockava	Trakiszki	54,26487	23,22999
EU00143	Latvia	Russia	Zilupe	Sebeža	56,38863	28,17265
EU00144	Latvia	Russia	Kārsava	Pitalova	56,85329	27,72848

BP NAME	Betv	ween MS	Betwee	n OPs	Latitude	Longitude
EU00145	Latvia	Lithuania	Meitene	Joniškis	56,36361	23,65876
EU00146	Latvia	Lithuania	Eglaine	Rokiškis	55,94445	26,04576
EU00147	Latvia	Lithuania	Kurcums	Turmantas	55,70351	26,46777
EU00148	Latvia	Lithuania	Reņģe	Mažeikiai	56,37945	22,62039
EU00149	Italy	Slovenia	Gorizia C.le	Vrtojba	45,92315	13,62690
EU00150	Italy	Slovenia	Villa Opicina	Stanjel	45,72324	13,81084
EU00151	Italy	Slovenia	Villa Opicina	Sezana	45,68757	13,83348
EU00152	Italy	Switzerland	Pino Tronzano	Ranzo S. Abbondio	46,10370	8,756673
EU00153	Italy	Switzerland	Iselle	Brig	46,27094	8,09526
EU00154	Italy	Switzerland	Como St. Giovanni	Chiasso	45,83074	9,03423
EU00155	Italy	Switzerland	Cucciago (via Bivio Rosales)	Chiasso	45,83074	9,03423
EU00156	Italy	Switzerland	Gaggiolo [9]	Stabio		
EU00157	Switzerland	Liechtenstein - Austria	Buchs SG	Schaan-Vaduz	47.16453	9.49064
EU00158	Poland	Slovakia	Zwardoń	Skalité št. hr.	49.50388	18.97193
EU00159	Poland	Slovakia	Muszyna	Plaveč št. hr.	49.29605	20.92397
EU00160	Poland	Slovakia	Łupków	Medzilaborce št. hr.	49.25086	22.03846
EU00161	Slovakia	Ukraine	Maťovce ŠRT št. hr.	Uzhhorod	48.56241	22.16063
EU00162	Slovakia	Ukraine	Čierna nad Tisou št. hr.	Chop	48.43276	22.13762

BP NAME	Ве	etween MS	Betwe	en OPs	Latitude	Longitude
EU00163	Slovakia	Ukraine	Čierna nad Tisou ŠRT št. hr.	Chop	48.43276	22.13762
EU00164	Hungary	Slovakia	Sátoraljaújhely	Slovenské Nové Mesto št. hr.	48,38981	21,66948
EU00165	Hungary	Slovakia	Hidasnémeti	Čaňa št. hr.	48,52877	21,26256
EU00166	Hungary	Slovakia	Bánréve	Lenartovce št. hr.	48,30180	20,33859
EU00167	Hungary	Slovakia	Somoskőújfalu	Fiľakovo št. hr.	48,16836	19,82116
EU00168	Hungary	Slovakia	Nógrádszakál	Malé Straciny št. hr.	48,16365	19,51302
EU00169	Hungary	Slovakia	Ipolytarnóc	Lučenec št. hr.	48,24626	19,63834
EU00170	Hungary	Slovakia	Szob	Štúrovo št. hr.	47,82362	18,85269
EU00171	Hungary	Slovakia	Komárom	Komárno št. hr.	47,75657	18,08790
EU00172	Hungary	Slovakia	Rajka	Rusovce št. hr.	48,01373	17,17945
EU00173	Poland	Ukraine	Medyka	Mościska	49,8051	22,9615
EU00174	Poland	Ukraine	Werchrata	Rawa Ruska	50,2408	23,5254
EU00175	Poland	Ukraine	Hrebenne	Rawa Ruska	50,2949	23,6076
EU00176	Poland	Ukraine	Hrubieszów Miasto	Izov		
EU00177	Poland	Ukraine	Hrubieszów LHS	Izov		
EU00178	Poland	Ukraine	Dorohusk	Jahodyn	51,1799	23,8127
EU00179	Poland	Belarus	Terespol	Brześć	52,0912	23,6221
EU00180	Poland	Belarus	Czeremcha	Wysokie	52,4645	23,3523

BP NAME	Be	tween MS	Betwee	n OPs	Latitude	Longitude
EU00181	Poland	Belarus	Siemianówka	Świsłocz	52,939	23,9166
EU00182	Poland	Belarus	Kuźnica Białostocka	Grodno	53,5444	23,6516
EU00183	Poland	Russia	Skandawa	Železnodorožnyj	54,3335	21,3032
EU00184	Poland	Russia	Braniewo	Mamonowo	54,4366	19,8735
EU00185	Hungary	Slovenia	Őriszentpéter	Hodoš	46,81974	16,34172
EU00186	Greece	Turkey	Pythion	UzunKopru	41.36209	26.63149
EU00187	Bulgaria	Greece	Svilengrad	Dikea	41.74770	26.16666
EU00188	Bulgaria	Greece	Kulata	Promachon	41.37950	23.36433
EU00189	Greece	FYROM	Idomeni	Gevgelija	41.12826	22.51719
EU00190	Greece	FYROM	Neos Kafkasos	Kremenitsa	40.90731	21.46449
EU00191	Czech Republic	Poland	Hrádek nad Nisou st.hr.	Porajów	50.86917	14.83999
EU00192	Hungary	Ukraine	Eperjeske	Соловка	48,37405	22,25738
EU00193	Hungary	Ukraine	Záhony	Чоп	48,41547	22,18605
EU00194	Hungary	Romania	Biharkeresztes	Oradea	47,124529	21,792944
EU00195	Hungary	Romania	Kötegyán	Salonta	46,760782	21,487366
EU00196	Hungary	Romania	Lőkösháza	Curtici	46,409703	21,252697
EU00197	Hungary	Romania	Nyírábrány	Valea lui Mihai	47,525013	22,031618
EU00198	Hungary	Romania	Ágerdőmajor	Berveni	47,769806	22,435682
EU00199	Hungary	Serbia	Kelebia	Суботица / Subotica	46,16952	19,63273

BP NAME	Be	tween MS	Betwee	en OPs	Latitude	Longitude
EU00200	Hungary	Serbia	Röszke	Хоргош / Horgoš	46,23042	20,00099
EU00201	Croatia	Hungary	Botovo	Gyékényes	46,24703	16,94493
EU00202	Croatia	Hungary	Beli Manastir	Magyarboly	45,79834	18,55795
EU00203	Croatia	Hungary	Kotoriba	Murakeresztur	46,35918	16,85202
EU00204	Latvia	Belarus	Indra	Polocka	55,84455	27,63814
EU00205	Latvia	Estonia	Lugaži	Valga	57,768847	26,023853
EU00206	Bulgaria	Romania	Ruse razpredelitelna	Giurgiu Nord	43,887193	26,007716
EU00207	Bulgaria	Romania	Ruse	Giurgiu Nord	43,887193	26,007716
EU00208	Bulgaria	Romania	Vidin tovarna	Golenti	44,003012	22,948364
EU00209	Bulgaria	Romania	Vidin patnicheska	Golenti	44,003012	22,948364
EU00210	Bulgaria	Romania	Kardam	Negru Voda	43,785906	28,151004
EU00211	Bulgaria	Serbia	Kalotina Zapad	Dimitrovgrad	42,99824	22,83536
EU00212	Bulgaria	Turkey	Svilengrad	Kapikule	41,72183	26,34738
EU00213	Croatia	Slovenia	Mursko Središće	Lendava	46,51546	16,44405
EU00214	Croatia	Slovenia	Kumrovec	Imeno	46,11559	15,60657
EU00215	Croatia	Slovenia	Kamanje	Metlika	45,64556	15,34289
EU00216	Croatia	Slovenia	Savski Marof	Dobova	45,89068	15,68015
EU00217	Croatia	Slovenia	Šapjane	Ilirska Bistrica	45,50518	14,24422
EU00218	Croatia	Slovenia	Čakovec	Središće ob Dravi	46,38822	16,30414
EU00219	Croatia	Slovenia	Buzet	Podgorje	45,45398	13,95010

BP NAME	Bet	ween MS	Betwee	en OPs	Latitude	Longitude
EU00220	Croatia	Slovenia	Đurmanec	Rogatec	46,21231	15,77691
EU00221	Croatia	Bosnia and Herzegovina	Slavonski Šamac	Bosanski Šamac	45,06100	18,49626
EU00222	Croatia	Bosnia and Herzegovina	Metković	Čapljina	43,05886	17,65746
EU00223	Croatia	Bosnia and Herzegovina	Volinja	Dobrljin	45,18939	16,48235
EU00224	Croatia	Bosnia and Herzegovina	Ličko Dugo Polje razdjelna točka	Martin Brod	44,45715	16,13599
EU00225	Croatia	Bosnia and Herzegovina	Drenovci	Brčko	44,86828	18,83090
EU00226	Croatia	Serbia	Tovarnik	Šid	45,14734	19,16442
EU00227	Croatia	Serbia	Erdut	Bogojevo	45,52332	19,08632
EU00228	United Kingdom	France	Folkestone	Calais Frethun	51.01718	01.50182
EU00229	United Kingdom	Ireland	Newry	Dundalk	54,0690	-06,3787
EU00230	Germany	Czech Republic	Selb-Plossberg	As	50.212494	12.173480
EU00231	Estonia	Russia	Narva	Ivangorod	59.367069	28.205963
EU00232	Estonia	Russia	Koidula	Petšorõ	57.837036	27.607675
EU00233	Latvia	Estonia	Valka	Valga	57.769117	26.023542
EU00234	Norway	Sweden	Kornsjø stasjon	Mon	58.93476	11.66987

BP NAME	Betv	veen MS	Betweer	OPs	Latitude	Longitude
EU00235	Norway	Sweden	Magnor stasjon	Charlottenberg	59.93187	12.24341
EU00236	Norway	Sweden	Kopperå stasjon	Storlien	63.33700	12.06050
EU00237	Norway	Sweden	Bjørnfjell stasjon	Vassijaure	68.43004	18.10572
EU00238	Switzerland	France	Chènes-Bougeries	Annemasse	46,19604	6,23041
EU00239	Sweden	Finland	Haparanda	Tornio	65,827855	24,150731

- [1] Line of SBB on German territory
- [2] Line of SBB on German territory
- [3] Coordinates are being reviewed due to differences detected
- [4] The section of line crosses the border several times although there is no station
- [5] Reopening expected for 2017 (CEVA)
- [6], [7], [8] Track gauge 1000 millimetres
- [9] Line under construction

The list of Domestic Border points is not yet developed. On the request of NREs, it was agreed that they will manage the domestic border points at national level in a first step. When these lists of national domestic border points will be enough stabilized, and before January 2021, they will be published in the table below.

Table 7: List of domestic border points

Domestic BP NAME	Between IMS	Between OPs	Latitude	Longitude

## 5.3 Principles defining the references of documents uploaded by IMs

waiting proposals from stake holders



Making the railway system work better for society.

# 5.4 List of IM's codes (the code will be managed via the new list of "organisations codes" according the EVR regulation)

## 5.5 List of amendments of the guide (2013 RINF Decision): table 8

	3: list of amendment to the previous version	
Version 1.2.1 - 19/01/2017		
Paragraph/Parameter/Table	Description	according
all	Update	New format of the ERA documents
all	Cleaning of all the parts of the text let highlighted, strikeout in the previous version a good understanding of the modifications,	
P 19 : Border point	Deletion of "or IMs" in the definition	
P 19 : Domestic border point	The definition is: located <u>exactly</u> in the point where networks of different IMs are connected in a Member State	
Parameter 1.1.1.3.7.11 / SOL Track Parameter / CTD_MinAxleLoad	Modification of the format: [NN.N]  No impact on the current work of NREs	Request of LV NRE
Parameter 1.2.0.0.0.4 / Type of Operational Point	Type 9: Deletion of "or IMs" in the definition	
Parameter 1.1.1.3.3.1 / GSM-R version / SOL Track Parameter <b>CRG_Version</b>	Deletion of the last sentence of the comment	
Parameter 1.1.1.3.2.2 / ETCS baseline / SOL Track Parameter <b>CPE_Baseline</b>	Deletion of the last sentence of the comment	
Parameter 1.1.1.3.5.2 / Need for more than one train protection, control and warning system required on-board / SOL Track Parameter CPO_MultipleRequired	Deletion of the link with ETCS level (applicability )	
Parameter 1.2.0.0.0.2 / Unique OP ID / UniqueOPID	Deletion of the last line of the Explanations	
Table 6	Update of the definition of some Borders points	
Table 7	Deletion of the previous list of amendments	
Table /	New list	

Paragraph/Parameter/Table	Description	according
	The modifications highlighted (underlined) in blue in the previous version of the guide are now included.	
	The modifications previously highlighted in green are also cleaned up.	
Table 1 and Table 5	Some modifications were introduced by the end of April 2016 in the CUI (test) and will be introduced in the CUI in production by mid May 2016. They are highlighted in grey. The way to use the parameter is advised for the meantime.	
2.3.6 "the Location point"	paragraph completed at its end	Change request 50 (CR50)
2.6 Relations between parameters	explanation of the use of the "Set" attribute improved	
Parameters 1.1.0.0.0.3/ <b>SOLOPStart</b> and 1.1.0.0.0.4/ <b>SOLOPEnd</b>	Reference to parameter 1.2.0.0.0.2 for the definition of "uniqueOPID"	
Parameters 1.1.0.0.0.3 and 1.1.0.0.0.4	SOLOPStart and SOLOPEnd – change format to [AA+AAAAAAAAA] which is the new format of parameter 1.2.0.0.0.2.	Consequence of CR 38
Parameter 1.1.1.1.2.2 / IPP_LineCat	The parameter will be N (Not applicable) when tables 2 or 3 of 4.2.1(7) of INF TSI are not usable on the UK network for Great Britain according the specific case 7.7.17.1(2).	CR 72
Parameter 1.1.1.1.2.5	IPP_MaxSpeed – change range of values from [10, 500] to [0, 500]	CR 34
Parameter 1.1.1.1.3.3/ ILL_NatGauge	The previous footnote was deleted. The description of the upper and lower parts of the gauge will be by introducing new parameters	
Parameter 1.1.1.1.3.6 / ILL_GradProfile	ILL_GradProfile – change format to [±NN.N] ([±NNNN.NNN], as a consequence of the modification of the format of Parameter 1.2.0.0.0.6 .	CR 63
Parameter 1.1.1.1.7.3	SOL Track Parameter  IHS_AccelerationLevelCrossing: Modification of the definition, update of the explanations on data presentation, statement to have a contact with the IM	CR 46
Parameter 1.1.1.1.8.3	SOLTunnelStart – change format to [Latitude (NN.NNNN) + Longitude(±NN.NNNN) + km(±NNNN.NNN)] , as a consequence of the modification of the format of Parameter 1.2.0.0.0.6	CR 64

Parameter 1.1.1.1.8.4	SOLTunnelEnd – change format to [Latitude (NN.NNNN) + Longitude(±NN.NNNN) + km(±NNNN.NNN)] , as a consequence of the modification of the format of Parameter 1.2.0.0.0.6 .	CR 65
Parameter 1.1.1.2.3.1 / EPA_TSIHeads	Modification of the list of "Accepted TSI compliant pantograph heads". This modification will be introduced in the CUI as soon as possible.	
Parameter 1.1.1.3.2.1 / CPE_Level	Update of the explanation due to the modification of the applicability condition of Parameter 1.1.1.3.5.1. This modification will be introduced in the CUI as soon as possible.	
Parameter 1.1.1.3.5.1 / CPO_Installed	Modification of the applicability condition  This modification (highlighted in grey) was introduced by the end of April 2016 in the CUI (test) and will be introduced in the CUI in production by mid May 2016. Update of the explanation	1.1.1.2.3.1 Accepted TSI compliant pantograph heads
Parameter 1.1.1.3.6.1 / CRS_Installed	Modification of the applicability condition  This modification (highlighted in grey) was introduced by the end of April 2016 in the CUI (test) and will be introduced in the CUI in production by mid May 2016.	F
Parameter 1.1.1.3.8.1 / CTS_SwitchProtectControlWarn	Update of the explanation on the applicability	
Parameter 1.1.1.3.8.2 / CTS_SwitchRadioSystem	Update of the applicability condition ( wrong reference to parameter 1.1.1.3.7.1)	
Parameter 1.2.0.0.0.2	UniqueOPID – change format to [AA+AAAAAAAAA] where the first AA is the country code and AAAAAAAAA is the up to 10 alpha-numeric characters OP code	CR 38
Parameter 1.2.0.0.0.4 / <b>OPType</b>	new type of Operational Point: the domestic border point  This modification(highlighted in grey) was decided by the end of April 2016 (test) and will be introduced in the CUI in test and in production as soon as possible	
Parameter 1.2.0.0.0.6 / OPRailwayLocation	OPRailwayLocati—n - change of format to [±NNNN.NNN]	CR 33
Parameter 1.2.0.0.0.6 / OPRailwayLocation	Explanation updated to describe the ability to be repeated	CR 76
Parameter 1.2.1.0.2.2 / IPP_LineCat	The parameter will be N (Not applicable) when tables 2 or 3 of 4.2.1(7) of INF TSI are not usable on the UK network for Great Britain according the specific case 7.7.17.1(2).	CR 72

Parameter 1.2.1.0.3.3 / ILL_NatGauge	The previous footnote was deleted. The description of the upper and lower parts of the gauge will be by introducing new parameters	
Parameter 1.2.1.0.6.7 / IPL_AreaBoardingAid	Explanation was updated on the mandatory status of the parameter	
Parameter 1.2.2.0.3.1 / ILL_Gradient	ILL_Gradient – change format to [NN.N]	CR 61
Table 6	EU00228 and EU00229 were added	

Version 1.3 - ??/09/2016: list of modifications to version 1.2			
1.1.1.1.3.4 Standard combined transport profile number for swap bodies 1.1.1.1.3.5 Standard combined transport profile number for semi-trailers	NRE SW: Request to add C/P 371 and 422 RFI: request to add C/P 25, 30 and 384		
1.1.1.2.2.4 Permission for regenerative braking	NSA SE wants to add the option "allowed under conditions" (or with similar signification) for the value of parameter 1.1.1.2.2.4.		
1.1.1.1.3.1, 1.1.1.1.3.2 and 1.1.1.1.3.3 for SOL and 1.2.1.0.3.1,1.2.1.0.3.2 and 1.2.1.0.3.3 for OP	Removal of the dependencies to allow to select combinations between interoperability gauge, multinational gauge and national gauges.		
1.1.1.3.3.1 CRG_Version GSM-R version.	Need to include Baseline 1 as a value		
Table border points	Could you please insert it in the Table 6: List of border points in AG.  EU00115 Austria Italy Steinach in Tirol Brennero 47.0067 11.5074  EU00117 between Austria and Lichtenstein.  Tosters Nendeln 47.21875 9.56960  Mail France/Luxemburg 11/07/2017  EU00099 Mont-St-Martin et Pétange  Latitude 49,5433; Longitude 5,8106  EU00100 Audun-le-Tiche et Esch-sur-Alzette  Latitude 49,4859; Longitude 5,9688  EU00102 Thionville et Bettembourg  Latitude 49,4721; Longitude 6,1079		

	EU100101 to be deleted	
NRE AT  How to represent a fixed intsallation linked to a running track in an OP	As already said in last RINF meeting in March, I would like to discuss with you the following issue in order to find a best/common solution for such a case in RINF:	
	Few of Austrian OPs have some of their fixed installations for servicing trains (for example the water restocking) not on the siding but on running track.	
	The Application Guide does not specify such a case. But we have it and some of Austrian railway undertakings consider important to map this services in RINF, because of future application of RINF and its public accessibility.	
	In order to put this fixed installations for servicing trains in RINF, we elaborate two scenarios. In both scenarios we get the valid RINF XML-file with correct syntax, but they don't reflect reality.	
	Scenario 1:  We map such running track (with the fixed installations for servicing trains) as running track as well as siding in its RINF operational point.  Disadvantage: the siding is virtual one	
	Scenario 2:  The operational point, let call it "Vienna real", is divided in to two OPs: (real) OP "Vienna" and (virtual) OP "Vienna train technical services" of OPType Train technical services. The running track with the fixed installations for servicing trains is mapped, in this scenario, in both part-OPs of real operational point:  • as (real) running track, in (real) part-OP	
	"Vienna" and  • as (virtual) siding in (virtual) part-OP "Vienna train technical services"	

1.1.1.3.2.2 ETCS Baseline	Need to include "Baseline 3 Maintenance release 1" and "Baseline 3 release 2".	
	Also, the reference has to be changed to the corresponding table in the new CCS TSI (Regulation 2016/919):	
	CCS TSI: Tables A2.1, A2.2 and A2.3 of Annex A of Regulation (EU) 2016/919	
1.1.1.3.3.2 Advised number of active GSM-R mobiles (EDOR) on board for ETCS	If ETCS B3 R2 is selected, then automatically , this value is 2	
location point	The Polish NRE asks us to allow negative values for the railway location of a location point	
Format use of decimals		

## List of admendments of Draft Guide Version 1.4: table 9

	Table 9: list of admendment to Draft Guide Version 1.4	
26/03/2019		
Paragraph/Parameter/Table Date	Description	according
	In the review process of the AG, I have some comments:	
	<ul> <li>Parameter 1.1.1.1.2.4.2 – is the naming "Compliance of structures with the (HSLM)" correct? NO (the naming I had was "Compliance of structures with the High Speed Load Model (HSLM) dynamic load model") corrected in the guide</li> <li>Parameter 1.1.1.1.6.4 - Document with the conditions for the use of eddy current brakes there are 2 points in the index corrected</li> <li>Parameter 1.1.1.1.6.5 - Document with the conditions for the use of magnetic brakes</li> <li>there are 2 point in the index corrected</li> </ul>	
	Can be repeated - N? Y instead of N - Parameter 1.1.1.1.7.4 – the correct name of the parameter is "Existence of trackside (HABD)" or "Existence of trackside hot axle box detector (HABD)"?  Modified: Title: Existence of trackside hot axle box detector (HABD) definition: Existence of trackside HABD	
	<ul> <li>Parameter 1.1.1.2.2.4 – Permission for regenerative braking - there are 2 values in "Can be repeated" section corrected: N</li> <li>Parameter 1.1.1.2.4.3 – Distance between signboard and phase separation</li> </ul>	
	ending - in my validation process I have "Applicable 'Y' when in parameter 1.1.1.2.4.2.1 selected option is 'Y'.",  but I don't find it in the AG. Do I keep this constraint or not?  The correct condition is: "Applicable 'Y' when in parameter 1.1.1.2.4.1.1 selected option is 'Y'.",	
	- Parameter 1.1.1.3.2.9 - no list of values - Parameter 1.1.1.3.3.9 - no list of values - Parameter 1.1.1.3.3.10 - no list of values	
	Yes the Agency will "set up and manage in a technical document the set of checks to demonstrate the technical compatibility of an on-board subsystem with the trackside subsystem". The lists of possible answers is not currently known	
	<ul> <li>Parameter 1.1.1.3.6.1 - Other radio systems installed (Radio Legacy Systems) - the data presentation list should be:</li> <li>UIC Radio Chapter 1-4</li> </ul>	
	<ul> <li>UIC Radio Chapter 1-4+6</li> <li>UIC Radio Chapter 1- 4 + 6 (Irish system)</li> <li>UIC Radio Chapter 1-4+6+7</li> <li>BR 1845</li> </ul>	
	<ul> <li>BR 1609</li> <li>FS ETACS and GSM</li> <li>UIC Radio Chapter 1-4 (TTT radio system installed at Cascais line)</li> <li>TTT radio system CP_N</li> </ul>	
	<ul> <li>PKP radio system</li> <li>VR trainr</li> <li>TRS — The Czech Railways radio system</li> <li>LDZ radio system</li> </ul>	
	CH — Greek Railways radio system     UIC Radio Chapter Bulgaria     The Estonian radio system	
	<ul> <li>The Lithuanian radio system</li> <li>Corrected thanks         <ul> <li>Parameter 1.1.1.3.7.1.2 - Type of track circuits to which specific checks are needed</li> <li>data presentation list values needed</li> </ul> </li> </ul>	

	The list is not still defined	
Parameters1.1.1.3.2.1 to 1.1.1.3.2.10	<ul> <li>We are not sure what a restrictions meant in "1.1.1.3.2.6 Existence of operating restrictions or conditions" would look like. Can you clarify this by providing an example?  This is considered in the CCS TSI Chapter 6.4, and such deviations should be described using by the template provided by the Agency and that will be included in the CCS TSI application guide. (Website link). Examples are provided at the end of the document. If more details are needed Hans Bierlien can provide.  • According to our ETCS experts "1.1.3.2.8 Train integrity confirmation from onboard necessary for line access" should only be necessary for ETCS level 3, according to the Application guide it is only applicable for ETCS level 1. On the other hand there might me use-cases where it is useful to allow timed intervals, eg. at night no tic is necessary, but during the day it is.  Agree. It should only by requested for Level 3  • According to our ETCS experts "1.1.1.3.2.9 ETCS system compatibility" should be applicable for all ETCS levels and not only for level 1  Agree. It should be for all levels  • The same applies for "1.1.1.3.2.10 ETCS M_version" this should be applicable for all ETCS levels instead for only level 1  Agree. It should be for all levels</li> </ul>	
29/03/2019	This may be better as 1.1.1.3.7.11.1 CTD_ MinAxleLoadByVehicleCat / Minimum permitted axle load per category of Vehicle instead of 1.1.1.3.7.11.1 CTD_MinAxleLoadVehicleCat / Minimum permitted axle load per category of Vehicle  1.1.1.1.7.9 IHS_HABDDirection/Direction of measurement of trackside HABD becomes  1.1.1.1.7.9 IHS_HABDDirection/Direction of measurement of trackside HABD	
29/03/2019	Something is unclear to me. On the AG, the parameter 1.1.1.1.6.4 "Document with the conditions for the use of eddy current brakes" has the XML name "CTD_ECBDocRef". Isn't "ILR_ECBDocRef" the correct value for it, as they belong to "ILR – Track resistance to applied loads" group of parameters?  The same thing for 1.1.1.1.6.5.	
29/03/2019	3.2.4 NREs and Agency responsabilities Communication between RINF application and NREs  Each NRE will be responsible for the following (until 1st January 2021): Prepare the dataset (XML file) comprising the full RINF information of the Member State including validation through data quality checks.  - Submit the RINF dataset to the central database at ERA.  - Follow-up with ERA relating to any issues on failing validation or upload.  - Define the list of domestic border points, keep it updated and forward it to the Agency  - Manage the data on domestic border points  ERA will be responsible for the following:  - Provide relevant documentation relating to maintenance and evolution of RINF.  - Manage the list of MS border points  - Manage reference list of domestic border points to be used in the validation process	
02/04/2019	The label HHH was corrected  The character string was deleted in the the data format for the provision of parameters 1.1.1.1.4.3, 1.1.1.13.1.2 and 1.1.1.7.8	
02/04/2019	The applicaibility condition of parameters to be deleted was updated to allow to go providing them or not during the transitional period	

02/04/2019	The value "nono" was added as a possible answer in the list of parameter 1.1.13.5.3	
02/04/2019	The applicability status of parameters that are new and needed for route compatibility check was adapted in order to allow not to provide the xml line until thes parameters become mandatory to be provided in January 2020	
04/04/2019	Review of the sope, and purpose of the RINF (2.2.1 to 2.2.3)	
16/04/2019	the list of border points: Deletion of "EU00068", update of EU00073	
26/04/2019	Update of principles according which Ops are defined (link with PLCs)	
	users: NRE , IMs, Public users, RRU	
04/06/2019	Description of the process according which a NRE/IM will use the new Document management functionality	
14/06/2019	Cleaning of references to HS or CR TSIs  Cleaning/udate of the table 2	
21/06/2019	Modification of coordinates of BP EU00028 to EU00035 on request AT NRE (mail 21/05/2019), EU00028 and EU00035 stay "open".  Modification of coordinates from EU00060 to EU00063 (with Czech Republic, of EU00103 to EU00108 (with Hungaria), of EU00109 to EU00113 (with Slovakia)	
21/06/2019	Modifications on parameter's description are identified by a comment	
24/06/2019	Modification of BP EU00111 to EU00113 on request of AT NRE (mail 24/06/2019)	

## 5.7 List of amendments of to Guide Version 1.4.3: table 10

	Table 10: list of amendments to Draft Guide Version 1.4.3	
July 2019		
Main modification to the	e previous version 1.4.3 are highlighted in grey	
Paragraph/Parameter/Table	Description	according
All guide	Cleaning, modifying RINF Decision by RINF regulation and update of corresponding paragraphs if relevant	
2.5 Parameter groups hierarchy, P32	The xml label is "AreaOfImpl" instead of "Areaofuse" for parameter1.1.1.3.3.3.3 /Area of implementation of GPRS	
1.1.1.1.2.4.1 / National classification for load capability / SOL Track Parameter IPP_NCLoadCap	Explanations were added	
1.1.1.1.2.4.3 /Railway location of structures requiring specific checks/ SOL Track Parameter IPP_StructureCheckLoc	Explanations were added	
1.1.1.1.7.10 / Steady red lights required/SOL Track Parameter/ IHS_RedLights	Explanations (extracts of the regulation (EU) 2019/773) were added	
1.1.1.1.7.11 / Belonging to a quieter route / SOL Track Parameter IHS_QuietRoute	Explanations (extracts of Article 5b of Regulation (EU) 1304/2014 ) were added	
1.1.1.2.2.1.2.1 / Energy supply system TSI compliant /SOL Track Parameter ECS_TSIVoltFreq	Explanations were added	
1.1.1.4.1 /Existence of rules and restrictions of a strictly local nature /SOL Track Parameter RUL_LocalRulesOrRestrictions and 1.1.1.4.2 / Documents regarding the rules or restrictions of a strictly local nature available by the IM	Explanations were added	
1.1.1.3.7.17 / Maximum sanding output Maximum amount of sand / SOL Track Parameter TD_MaxSandOutput	Deletion of the applicability condition related to parameter 1.1.1.3.7.18	

1		
1.2.1.0.3.4 / Gauging / SOL Track Parameter /LL_Gauging	IRL1 was twice in the list of possible answers, one value was deleted	
1.2.2.0.6.1 / Maximum current at standstill per pantograph / ECS_MaxStandstillCurrent	Applicability conditions are updated	
1.2.3.1 /Existence of rules and restrictions of a strictly local nature / RUL_LocalRulesOrRestrictio ns	Explanations were added	
2.6 Relations between Parameters	P 35, 1 <sup>st</sup> paragraph was updated	
5.1 List of parameters: table 5 ( p 48)	Introduction of a disclaimer for NRES regarding the limits of the backward compatibility of the validation process:  Most of NREs have already provided values for parameter 1.1.1.3.7.19 / TSI Compliance of rules on sand characteristics / SOL Track Parameter CTD_TSISandCharacteristics. This parameter is only applicable if the nominal track gauge corresponds to 1520 mm. CCS TSI: 3.1.4.2 of Annex A,	
	index 77 that is the document that describes the TSI conditions of compliance indicates an open point for 1435 mm gauge. Any value indicating TSI compliance is wrong. The applicability of the parameter for other values than "1520" should be "not applicable".	
3.3 Main principles	The article was adapted to the July 2019 situation	
5.2 Lists of Borders points and of Domestic Border points	Introduction of Table 7: List of domestic border points that stays currently empty, but for further RINF developments	
- 1.1.1.3.2.9 (ETCS system compatibility) :	Explanations added:	
1.1.1.3.3.9 (Radio system compatibility voice)	The different values to be defined inside each network need to be submitted by each IM with the support of their suppliers to the Agency. (CCS TSI 6.1.2.4 and 6.1.2.5 – Regulation (EU) 2019/776).	
- 1.1.1.3.3.10 (Radio system compatibility data)  Where to find the list of	The Agency will then compile them in a Technical Document, give them an identifier, and after, these identifiers will be available for selection in RINF and ERA TV. Therefore, these values will not be available until the IM has communicated the checks to the Agency.	
values? When will it be available?	There is information about the ESC/RSC and the submission to the Agency in the ERA webpage (Link). More information will be included in the CCS TSI application guide.	
	The deadline set in the CCS TSI for IMs to complete this process is 16 January 2020.	
Parameters :	Correction of an error:	
SOLTunnelStart, SOLTunnelEnd, OPGeographicLocation	[Latitude (NN.NNNNNNN) + Longitude(±NN.NNNNNNN) instead of [Latitude (NN.NNNNNNN) + Longitude(±NN.NNNN) + km(±NNNN.NNNN)]	
Parameter 1.2.0.0.0.2 / Unique OP ID / UniqueOPID	In order to ensure the continuity of the network, the validation process of the file imported by NRES will check that the Unique OP ID belongs to the table 6 –list of border points when the type of the OP is declared as "border point".	

## 5.8 List of amendments of to Guide Version 1.5 (tables 11 - 17)

	Table 11: list of amendments to Draft Guide Version 1.5	
After September 2019		
Main modification to the	e previous version 1.4.3 are highlighted in grey	
Paragraph/Parameter/Table	Description	according
1.1.1.6.4	The XML name is SOL Track Parameter ILR_ECBDocRef.	
1.1.1.6.5	The XML name is SOL Track Parameter ILR_MBDocRef.	
3.4 RINF deliverables	Title of the paragraph and versions of documents updated	

#### Table 12: list of amendments to Draft Guide Version 1.5.2.1.

After February 2020

Main modification to the previous version 1.5 are highlighted in red and track change.

General overhaul of the Application Guide

Paragraph/Parameter/Table	Description	according
1.1.1.1.6.4	The XML name is SOL Track Parameter ILR_ECBDocRef.	
1.1.1.6.5	The XML name is SOL Track Parameter ILR_MBDocRef.	
3.4 RINF deliverables	Title of the paragraph and versions of documents updated	

#### Table 13: list of amendments to Draft Guide Version 1.5.2.2.

After March 2020

Main modification to the previous version 1.5.2.1 are highlighted in track change

Paragraph/Parameter/Table	Description	according
Taragraphy arametery rable	Description	according
1.1.1.3.1.1	New values added upon a request of France	
1.2.1.0.3.4	New values added upon a request of France	
1.1.1.3.2.9	New values added and repeatability is allowed again	
1.1.1.3.3.9	New values added and repeatability is allowed again	
1.1.1.3.3.10	New values added and repeatability is allowed again	
1.1.1.3.3.8	Explanation extended	
1.2.2.0.6.1	Added: "Not applicable" firstly when the siding is not electrified in DC and reference corrected	
1.1.1.3.4	Applicability has been changed	
1.1.1.3.5	Applicability has been changed	
1.1.1.2.2.3	Reference corrected	

Border Location points have been updated. Deleted parameters have been removed. LookUP values have been added.

#### Table 14: list of amendments to Draft Guide Version 1.5.2.3.

After June 2020

Paragraph/Parameter/Table	Description	according
1.1.1.3.1.1	Applicability aligned with the RINF Regulation  New values added	

1.1.1.7.5.	Definition changed	
1.1.1.3.2.9	New values added	
1.1.1.3.3.7	Applicability changed	
1.1.1.3.3.9	Values removed	
1.1.1.3.3.10	Values removed	
1.1.1.3.4.1	Title, Definition and Reference modified	
1.1.1.3.6.1	New values added	
1.1.1.3.7.1.1	Definition changed	
1.1.1.3.7.1.2	XML name and Definition changed	
1.1.1.3.7.1.3	Definition changed	
1.1.1.3.7.2.1	Applicability changed	
1.1.1.3.7.11.1	Data presentation changed	
1.2.1.0.3.4	New values added and Reference modified	
1.2.1.0.3.5	References deleted	
1.2.2.0.3.1	Applicability changed	
1.2.2.0.3.2	Applicability changed	
1.2.2.0.3.3	Applicability changed	

Border Location points have been updated.

### Table 15: list of amendments to Draft Guide Version 1.5.2.4

#### After October 2020

Paragraph/Parameter/Table	Description	according
1.1.1.3.2.1	Explanation of data presentation: clarification added	
1.1.1.3.2.9	New values added (BE, DK, IT, PL)	
1.1.1.3.3.2	Data presentation: updated to include the Value "0" (introduced in May 2019) as allowed values	
1.1.1.3.3.7	Explainations: sentence added	
1.1.1.3.3.9	New values added (AT, BE, ES, PL)	
1.1.1.3.3.10	New values added (AT, ES)	
1.1.1.3.6.1	New value added	
1.1.1.2.3	Data presentation: updated to include existing values	
1.2.1.0.2.3	Data presentation: updated to include existing values	
1.1.1.3.4	Data presentation: updated to include existing values	
1.1.1.3.5	Data presentation: updated to include existing values	
1.1.1.3.4.1	Title, Definition, Reference changed	

1.1.1.3.7.1.1	Definition changed
1.1.1.3.7.1.2	XML Name, Definition changed
1.1.1.3.7.1.3	Definition changed
1.1.1.3.3.1	XML Name, Definition changed  Editorial error corrected on the cells of the table
Page 32	Editorial error corrected
	Border Location points have been updated.

## Table 16: list of amendments to Draft Guide Version 1.5.2.5

#### After March 2021

Main modification to the previous version 1.5.2.4

Paragraph/Parameter/Table	Description	according
1.1.1.3.4	New value added	
1.1.1.3.5	New value added	
1.1.1.3.2.9	New value added	
1.1.1.3.7.1.2	Data presentation: updated to include existing values and change in one value	
1.1.1.1.3.1.1	New values added (ES)	

#### Table 17: list of amendments to Draft Guide Version 1.5.2.6

#### After June 2021

Paragraph/Parameter/Table	Description	according
1.1.1.3.2.9	Values renamed (FR, IT)  New values added (FR, IT, PL, CZ, RO, DE)	
1.1.1.3.3.9	New values added (ES, RO)	
1.1.1.3.3.10	New values added (ES, PL)	
1.2.1.0.3.4	XML Name corrected  New values added (ES)	
1.1.1.3.3.3	Value "Network selection automatic" reinserted	CER-EIM request
Page 2, Table 1	Dates added  Versions of the AG added  Row deleted	
Page 190	Border Location point EU00009 has been updated.	

## 5.9 List of amendments of to Guide Version 1.6

#### Table 18: list of amendments to Draft Guide Version 1.6.0

After October 2021

Paragraph/Parameter/Table	Description	according
Table 9, page 208	Editorial corrections (typos)	BG
Page 32	Editorial correction (typo to XML name of the parameter 1.1.1.3.7.1.2)	
Page 187 & 194	Border Location points EU00007, EU00008 and EU00102 updated.	DE, BE, LU
1.1.1.7.8	Editorial correction in "General explanations" (phrase deleted)	
1.1.1.3.1.1	The row "Mandatory" deleted (typo)	BG
1.1.1.3.3.9	Value deleted (PL), values added (DE, LU)	
1.1.1.1.2.1.2	References: Inaccessible link deleted; additional reference added	
1.1.1.3.7.1.3	Explanation on repeatability: missing phrase added	
1.1.1.3.7.1.4	Explanation on repeatability: missing phrase added	
1.1.1.2.4.1.2	Repeatability granted; Data presentation modified	CER-EIM
1.1.1.2.4.2.2	Repeatability granted; Data presentation modified	CER-EIM
1.1.1.3.6.1	Values deleted (SK)	
1.1.1.3.2.9	Value renamed, values added (IT, NO)	
1.1.1.3.3.10	Values added and renamed (ES)	
1.1.1.3.7.1.2	Values added (LU)	LU
1.1.1.4	XML name added (typo correction)	BG
1.2.3	XML name added (typo correction)	BG